


DESCRIPTION AND OPERATION

CRANKCASE VENTILATION SYSTEM DESCRIPTION

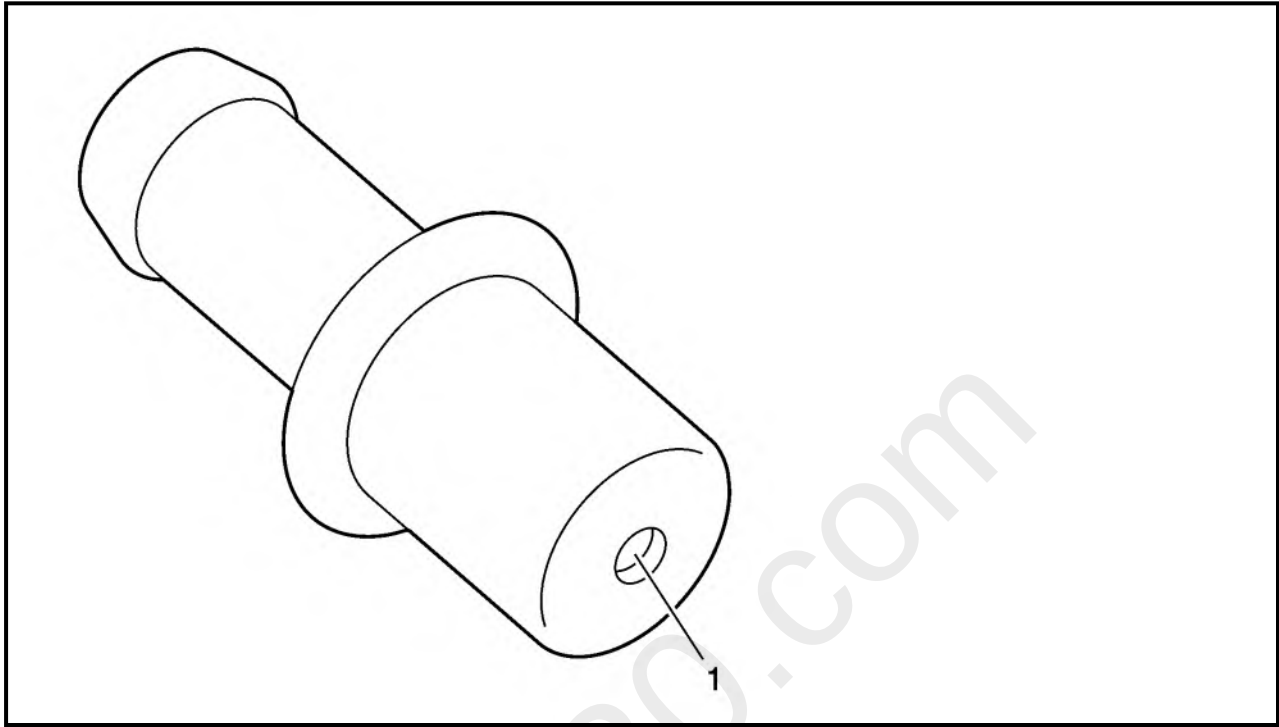

A crankcase ventilation system is used to consume crankcase vapors created during the combustion process instead of venting them to the atmosphere.

Fresh air is supplied through a filter to the crankcase, the crankcase mixes the fresh air with the blow-by gases and then passed through a positive crankcase ventilation (PCV) orificed tube into the intake manifold.

The PCV orificed tube restricts the flow rate of the blow-by gases using an orifice (1) located at the end of the tube. If abnormal operating conditions arise, the system is designed to allow excessive amounts of blow-by gases to back flow through the crankcase vent tube into the throttle body in order to be consumed by normal combustion.

DRIVE BELT SYSTEM DESCRIPTION

The drive belt system consists of the following components:

- The drive belt
- The drive belt tensioner
- The drive belt idler pulley
- The crankshaft balancer pulley
- The accessory drive component mounting brackets
- The accessory drive components
 - The power steering pump, if belt driven
 - The generator
 - The A/C compressor, if equipped
 - The engine cooling fan, if belt driven
 - The water pump, if belt driven

- The vacuum pump, if equipped
- The air compressor, if equipped

The drive belt system may use 1 belt or 2 belts. The drive belt is thin so that it can bend backwards and has several ribs to match the grooves in the pulleys. The drive belts are made of different types of rubbers, chloroprene or EPDM, and have different layers or plys containing either fiber cloth or cords for reinforcement.

Both sides of the drive belt may be used to drive the different accessory drive components. When the back side of the drive belt is used to drive a pulley, the pulley is smooth.

The drive belt is pulled by the crankshaft balancer pulley across the accessory drive component pulleys. The spring loaded drive belt tensioner keeps constant tension on the drive belt to prevent the drive belt from slipping. The drive belt tensioner arm will move when loads are applied to the drive belt by the accessory drive components and the crankshaft.

The drive belt system may have an idler pulley, which is used to add wrap to the adjacent pulleys. Some systems use an idler pulley in place of an accessory drive component when the vehicle is not equipped with the accessory.

ENGINE COMPONENT DESCRIPTION

The High Feature V6 (VIN Code Identifier "W" for both cars and trucks) RPO LFY is a 3.6 Liter VVT (Variable Valve Timing) engine with direct injection. The direct injection system places the high pressure injectors in the cylinder heads. This engine incorporates 2 intake and 2 exhaust valves per cylinder, and uses a dual overhead cam design with individual intake and exhaust camshafts. A camshaft position actuator is mounted on each camshaft. The cylinders are arranged in 2 banks of 3 with a 60 degree included angle. The right bank of cylinders are number 1-3-5 and the left bank of cylinders are 2-4-6, viewed from the flywheel end of the engine. The engine firing order is 1-2-3-4-5-6.

Crankcase

The cylinder block is constructed of aluminum alloy by precision sand-casting with cast in place iron cylinder liners. Each main bearing cap incorporates 6 bolts bolting the cap into the engine block. Along with 2 outer and 2 inner bolts, 2 side bolts are used in the deep skirt block. To prevent aeration, oil return from the valvetrain and cylinder heads is channeled away from the rotating and reciprocating components through oil drain back passages incorporated into the cylinder heads and engine block. Pressure-actuated piston oil cooling jets are mounted between opposing cylinders. A knock sensor is located on the each side of the exterior of the engine block. The crankshaft position sensor is located on the right side of the exterior of the engine block.

Crankshaft

The crankshaft is a hardened, forged steel design with 4 main bearings. Crankshaft thrust is controlled by the upper portion of number 3 main bearing. The crankshaft position reluctor wheel is pressed onto the rear of the crankshaft in front of the rear main journal. A micro encapsulated adhesive is used on the reluctor wheel to aid retention. The crankshaft is internally balanced, and has an integral oil pump drive machined into the nose in front of the front main journal.

Connecting Rods and Pistons

The connecting rods are steel and have full floating piston pins. The piston pins are a slip fit in the bronze bushed connecting rod. Round wire retainers are used to retain the piston pin into the piston. The cast aluminum pistons incorporate a polymer-coated skirt to reduce friction. The piston uses two low tension compression rings and one multi-piece oil control ring. The top of the piston contains a shaped portion for the direct injection system to aid in fuel-air charge mixture and even combustion.

Camshaft Drive System

The camshaft drive system consists of one primary timing drive chain driven by the crankshaft sprocket. The primary timing drive chain drives two intermediate drive shaft sprockets. Each oil-pressure-fed intermediate drive shaft sprocket drives separate secondary timing drive chains. Each secondary timing drive chain drives the respective cylinder head's intake and exhaust camshaft position actuators.

The primary timing drive chain uses two stationary timing drive chain guides and a hydraulically-actuated tensioner with built-in shoe. The tensioner minimizes timing drive chain noise and provides accurate valve action by keeping slack out of the timing drive chains and continuously adjusting for timing drive chain wear. The tensioner incorporates a plunger that adjusts out with wear allowing only a minimal amount of backlash. The tensioner is equipped with an oiling jet to spray oil onto the timing components during engine operation. The secondary timing drive chains use a stationary timing drive chain guide and movable timing drive chain shoe. The secondary timing drive chain shoe is under tension from a hydraulically-actuated tensioner. All tensioners are sealed to the head or block using a rubber coated steel gasket. The gasket traps an adequate oil reserve to ensure quiet start-up.

Camshaft Position Actuator System

The engine incorporates a camshaft position actuator for each intake and exhaust camshaft. Camshaft phasing changes valve timing as engine operating conditions vary. Dual camshaft phasing allows the further optimization of performance, fuel economy and emissions without compromising overall engine response and driveability. Variable valve timing also contributes to a reduction in exhaust emissions. It optimizes exhaust and inlet valve overlap and eliminates the need for an exhaust gas recirculation (EGR) system.

The camshaft position actuator is a hydraulic vane-type actuator that changes the camshaft lobe timing relative to the camshaft drive sprocket. Engine oil is directed by a camshaft position actuator oil control valve to the appropriate passages in the camshaft position actuator. Oil acting on the vane in the camshaft position actuator rotates the camshaft relative to the sprocket. At idle, both camshafts are at the default or "home" position. At this position, the exhaust camshaft is fully advanced and the intake is fully retarded to minimize valve overlap for smooth idle. An internal lock pin locks the inner rotor to the outer camshaft position actuator housing at idle and maintains this position during start-up conditions. Under other engine operating conditions, the camshaft position actuator is controlled by the engine control module (ECM) to deliver optimal intake and exhaust valve timing for performance, driveability and fuel economy. The camshaft position actuator incorporates an integral trigger wheel, which is sensed by the camshaft position sensor mounted in the front cover, to accurately determine the position of each camshaft. The exhaust camshaft position actuator has a different internal configuration than the intake camshaft position actuator since the exhaust camshaft position actuator phases in the opposite direction relative to the inlet camshaft position actuator.

The camshaft position actuator oil control valve (OCV) directs oil from the oil feed in the head to the appropriate camshaft position actuator oil passages. There is one OCV for each camshaft position actuator. The OCV is sealed and mounted to the front cover. The ported end of the OCV is inserted into the cylinder head with a sliding fit. A filter screen protects each OCV oil port from any contamination in the oil supply.

The camshaft front journal has several drilled oil holes to allow camshaft position actuator control oil to transfer from the cylinder head to the camshaft position actuator. The center camshaft bolt hole is counterbored to allow oil to flow around the camshaft bolt and to the camshaft position actuator. Oil in this oil passage is used to move the camshaft position actuator to the default or home position.

Radially outward from the center of the journal is a set of 4 drilled camshaft position actuator oil holes. Oil in this group of oil holes is used to move the camshaft from the default position to a specific set position as determined by the ECM. Seal rings are used at the front and rear of the front camshaft journal to prevent oil leakage from the camshaft position actuator hydraulic system. The seal is made from a plastic compound that resists wear and has a diagonal end gap to enhance sealing. The camshaft position actuator is mounted to the front end of the camshaft and the timing notch in the nose of the camshaft aligns with the dowel pin in the camshaft position actuator to ensure proper cam timing and camshaft position actuator oil hole alignment.

Cylinder Heads

The cylinder heads are cast aluminum with powdered metal valve seat inserts and valve guides. The cylinder heads also feature integrated exhaust manifolds; the exhaust manifolds are incorporated into the head casting. Two intake valves and two exhaust valves are actuated by roller finger followers pivoting on a stationary hydraulic lash adjuster (SHLA). The intake valves in the LFY engine are slightly larger than those in the LFW engine to allow the additional air necessary for a 3.6L displacement engine.

Separate exhaust and intake camshafts are supported by bearings machined into the cylinder head. The front camshaft bearing cap is used as a thrust control surface for each camshaft. Each spark plug is shielded by a tube that is pressed into the cylinder head. Each spark plug ignition coil is also mounted through the spark plug tube. The engine coolant temperature (ECT) sensor is threaded into the cylinder head. With direct injection, the high pressure injectors are located in machined bores below the intake ports. A stainless steel, high pressure fuel rail is attached to the intake side of the head.

Induction System

The intake manifold assembly is used to deliver a dry-air charge to the combustion chamber. Fuel is introduced directly to the cylinder during the intake stroke. As the piston approaches top-dead center, the air-fuel mixture is ignited by the spark plug. An electronically controlled throttle (ETC), through the ECM, coordinates the input from the driver with various control components.

Right and Left Bank Designation

Right hand (RH) and left hand (LH) designation through the engine mechanical section are viewed from the rear, non-front-cover side, of the engine or from inside the vehicle. These banks are also referred to as Bank 1 (RH) and Bank 2 (LH).

LUBRICATION DESCRIPTION

A structural diecast aluminum oil pan incorporates an oil suction tube and a windage tray. The oil suction tube is bolted into the oil pan and seals to the bottom of the block with O-ring gasket. The windage tray is bolted to the upper portion of the oil pan and reduces friction losses at high speed.

A crankshaft driven gerotor oil pump with internal pressure-relief valve is mounted to the front of the engine block and pulls oil from the oil suction tube through the lower passage in the engine block. The oil pump then directs the flow of pressurized oil back through the upper passage in the block to the left side of the engine block where the oil filter adapter is mounted.

An oil filter adapter is mounted with a gasket to the left side of the engine block.

RWD Applications : The oil filter adapter incorporates a top-access, cartridge style oil filter. The filter is accessed through a screw on cap with an O-ring gasket. The oil filter adapter cap has a built-in oil bypass valve. The oil filter adapter housing incorporates a drain back control valve and a threaded oil pressure sending unit. Oil flows through the lower passage in the oil filter adapter up to and through the oil filter cartridge. Filtered oil travels back through the upper passage of the oil filter adapter and back into the engine block.

FWD Applications : An oil filter adapter is mounted with a gasket to the left side of the engine block. The oil filter adapter incorporates a bottom-access, spin-on oil filter. The oil filter adapter housing incorporates a threaded oil pressure sending unit. Oil flows through the lower passage in the oil filter adapter to and through the oil filter. Filtered oil travels back through the upper passage of the oil filter adapter and back into the engine block.

Oil is directed up and across the engine block front through several drilled passages. These front passages feed oil to each cylinder head, oil to the passage for the main bearings and piston oil jets, oil to the right and left secondary idler sprockets, and oil to the primary timing drive chain tensioner.

Each cylinder head passage directs oil into the cylinder head where it is directed to oiling circuits for the stationary hydraulic lifter assemblies (SHLAs) and the camshaft bearing journals. Oil is also directed through 2 passages each with a spring-loaded check-ball valve to the 2 chambers where the camshaft position actuator oil control solenoid valves are mounted. Each chamber contains a camshaft position actuator oil control solenoid valve with built-in oil filter screen. One camshaft position actuator oil control solenoid valve is used to control the exhaust camshaft position actuator and 1 camshaft position actuator oil control solenoid valve is used to control the intake camshaft position actuator. The engine control module (ECM) electrically controls each camshaft position actuator oil control solenoid valve. When energized by the ECM the camshaft position actuator oil control solenoid valve directs oil to pass up through the cylinder head front camshaft bearing cap. Oil passes through the camshaft bearing cap passage into oil holes drilled into the side of the front camshaft journal and onto the front of the camshaft mounting surface. Oil passes through to matching passages in the camshaft position actuator. Oil is directed by the camshaft position actuator oil control solenoid valve to the appropriate passage in

the system to pressurize oil on the vanes on the inside of the of the camshaft position actuator. Oil acting on the vanes rotates the camshaft mounted to the inner camshaft position actuator rotor relative to the sprocket mounted to the outer camshaft position actuator housing. An internal lock pin locks the inner rotor to the outer camshaft position actuator housing at idle and maintains the camshaft position actuator in the home or default position during start-up conditions. Oil pressure directed by the camshaft position actuator oil control solenoid valve unlocks the pin and allows the camshaft position actuator to function. An additional passage in the cylinder head also directs oil to the secondary timing drive chain tensioner mounted to each cylinder head.

The oil passage that supplies oil to the main bearings also supplies oil to pressure-actuated piston-cooling oil jets. Each oil jet is mounted between opposing cylinder bores and directs oil to the 2 bores to provide extra cooling and control piston temperatures.

Oil is directed from the front passages to the front of the block where the right and left secondary idler sprockets and the primary timing drive chain tensioner are mounted. Each camshaft timing drive chain tensioner relies on a gasket in order to maintain an oil reserve after the engine is turned OFF. All camshaft timing drive chain tensioners incorporate a small oil jet to supply an oil spray onto the camshaft timing drive chain components.

Oil returns to the oil pan sump either through the camshaft timing drive chain area or through the cast oil drain back passages on the outboard walls of the cylinder heads and engine block.

CLEANLINESS AND CARE

An automobile engine is a combination of many of the following surfaces:

- Machined
- Honed
- Polished
- Lapped

The tolerances of these surfaces are measured in the ten-thousandths of an inch. When you service any internal engine part, cleanliness and care are important. Apply a liberal coating of engine oil to the friction areas during assembly in order to protect and lubricate the surfaces on initial operation. Throughout this section, practice proper cleaning and protection procedures to the machined surfaces and to the friction areas.

CAUTION: Engine damage may result if an abrasive paper, pad, or motorized wire brush is used to clean any engine gasket surfaces.

Whenever you remove the valve train components, keep the components in order. Follow this procedure in order to install the components in the same locations and with the same mating surfaces as when removed.

WARNING: Refer to [Battery Disconnect Warning](#) .

Disconnect the negative battery cables before you perform any major work on the engine.

SEPARATING PARTS

In addition to the room temperature vulcanizing (RTV) sealant's sealing capabilities, the RTV sealants may form an adhesive bond between the components. This may make the components difficult to remove or to separate. Pry points have been provided in the components that utilize RTV as the sealing system. Pry points are positioned so they can be used without damaging other vital engine components.

USE OF ROOM TEMPERATURE VULCANIZING (RTV) AND ANAEROBIC SEALANT

Cleaning Mating Part Surfaces for RTV Joints

RTV sealant depends greatly on adhesion to the mating parts in order to form and maintain a robust sealed joint. As with any adhesion system, proper surface preparation of the bonded parts is extremely important to ensure good adhesion over the life of the product.

CAUTION: When cleaning the sealing surfaces of engine components, **DO NOT** use bristle discs, abrasive pads, wire wheels or surface conditioning discs. These types of devices should not be used because they produce a very fine grit that is abrasive and known to cause internal engine damage. The bristle discs and pads are embedded with abrasive material and wear down as they clean, continually exposing fresh abrasive to the surface of the component.

Abrasive pads, wire wheels and bristle discs can remove enough metal to affect the engine front cover, cylinder head, engine block, oil pan rail, and intake manifold runner surface flatness, which can then result in engine coolant leaks, engine oil leaks and air leaks. It takes about 15 seconds to remove 0.203 mm (0.008 in) of metal with an abrasive pad.

Abrasive pads, wire wheels and bristle discs used with high speed grinders produce airborne debris that can travel throughout the shop contaminating other work being performed outside of the immediate work area.

When cleaning engine gasket sealing surfaces and/or cleaning parts from an engine that are to be reused, surface conditioning discs, typically constructed of woven fiber or molded bristles that contain abrasives, such as a high amount of aluminum oxide, should NOT be used. The use of such surface conditioning discs dislodges aluminum oxide from the disk and metal component particles, which can lead to premature engine bearing failure. The presence of aluminum oxide in engine oil has been shown to cause premature engine bearing failure. In some cases, this failure occurs in as little as 1, 600 km (1, 000 mi) or less after the repair has been made.

Surface conditioning discs may grind the component material and embed it into the disc. This can result when more aggressive grinding of the gasket surface takes place.

General Motors strongly recommends using a plastic razor blade, plastic gasket scraper, a wood scraper or a non-metallic scraper to remove all sealer/gasket material on the surface of engine components that are to be reused. Do not use any other method or technique to remove the sealant or the gasket material from a part.

- Do not gouge or scratch any engine sealing surface during the cleaning process.
- It is not necessary to remove every speck of the old sealer.

To remove the old RTV sealant from the sealing surface, spray GM Low VOC Cleaner or an equivalent, on the mating surfaces and allow it to soak to loosen the old gasket material. Use care to avoid getting GM Low VOC Cleaner in any area other than the mating surface to be cleaned.

Use a plastic razor blade, that mounts in a scraper device or a hand held plastic razor blade, to remove old RTV sealant from a sealing surface. Use a new blade for each corresponding engine component surface. Hold the blade as parallel to the flat surface as possible.

To properly clean the sealing surfaces prior to reassembly, spray GM Low VOC Cleaner on a folded lint free shop cloth. Wipe the mating surfaces on the engine and front cover and rotate the shop cloth until there are no more visible signs of contamination on the cloth.

After the final cleaning of the parts, allow up to 5 minutes for the components to dry before applying new RTV sealant.

NOTE: After the final cleaning with GM Low VOC Cleaner and before reassembly, **DO NOT** touch the cleaned surfaces with your hand. Oils from your skin **WILL CONTAMINATE** the surface and prevent proper bonding of the new RTV sealant.

Typical Applications

This procedure is intended for use in the following operations:

- Building of engines in a manual low volume build process where the use of assembly lubricants and other typical conditions exist which may contaminate the component sealing surfaces in an RTV joint.

- Cleaning of surfaces contaminated with oil or other substance during the assembly operation as a special case event.

In the typical situation, both the part being assembled, and the assembly to which it is to be sealed will be cleaned. An example is an oil pan assembled to a block/front cover/rear cover assembly using an RTV seal applied to the pan or the block. Both the pan and the block assembly should be cleaned prior to RTV application.

Any loose gaskets that are part of the RTV joint should not be cleaned unless it is known that they have been contaminated during the build process. Examples of loose gaskets are intake side and end seals which contact RTV used to seal a T-joint.

Assemblies supplied to GM with gaskets in place should not be cleaned unless they are known to be contaminated during the build process. Examples are rocker/cam covers with press in place gaskets using RTV at corners or T-joints.

Materials Needed

Use clean dry lint free cloths to wipe surface with approved solvent based cleaner. Examples are:

- GM Good Wrench Service Low VOC Brake Parts Cleaner
- AC Delco Non-Chlorinated Brake Parts Cleaner
- Loctite ODC - Free Cleaner & Degreaser

Procedure:

1. Identify the surfaces to which the RTV will come into contact in the assembled joint.
2. Using an approved solvent based cleaner, thoroughly soak an appropriate portion of a clean, dry cloth. Immediately wipe the surfaces with the cloth to remove any residue of oil, soap, etc.
3. Repeat step 2 using a clean portion of the cloth as many times as required until the cleanliness of the cloth after wiping the surface becomes constant in appearance. There is typically some discoloration of the cloth after wiping however a clean surface should produce the same level of discoloration with successive wiping with a clean cloth and solvent.
4. If crevices exist in the joint such that wiping the surface would not be sufficient to clean the crevice, the approved solvent based cleaner should be directly sprayed on the joint to ensure wetting of the surfaces and removal of the contaminant. DO NOT spray rubber components directly. Care must be used to avoid getting solvent in areas other than necessary to clean the joint. Then continue with step 3.
5. Allow the surfaces to dry for a minimum of 1 minute or longer if necessary for the solvent to evaporate from the surface.
6. Do not touch the cleaned surface with anything prior to RTV application.
7. The surface is now prepared for RTV application.

Sealant Types

NOTE: The correct sealant and amount of sealant must be used in the proper location to prevent oil leaks, coolant leaks, or the loosening of the fasteners. DO NOT interchange the sealants. Use only the sealant, or equivalent, as specified in the service procedure.

The following two major types of sealant are commonly used in engines:

- Room Temperature Vulcanizing (RTV)
- Anaerobic sealant, which include the following:
 - Gasket Eliminator
 - Pipe Sealant
 - Threadlock

Room Temperature Vulcanizing (RTV) Sealer

This type of sealant is used where two components, such as the intake manifold and the engine block, are assembled together.

Use the following information when using RTV sealant:

- Do not use RTV sealant in areas where extreme temperatures are expected. These areas include:
 - The exhaust manifold
 - The head gasket
 - Any other surfaces where a different type of sealant is specified in the service procedure
- Do not use RTV sealant unless the ambient air temperature is at least 18°C (65°F) degrees or higher.
- Always follow all the safety recommendations and the directions that are on the RTV sealant container.
- Use a plastic or wood scraper in order to remove all the RTV sealant from the components.

CAUTION: Do not allow the RTV sealant to enter any blind threaded hole. RTV sealant that is allowed to enter a blind threaded hole can cause hydraulic lock of the fastener when the fastener is tightened. Hydraulic lock of a fastener can lead to damage to the fastener and/or the components. Hydraulic lock of a fastener can also prevent the proper clamping loads to be obtained when the fastener is tightened. Improper clamping loads can prevent proper sealing of the components allowing leakage to occur. Preventing proper fastener tightening can allow the components to loosen or separate leading to extensive engine damage.

NOTE: The bead size is critical and is easier to maintain consistency and application with a RTV dispensing tool. This also helps to eliminate waste.

- The surfaces to be sealed must be clean and dry.
- Use a RTV sealant bead size as specified in the service procedure.
- Apply the RTV sealant bead to the inside of any bolt holes areas.

NOTE: Do not wait for the RTV sealant to skin over.

- Assemble the components while the RTV sealant is still wet to the touch, within 10 minutes.

NOTE: Do not overtighten the fasteners.

- Tighten the fasteners in sequence, if specified, and to the proper torque specifications.

Anaerobic Type Gasket Eliminator Sealant

Anaerobic type gasket eliminator sealant cures in the absence of air. This type of sealant is used where two rigid parts, such as castings, are assembled together. When two rigid parts are disassembled and no sealant or gasket is readily noticeable, then the two parts were probably assembled using an anaerobic type gasket eliminator sealant.

Use the following information when using gasket eliminator sealant:

- Always follow all the safety recommendations and directions that are on the gasket eliminator sealant container.
- Apply a continuous bead of gasket eliminator sealant to one flange.
- The surfaces to be sealed must be clean and dry.

CAUTION: Do not allow the sealant to enter a blind hole. The sealant may prevent the fastener from achieving proper clamp load, cause

component damage when the fastener is tightened, or lead to component failure.

- Do not allow the gasket eliminator sealed joint to cure more than 5 minutes before torquing to specification. This will result in an incorrect clamp load of assembled components.
- Do not overtighten the fasteners.
 - Apply the gasket eliminator sealant evenly to get a uniform thickness of the gasket eliminator sealant on the sealing surface.
 - Tighten the fasteners in sequence, if specified, and to the proper torque specifications.
 - After properly tightening the fasteners, remove the excess gasket eliminator sealant from the outside of the joint.

Anaerobic Type Threadlock Sealant

Anaerobic type threadlock sealant cures in the absence of air. This type of sealant is used for threadlocking and sealing of bolts, fittings, nuts, and studs. This type of sealant cures only when confined between two close fitting metal surfaces.

Use the following information when using threadlock sealant:

- Always follow all safety recommendations and directions that are on the threadlock sealant container.
- The threaded surfaces to be sealed must be clean and dry.
- Apply the threadlock sealant as specified on the threadlock sealant container.

NOTE:

- **Do not allow the threadlock sealant to cure more than 5 minutes before torquing to specification. This will result in an incorrect clamp load of assembled components.**
- **Do not overtighten the fasteners.**
- Tighten the fasteners in sequence, if specified, and to the proper torque specifications.

Anaerobic Type Pipe Sealant

Anaerobic type pipe sealant cures in the absence of air and remains pliable when cured. This type of sealant is used where two parts are assembled together and require a leak proof joint.

Use the following information when using pipe sealant:

- Do not use pipe sealant in areas where extreme temperatures are expected. These areas include:
 - The exhaust manifold
 - The head gasket
 - Surfaces where a different sealant is specified
- Always follow all the safety recommendations and the directions that are on the pipe sealant container.
- The surfaces to be sealed must be clean and dry.
- Use a pipe sealant bead of the size or quantity as specified in the service procedure.

CAUTION:

Do not allow the sealant to enter a blind hole. The sealant may prevent the fastener from achieving proper clamp load, cause component damage when the fastener is tightened, or lead to component failure.

- Apply the pipe sealant bead to the inside of any bolt hole areas.
- Apply a continuous bead of pipe sealant to one sealing surface.

NOTE:

Do not overtighten the fasteners.

- Tighten the fasteners in sequence, if specified, and to the proper torque specifications.

TOOLS AND EQUIPMENT

- Special tools are listed and illustrated throughout this section, with a complete listing at the end of the section. These tools, or their equivalents, are designed to quickly and safely accomplish the operations for which they are intended. The use of these special tools also minimize possible damage to engine components. Some precision measuring tools are required for inspection of certain critical components. Torque wrenches and a torque angle meter are necessary for the proper tightening of various fasteners.
 - To properly service the engine assembly, the following items should be readily available:
 - Approved eye protection and safety gloves
 - A clean, well-lit, work area
 - A suitable component cleaning tank
 - A compressed air supply
 - Trays or storage containers to keep components and fasteners organized
 - An adequate set of hand tools
 - Approved engine repair stand
 - An approved engine lifting device that adequately supports the weight of the components
-

mcx30.com