

2017 ACCESSORIES & EQUIPMENT

Squeaks and Rattles - Encore, Trax

DIAGNOSTIC INFORMATION AND PROCEDURES

SQUEAKS AND RATTLES

NOTE: Squeaks and rattles are caused by improperly controlled relative motion between vehicle components. There are 4 ways to prevent squeaks and rattles.

- Attach the component that squeaks or rattles securely.
- Separate the components that squeak or rattle to prevent contact.
- Insulate the components that squeak or rattle.
- Insulate low uniform friction surfaces to eliminate stickslip motion.

SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

Illustration	Tool Number/ Description
	CH-39570 J-39570 Chassis Ear

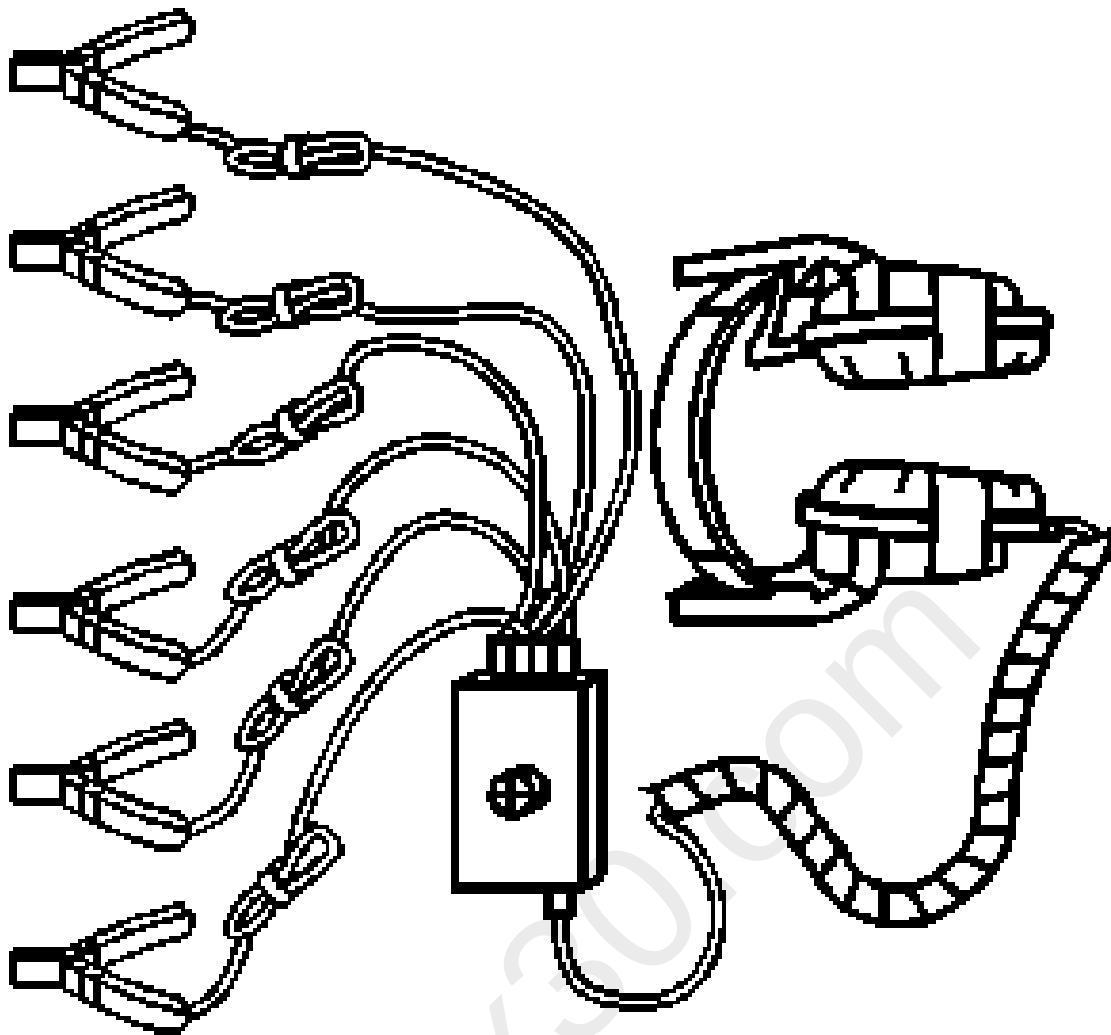
Illustration	Tool Number/ Description
	
	GE-41416 J-41416 Ultrasonic Leak Detector

Illustration	Tool Number/ Description
