

2017 ACCESSORIES & EQUIPMENT

Waterleaks - Encore, Trax

DIAGNOSTIC INFORMATION AND PROCEDURES

WATERLEAK TEST PREPARATION

- GM vehicles are designed to operate under normal environmental conditions.
- The design criteria for sealing materials and components takes into consideration the sealing forces required to withstand the natural elements. These specifications cannot take into consideration any artificial conditions, i.e., high pressure car washes.
- The water leak test procedure has been correlated to the natural elements and will determine the ability of a vehicle to perform under normal operating conditions.
- The first step in diagnosing a leak is determining the conditions under which a leak occurs. If the general leak area can be found, the exact entry point can be isolated using a water hose or an air hose. Some trim panels or components may need to be removed in order to repair the leak.
- If leaks are found around a door, door window, rear compartment lid or liftgate area this does not necessarily indicate a bad weatherstrip. An adjustment to these areas may resolve the condition.

Watertest Stand Assembly

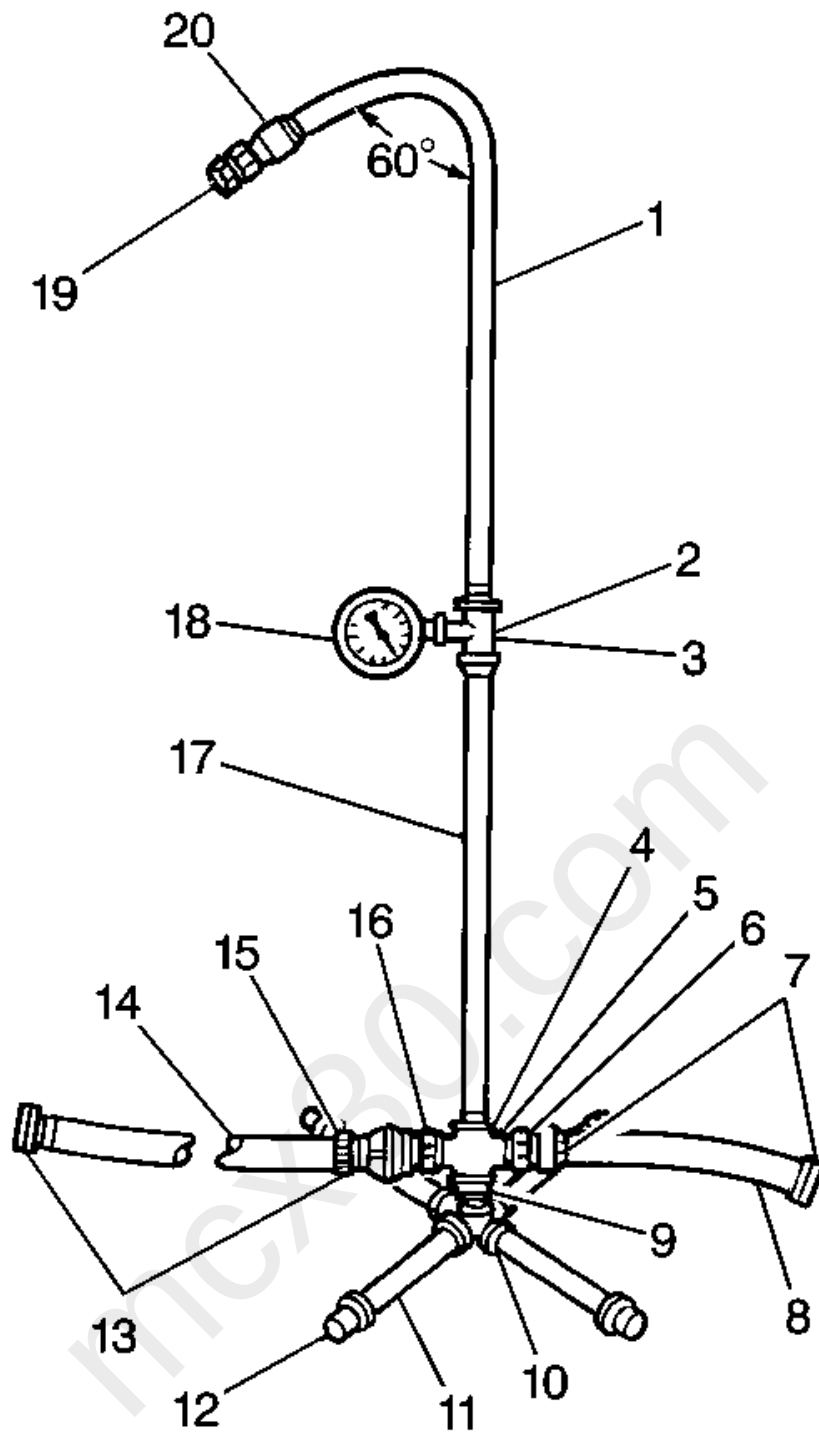


Fig. 1: View Of Watertest Stand Assembly
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Pipe (0.5 x 36 in)
2	Reducing Tee, Right Stand Only (0.5 x 0.5 x 0.25 in)
3	Coupling, Left Stand Only, (0.5 in)
4	Tee, Left Stand Only (0.5 in)
5	Cross, Right Stand Only (0.5 in)
6	Pipe to Hose Nipple, Right Stand Only (0.5 in)
7	Female Hose Coupling (5/8 in)
8	Input Hose, Right Stand Only (2.0 ft) (5/8 in diameter)
9	Close Nipple (0.5 in)
10	Cross (0.5 in) with Weld-On Cap (0.5 in)

Callout	Component Name
11	Nipple (0.5 x 12 in)
12	Cap (0.5 in)
13	Female Hose Coupling (5/8 in)
14	Cross Hose (12 ft) (5/8 in diameter)
15	Hose Quick Connect
16	Pipe to Hose Nipple (0.5 in)
17	Pipe (0.5 x 60 in)
18	Water Pressure Gauge, Right Stand Only
19	Full Jet Spray Nozzle, No. 1/2GG-25 or Equivalent
20	Coupling (0.5 in)

1. Assemble the water test stand as shown.

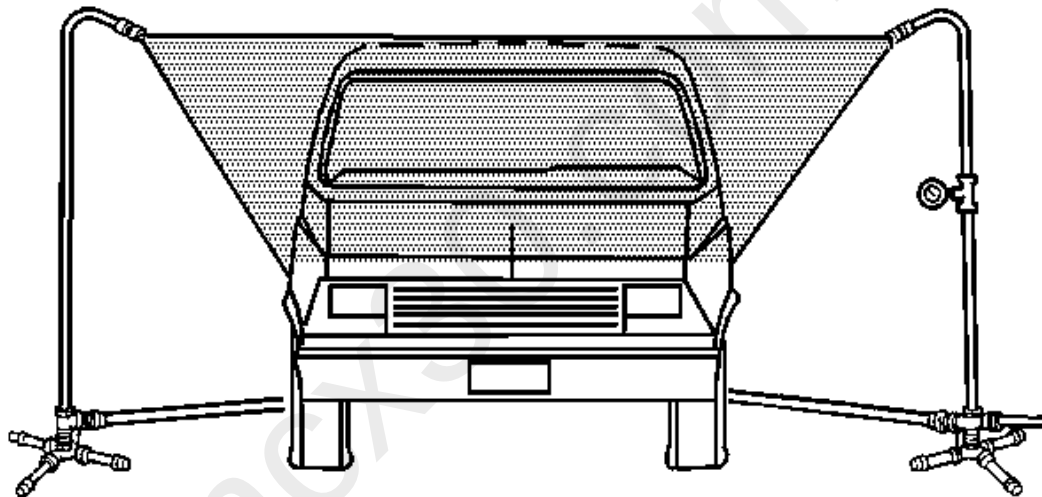


Fig. 2: Illustrating How Water Spray From Stands Should Overlap Vehicle

Courtesy of GENERAL MOTORS COMPANY

2. Position the stands as shown. The water spray from the stands should overlap the vehicle as shown.
3. Have an assistant inside of the vehicle during the test in order to locate any leaks.
4. The water pressure at the nozzle should maintain a 155 kPa (22 psi), for at least 4 minutes.

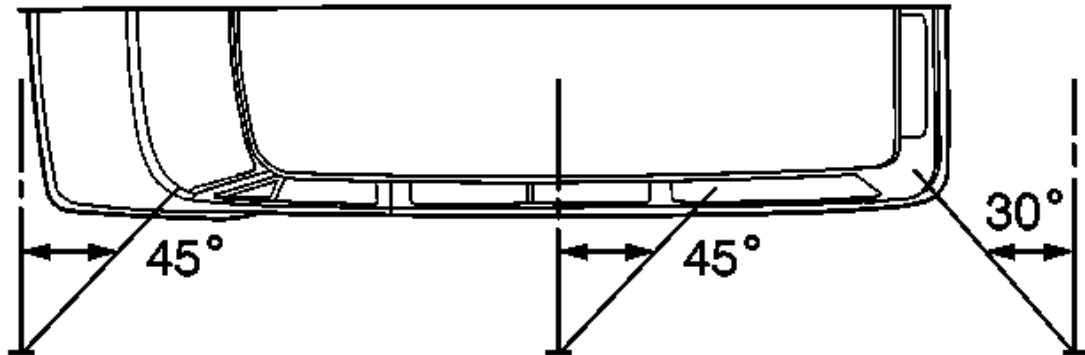


Fig. 3: Identifying Proper Water Spray Angles
Courtesy of GENERAL MOTORS COMPANY

5. In order to check the windshield, aim the water spray 30 degrees down and 45 degrees toward the rear.

Aim the water towards the corner of the windshield.

6. In order to check the side windows for leaks, position the water stand towards the center of the rear quarter, aiming the water spray 30 degrees down and 45 degrees toward the rear.
7. In order to check the back window, aim the water spray 30 degrees down and 30 degrees toward the front.

RECOMMENDED MATERIALS (WATERLEAK REPAIR)

Leak Areas	Repair Materials
Bolts, Studs, and Screws	Strip caulk
Large Holes	3M™ Automotive Joint and Seam Sealer
Metal joints	Brushable seam sealer which can be painted
Small Cracks and Pin Holes	3M™ Drip-Check Sealer or equivalent
Ventilation Ducts	3M™ Auto Bedding and Glazing Compound or equivalent
Weatherstrips	3M™ 08011 Weatherstrip Adhesive or equivalent
Windshield, Rear Window	Urethane adhesive, caulking kit, or equivalent

DUST LEAKS

Dust may leak into the vehicle where water will not. This happens particularly in the lower portion of the interior.

Forward motion of the vehicle can create a slight vacuum which pulls air and dust into the vehicle.

In order to determine the location of dust leaks, perform the following steps:

1. Remove the mats from the floor.
2. Remove the mats from the kick panel.
3. Remove the insulation from the floor.
4. Remove the insulation from the kick panel.
5. Drive the vehicle on a dusty road.
6. Examine the interior.


Dust in the shape of a small cone or slit will usually be found at the point of leakage.

7. Mark the points of leakage.

NOTE: Ensure that the interior is darkened when performing this step.

8. Shine bright lamps on the underside of the floor and the cowl.
9. Have an assistant mark any points inside of the vehicle for any points where the light shines through.
 - Inspect the weld joints.
 - Inspect the body mounts.
10. Seal any leaks with an air-drying, body-sealing compound.

WATER HOSE TEST

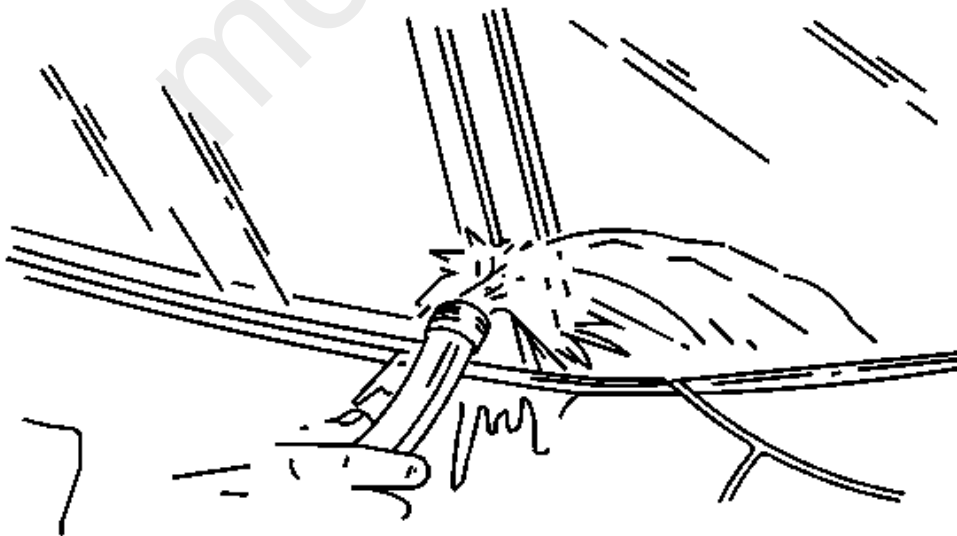

NOTE: Use a water hose without the nozzle attached.

1. Have an assistant inside of the vehicle in order to locate the leak.
2. Begin testing at the base of the window or the windshield.
3. Slowly move the hose upward and across the top of the vehicle.

AIR HOSE TEST

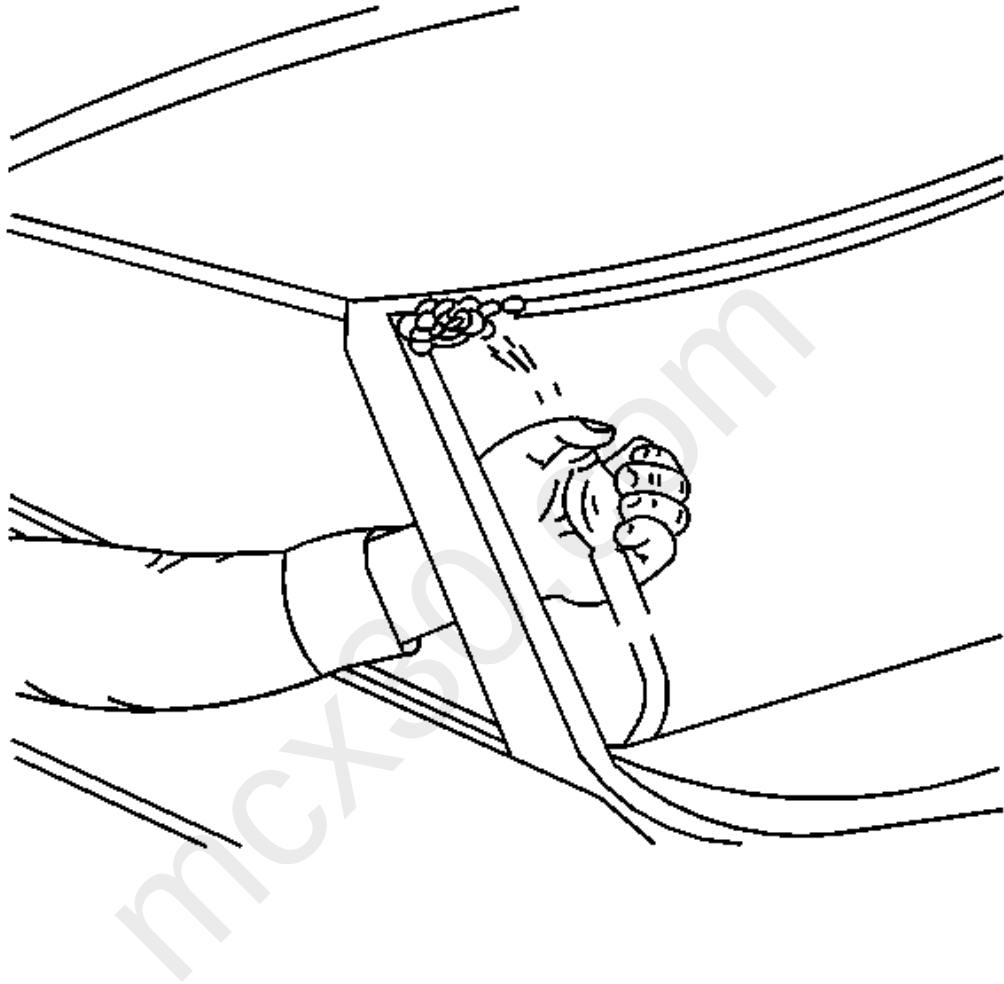


Fig. 5: Performing Air Hose Test
Courtesy of GENERAL MOTORS COMPANY

CAUTION: The air hose test should only be used on fully cured urethane adhesive. Otherwise, damage to the urethane adhesive bead could result in additional leaks.

1. Using a liquid detergent, diluted with water in a spray bottle, spray the window at the edges. Begin at the bottom and gradually move up and across the top.

NOTE: The compressed air should not exceed 205 kPa (30 psi).

2. Have an assistant inside of the vehicle with an air hose.
3. Have the assistant aim the compressed air at the suspected areas.

Bubbles will form in the soap solution at the location of the leak.

REPAIR INSTRUCTIONS

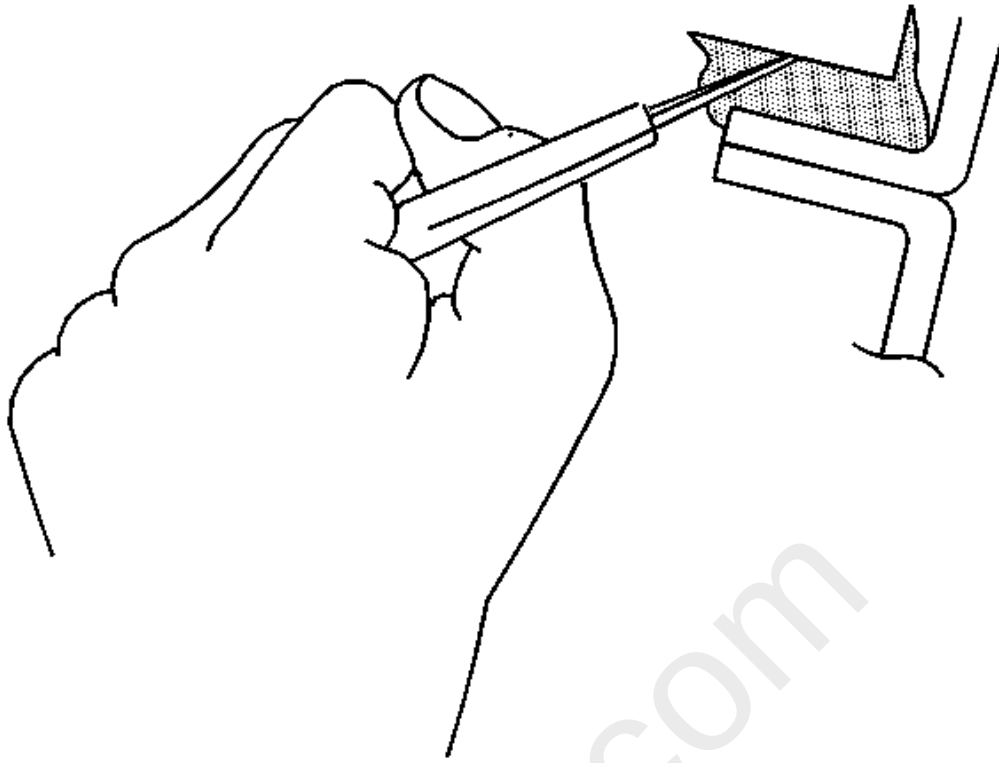


Fig. 6: Cutting Out A Portion Of The Adhesive Caulking.(1 Of 2)

Courtesy of GENERAL MOTORS COMPANY

WARNING: If the vehicle interior is exposed to moisture and becomes soaked up to the level of the sensing and diagnostic module (SDM), the SDM and SDM harness connector must be replaced. The SDM could be activated when powered, which could cause airbag deployment and result in personal injury.

Depending on the location of the waterleak, you may have to remove certain interior components in order to repair the leak.

1. If the floor carpet is wet, refer to [Floor Carpet Drying](#) .

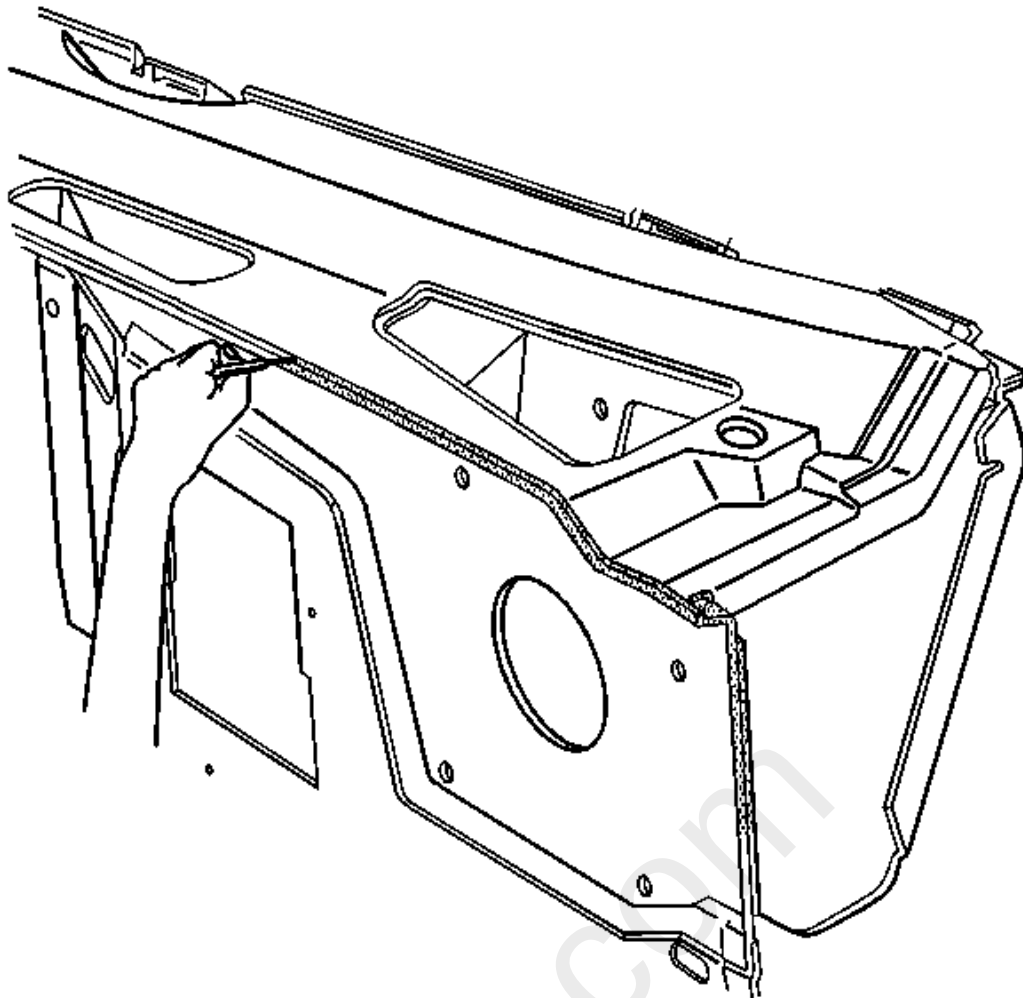


Fig. 7: Cutting Out A Portion Of The Adhesive Caulking (2 Of 2)

Courtesy of GENERAL MOTORS COMPANY

2. Cut out a portion of the adhesive caulking in the leak area from inside or outside of the vehicle.
3. Clean and remove all loose particles of the adhesive old caulking from the area.
4. Apply joint body and seam sealer where the old adhesive caulking was removed.
5. Allow the adhesive caulking to dry for several hours.
6. Test for leaks.
7. Install the trim, if removed.

STATIONARY WINDOW WATERLEAK REPAIR

WARNING:

If any water enters the vehicle interior up to the level of the carpet or higher and soaks the carpet, the sensing and diagnostic module (SDM) and the SDM harness connector may need to be replaced. The SDM could be activated when powered, which could cause deployment of the air bag(s) and result in personal injury. Before attempting these procedures, the SIR system must be disabled. Refer to Disabling the SIR System.

With the ignition OFF, inspect the SDM mounting area, including the carpet. If any significant soaking or evidence of significant soaking is detected, you must perform the following tasks:

1. Remove all water.
2. Repair the water damage.
3. Replace the SDM harness connector.
4. Replace the SDM.

Failure to follow these tasks could result in possible air bag deployment, personal injury, or otherwise unneeded SIR system repairs.

1. If the floor carpet is wet refer to [Floor Carpet Drying](#) .
 2. Remove the trim moldings or the headliner in order to repair the leak, if needed.
 3. Determine the source of water entry.
 4. If water is leaking at the edge of the windshield, reseal the windshield using Urethane Adhesive Caulking Kit GM P/N 12346392 or the equivalent.
 5. If water leaks into the vehicle at the sides of the stationary windows, reseal the window using Urethane Adhesive Caulking Kit GM P/N 12346392 or the equivalent.
-

mcx30.com