

2017 DTC INDEX**Encore And Trax****ACTIVE NOISE CANCELLATION - DIAGNOSTIC TROUBLE CODES****ACTIVE NOISE CANCELLATION - DIAGNOSTIC TROUBLE CODES**

DTC	Description
DTC B0560	Engine RPM Input Circuit Signal Invalid
DTC B1277, B127C, or B127D	Microphone

ANTILOCK BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES**ANTILOCK BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES**

DTC	Description
DTC B2745	Traction Control Switch (With C67/CJ2)
DTC B2745	Traction Control Switch (With C60/C41)
DTC C0035, C0040, C0045, or C0050	Wheel Speed Sensor
DTC C0110	Pump Motor
DTC C0131	Traction Control System
DTC C0161	Antilock Brake System
DTC C0186, C0196, or C0287	Lateral Acceleration Sensor Signal/Yaw Rate Signal
DTC C0201	Antilock Braking System Enable Relay Primary Circuit
DTC C0242 or P0856	Engine Control Module Indicated Traction Control Malfunction/Traction Control Torque Request Signal Message Counter Incorrect
DTC C0277	Brake Pedal Position Sensor Circuit Calibration Not Learned
DTC C027C	Front Brake Discs High Temperature
DTC C0292	Multi-Axis Acceleration Sensor Module Circuit Performance - Bias Level Out of Range
DTC C0551	Option Configuration Incorrect Component Installed
DTC C0561	System Disabled Information Stored
DTC C0710	Steering Position Signal
DTC C1207, C1208, C1221, C1222, C1225, C1226, C1232, or C1233	Wheel Speed Sensor
DTC C124F or C1250-C1254	Lateral/Longitudinal Acceleration Sensor
DTC C1589	Multi-axis Acceleration Sensor/Steering Wheel Angle Sensor Supply Voltage Circuit Performance
DTC P15FD	Wheel Speed Sensor Message Sequence Incorrect

AUTOMATIC TRANSMISSION - 6T40 (MNH MNK) - DIAGNOSTIC TROUBLE CODES**AUTOMATIC TRANSMISSION - 6T40 (MNH MNK) - DIAGNOSTIC TROUBLE CODES**

DTC	Description
DTC P0601, P0603, P0604, or P062F	Control Module
DTC P0634	Control Module Overtemperature

DTC	Description
<u>DTC P0658 or P0659</u>	Actuator High Control Circuit Group 1 Low/High Voltage
<u>DTC P0667, P0668, or P0669</u>	Control Module Temperature Sensor
<u>DTC P06AC, P06AD, or P06AE</u>	Control Module Power Up Temperature Sensor
<u>DTC P0711-P0713</u>	Transmission Fluid Temperature Sensor
<u>DTC P0716, P0717, P07BF, or P07C0</u>	Input Speed Sensor
<u>DTC P0722, P0723, P077C, or P077D</u>	Output Speed Sensor Circuit
<u>DTC P0741 or P0742</u>	Torque Converter Clutch (TCC) System Stuck Off/On
<u>DTC P0751 or P0752</u>	Shift Solenoid Valve 1 Performance - Stuck Off/On
<u>DTC P0776 or P0777</u>	Pressure Control Solenoid Valve 2 Stuck Off/On
<u>DTC P0796 or P0797</u>	Pressure Control Solenoid Valve 3 Stuck Off/On
<u>DTC P0815, P0816, or P0826</u>	Upshift Switch Circuit/Downshift Switch Circuit/Up and Down Shift Switch Circuit
<u>DTC P0850-P0852</u>	Park/Neutral Position Switch Circuit
<u>DTC P0961-P0963</u>	Line Pressure Control Solenoid Valve
<u>DTC P0965-P0967</u>	Pressure Control Solenoid Valve 2
<u>DTC P0969-P0971</u>	Pressure Control Solenoid Valve 3
<u>DTC P0973 or P0974</u>	Shift Solenoid Valve 1 Control Circuit Low/High Voltage
<u>DTC P171A-P171C</u>	Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit
<u>DTC P171D</u>	Transmission Fluid Pressure Accumulator System Performance
<u>DTC P1761</u>	Up and Down Shift Switch Signal Message Counter Incorrect
<u>DTC P182E or P1915</u>	Internal Mode Switch
<u>DTC P1876</u>	Up and Down Shift Enable Switch Circuit Low Voltage
<u>DTC P2714 or P2715</u>	Pressure Control Solenoid Valve 4 Stuck Off/On
<u>DTC P2719-P2721</u>	Pressure Control Solenoid Valve 4
<u>DTC P2723 or P2724</u>	Pressure Control Solenoid Valve 5 Stuck Off/On
<u>DTC P2728-P2730</u>	Pressure Control Solenoid Valve 5
<u>DTC P2762, P2763, or P2764</u>	Torque Converter Clutch (TCC) Pressure Control Solenoid Valve

BATTERY, CHARGING SYSTEM AND STARTING SYSTEM - DIAGNOSTIC TROUBLE CODES

BATTERY, CHARGING SYSTEM AND STARTING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1325, B1327-B1330, B1395, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560, P0562, P0563, P0611, P129B, P129C, P15AE, or P15AF</u>	Device/Module Power
<u>DTC B1516</u>	Battery Current Sensor
<u>DTC B151A</u>	Battery Capacity Performance
<u>DTC B1527</u>	Parasitic Load
<u>DTC P0561</u>	System Voltage Performance
<u>DTC P0615, P0616, or P0617</u>	Starter Relay Control Circuit (Without KL9)
<u>DTC P0615, P0616, or P0617</u>	Starter Relay Control Circuit (KL9)

DTC	Description
<u>DTC P0621</u>	Generator L-Terminal Circuit
<u>DTC P0622</u>	Generator F-Terminal Circuit
<u>DTC P155E, P155F, or P156E</u>	DC/DC Converter
<u>DTC P15A3</u>	Stop/Start Select Switch Circuit Signal Message Counter Incorrect
<u>DTC P15FF</u>	Battery Monitor Sensor Signal Message Counter Incorrect
<u>DTC P058A-P058F, P16D4-P16D6, P16DC-P16DE, or P16E1-P16E3</u>	Battery Sensor Module
<u>DTC P26E4-P26E6</u>	Starter Drive Pinion Relay Control Circuit
<u>DTC P3051, P3053, or P3055</u>	DC/DC Converter Actuator Voltage Sensor Circuit 1
<u>DTC P3052, P3054, or P3056</u>	DC/DC Converter Actuator Voltage Sensor Circuit 2
<u>DTC P305D or P305E</u>	DC/DC Converter Crank Control Circuit High/Low Voltage

BOLTED EXTERIOR BODY PANELS AND CLOSURES - DIAGNOSTIC TROUBLE CODES

BOLTED EXTERIOR BODY PANELS AND CLOSURES - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B3006</u>	Hood Ajar Circuit
<u>DTC P257D-P257F</u>	Engine Hood Switch

CELLULAR SYSTEM, ENTERTAINMENT SYSTEM, AND NAVIGATION SYSTEM - DIAGNOSTIC TROUBLE CODES

CELLULAR SYSTEM, ENTERTAINMENT SYSTEM, AND NAVIGATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0997</u>	Auxiliary Electronic Control Unit Performance
<u>DTC B1024</u>	Circuit Board Temperature Sensor Above Maximum Threshold (Audio Amplifier)
<u>DTC B1024</u>	Circuit Board Temperature Sensor Threshold (Human Machine Interface Control Module)
<u>DTC B1025-B1095</u>	Audio Output Circuits (Radio)
<u>DTC B1025-B1095</u>	Audio Output Circuits (Audio Amplifier)
<u>DTC B124B</u>	USB 1 Circuit (IOA/IP1)
<u>DTC B124B</u>	USB 1 Circuit (IO5/IO6)
<u>DTC B124F</u>	Universal Serial Bus (USB) Programming
<u>DTC B125A</u>	Antenna Signal Circuit
<u>DTC B125C</u>	Satellite Antenna Circuit
<u>DTC B1271</u>	Theft Protection Active
<u>DTC B1277</u>	Microphone 1 Input Signal Circuit (with IO5/IO6)
<u>DTC B1277</u>	Cellular Phone Microphone Circuit (with IOA/IP1)
<u>DTC B127E</u>	Front Video Display Output Signal
<u>DTC B1446 or B1447</u>	Backup Power Source
<u>DTC B2455</u>	Cellular Phone Microphone Circuit
<u>DTC B2462</u>	Global Positioning System
<u>DTC B2470</u>	Cellular Phone Antenna Circuit Malfunction
<u>DTC B2476 or B2482</u>	Cellular Phone Select Service Switch

DTC	Description
<u>DTC B2485</u>	Wireless Communication (BT) Antenna Circuit

CRUISE CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

CRUISE CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0571</u>	Cruise Control Brake Switch Circuit
<u>DTC P0572 or P0573</u>	Brake Switch Circuit 1 Low/High Voltage
<u>DTC P0575</u>	Cruise Control Switch Signal Message Counter Incorrect
<u>DTC P0703</u>	Brake Switch Signal Message Counter Incorrect
<u>DTC P158A</u>	Cruise Control Calibration Incorrect
<u>DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>	Cruise Control Malfunction

DATA COMMUNICATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DATA COMMUNICATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1000</u>	Electronic Control Unit
<u>DTC B1001</u>	Option Configuration
<u>DTC B101D</u>	Electronic Control Unit Hardware
<u>DTC B101E</u>	Electronic Control Unit Software
<u>DTC C0550</u>	Electronic Control Unit
<u>DTC C056D</u>	Electronic Control Unit Hardware
<u>DTC C056E</u>	Electronic Control Unit Software
<u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F0, or P262B</u>	Control Module
<u>DTC U0020</u>	Low Speed CAN Bus
<u>DTC U0028</u>	MOST Bus
<u>DTC U0029</u>	MOST Bus Performance
<u>DTC U0073 or U2100</u>	Control Module Communication/CAN Bus Communication
<u>DTC U0074</u>	Control Module Communication Bus B Off (Chassis Expansion Bus)
<u>DTC U0074</u>	Control Module Communication Powertrain Expansion CAN Bus Off Malfunction (Powertrain Expansion Bus)
<u>DTC U0077</u>	Control Module Communication Chassis Expansion CAN Bus Off
<u>DTC U0078</u>	Control Module Communication Low Speed CAN Bus Off
<u>DTC U007B</u>	Control Module Communication High Speed Extension CAN Bus Off
<u>DTC U007C</u>	Control Module Communication High Speed Extension CAN Bus 2 Off
<u>DTC U007D</u>	Control Module Communication Low Speed Extension CAN Bus Off
<u>DTC U0100-U02FE</u>	Control Module U Code List
<u>DTC U01B0</u>	Lost Communication with Battery Monitor Module
<u>DTC U0300-U0336</u>	Control Module U Code List
<u>DTC U0400-U05FE</u>	Control Module U Code List
<u>DTC U1340-U135F</u>	Control Module U Code List

DTC	Description
<u>DTC U1500-U15FF</u>	Control Module U Code List
<u>DTC U1814</u>	Powertrain Wake-Up Communication Circuit
<u>DTC U18A6</u>	Lost Communication with Right Object Detection Control Module on Dedicated Bus 1
<u>DTC U18A7</u>	Lost Communication with Power Supply Transformer on Powertrain Expansion CAN Bus
<u>DTC U18B9-U18BF</u>	High Speed CAN Bus Subnet Configuration List
<u>DTC U2098</u>	MOST Communication Enable
<u>DTC U2099</u>	High Speed Communication Enable Circuit

ENGINE CONTROLS/FUEL - 1.4L (LE2) - DIAGNOSTIC TROUBLE CODES

ENGINE CONTROLS/FUEL - 1.4L (LE2) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0010, P0013, or P2088-P2091</u>	Intake/Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit
<u>DTC P0011 or P0014</u>	Intake/Exhaust Camshaft Position System Performance
<u>DTC P0016 or P0017</u>	Crankshaft Position - Intake/Exhaust Camshaft Position Not Plausible
<u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, or P0141</u>	HO2S Heater
<u>DTC P0033-P0035</u>	Turbocharger Bypass Solenoid Valve Control Circuit
<u>DTC P0068 or P1101</u>	Throttle Body/Intake Air Flow Performance
<u>DTC P0089, P00C6, P228C, or P228D</u>	Fuel Pressure
<u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>	Fuel Pressure Regulator
<u>DTC P0096 or P0111</u>	Intake Air Temperature (IAT) Sensor 2/1 Performance
<u>DTC P0097, P0098, or P0099</u>	Intake Air Temperature (IAT) Sensor 2 Circuit
<u>DTC P00C7</u>	Intake Air Pressure Measurement System - Multiple Sensors Not Plausible
<u>DTC P00E9</u>	Intake Air Temperature (IAT) Sensor 3 Circuit Performance
<u>DTC P00EA-P00EC</u>	Intake Air Temperature (IAT) Sensor 3 Circuit
<u>DTC P00F4-P00F6</u>	Intake Air Humidity Sensor Circuit
<u>DTC P0101</u>	Mass Air Flow (MAF) Sensor Performance
<u>DTC P0102 or P0103</u>	Mass Air Flow (MAF) Sensor Circuit Low/High Frequency
<u>DTC P0106</u>	Manifold Absolute Pressure (MAP) Sensor Performance
<u>DTC P0107 or P0108</u>	Manifold Absolute Pressure (MAP) Sensor Circuit Low/High Voltage
<u>DTC P0112, P0113, or P0114</u>	Intake Air Temperature (IAT) Sensor 1 Circuit
<u>DTC P0117, P0118, or P0119</u>	Engine Coolant Temperature (ECT) Sensor Circuit
<u>DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135</u>	Throttle Position Sensors/Sensor Communication
<u>DTC P0128</u>	Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature
<u>DTC P0131, P0132, P0137, or P0138</u>	HO2S Circuit Voltage Sensor 1/2
<u>DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271</u>	HO2S Response Sensor 1-2/HO2S Signal Stuck Sensor 2

DTC	Description
<u>DTC P0171 or P0172</u>	Fuel Trim System Lean/Rich
<u>DTC P0191 or P0192</u>	Fuel Rail Pressure Sensor
<u>DTC P0182, P0183, P0187, P0188, P111F, P126E, or P126F</u>	Fuel Temperature Sensors
<u>DTC P018B-P018D</u>	Fuel Pressure Sensor (Chassis Control Module)
<u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>	Cylinder Injector Control Circuits
<u>DTC P0234 or P0299</u>	Engine Overboost/Underboost
<u>DTC P0236</u>	Turbocharger Boost Sensor Performance
<u>DTC P0237 or P0238</u>	Turbocharger Boost Sensor Circuit Low/High Voltage
<u>DTC P0243, P0245, or P0246</u>	Turbocharger Wastegate Solenoid Valve Control Circuit
<u>DTC P0231, P0232, or P023F</u>	Fuel Pump Control Circuit (Chassis Control Module)
<u>DTC P025A</u>	Fuel Pump Control Module Enable Circuit (Chassis Control Module)
<u>DTC P0300-P0304</u>	Misfire Detected
<u>DTC P0315</u>	Crankshaft Position System Variation Not Learned
<u>DTC P0324, P0326, or P06B6</u>	Knock Sensor Performance/Knock Sensor Control Module Processor Performance
<u>DTC P0325, P0327, or P0328</u>	Knock Sensor Circuit
<u>DTC P0335 or P0336</u>	Crankshaft Position Sensor
<u>DTC P0340, P0341, P0365, or P0366</u>	Intake/Exhaust Camshaft Position Sensor
<u>DTC P034A or P034B</u>	Crankshaft Position Sensor - Engine Start Position Incorrect/Crankshaft Direction Incorrect
<u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>	Ignition Coil Control Circuits
<u>DTC P0420</u>	Catalyst System Low Efficiency
<u>DTC P0442</u>	Evaporative Emission (EVAP) System Small Leak Detected
<u>DTC P0443, P0458, or P0459</u>	Evaporative Emission (EVAP) Purge Solenoid Valve Control Circuit
<u>DTC P0446</u>	Evaporative Emission (EVAP) Vent System Performance
<u>DTC P0449, P0498, or P0499</u>	Evaporative Emission (EVAP) Vent Solenoid Valve Control Circuit
<u>DTC P0451-P0454</u>	Fuel Tank Pressure Sensor
<u>DTC P0455</u>	Evaporative Emission (EVAP) System Large Leak Detected
<u>DTC P0496</u>	Evaporative Emission (EVAP) System Flow During Non-Purge
<u>DTC P0506 or P0507</u>	Idle Speed Low/High
<u>DTC P050D</u>	Cold Start Rough Idle
<u>DTC P057B-P057E</u>	Brake Pedal Position Sensor
<u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>	Control Module/VIN Not Programmed or Mismatched - Engine Control Module (ECM)
<u>DTC P0627-P0629</u>	Fuel Pump Enable Circuit
<u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>	5V Reference 1-5 Circuit
<u>DTC P0641 or P06A6</u>	5 V Reference Circuit/5 V Reference 1 Performance (Chassis Control Module)

DTC	Description
<u>DTC P0650, P263A, or P263B</u>	Malfunction Indicator Lamp (MIL) Control Circuit
<u>DTC P0685-P0687, P0689, P0690, or P1682</u>	Engine Controls Ignition Relay/Ignition 1 Switch Circuit 2
<u>DTC P069E</u>	Fuel Pump Control Module Requested MIL Illumination
<u>DTC P0700</u>	Transmission Control Module Requested MIL Illumination
<u>DTC P111E</u>	Engine Coolant Temperature (ECT) Sensor Not Plausible
<u>DTC P121A</u>	Mass Air Flow (MAF) Sensor Supply Voltage Control Circuit
<u>DTC P121B or P121C</u>	Mass Air Flow (MAF) Sensor Supply Voltage Control Circuit Low/High Voltage
<u>DTC P1255 or P064A</u>	Fuel Pump Control Module (Chassis Control Module)
<u>DTC P127C, P128A-P128D, P128F, P16E4, or P16E5</u>	Fuel Rail Pressure Temperature Sensors/Sensor Communication Circuit 3 Voltage
<u>DTC P135A</u>	Ignition Coil Supply Voltage Circuit Bank 1
<u>DTC P1400</u>	Cold Start Emission Reduction Control System
<u>DTC P150C</u>	Transmission Control Module Engine Speed Request Signal Message Counter Incorrect
<u>DTC P1516, P2101, P2119, or P2176</u>	Throttle Actuator Control (TAC) Module
<u>DTC P163A</u>	Control Module Fuel Pressure Regulator 1 Control System Circuitry Performance
<u>DTC P16A7, P16AF, or P16B3</u>	Engine Controls Ignition Relay Feedback Circuit 2
<u>DTC P2096 or P2097</u>	Post Catalyst Fuel Trim System Low/High Limit
<u>DTC P2122, P2123, P2127, P2128, or P2138</u>	Accelerator Pedal Position (APP) Sensors 1-2
<u>DTC P2199</u>	Intake Air Temperature (IAT) Sensor 1-2 Not Plausible
<u>DTC P219A</u>	Fuel Trim Cylinder Balance
<u>DTC P2227-P2230</u>	Barometric Pressure (BARO) Sensor
<u>DTC P2261</u>	Turbocharger Bypass Valve Stuck
<u>DTC P2544</u>	Transmission Torque Request Circuit Message Counter Incorrect
<u>DTC P2618</u>	Crankshaft Position Signal Output Circuit Low/High Voltage
<u>DTC P2635</u>	Fuel Pump Flow Performance (Chassis Control Module)

ENGINE CONTROLS/FUEL - 1.4L (LUV) - DIAGNOSTIC TROUBLE CODES

ENGINE CONTROLS/FUEL - 1.4L (LUV) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0010, P0013, or P2088-P2091</u>	Intake/Exhaust Camshaft Position Actuator Solenoid Valve
<u>DTC P0011 or P0014</u>	Intake/Exhaust Camshaft Position System Performance
<u>DTC P0016 or P0017</u>	Crankshaft Position
<u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, or P0141</u>	HO2S Heater Control
<u>DTC P0033-P0035</u>	Turbocharger Bypass Solenoid Valve Control

DTC	Description
<u>DTC P0068 or P1101</u>	Throttle Body Air Flow Performance/Intake Air Flow System Performance
<u>DTC P0096 or P0111</u>	Intake Air Temperature (IAT) Sensor 2 Performance
<u>DTC P0097, P0098, or P0099</u>	Intake Air Temperature (IAT) Sensor 2
<u>DTC P00C7</u>	Intake Air Pressure Measurement System - Multiple Sensors Not Plausible
<u>DTC P00E9</u>	Intake Air Temperature (IAT) Sensor 3 Circuit Performance
<u>DTC P00EA-P00EC</u>	Intake Air Temperature (IAT) Sensor Circuit Low Voltage
<u>DTC P00F4-P00F6</u>	Intake Air Humidity Sensor
<u>DTC P0101</u>	Mass Air Flow (MAF) Sensor Performance
<u>DTC P0102 or P0103</u>	Mass Air Flow (MAF) Sensor
<u>DTC P0106</u>	Manifold Absolute Pressure (MAP) Sensor Performance
<u>DTC P0107 or P0108</u>	Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage
<u>DTC P0112, P0113, or P0114</u>	Intake Air Temperature (IAT) Sensor
<u>DTC P0117, P0118, or P0119</u>	Engine Coolant Temperature (ECT) Sensor
<u>DTC P0121-P0123, P0222, P0223, or P2135</u>	Throttle Position Sensor
<u>DTC P0128</u>	Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature
<u>DTC P0131, P0132, P0134, P0137, P0138, or P0140</u>	HO2S Circuit
<u>DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271</u>	HO2S
<u>DTC P0171 or P0172</u>	Fuel Trim System
<u>DTC P018B-P018D</u>	Fuel Pressure Sensor (Chassis Control Module)
<u>DTC P0201, P0202, P0203, P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, or P0271</u>	Cylinder Injector Control
<u>DTC P0231, P0232, or P023F</u>	Fuel Pump Control (Chassis Control Module)
<u>DTC P0234 or P0299</u>	Engine Overboost/ Underboost
<u>DTC P0236</u>	Turbocharger Boost Sensor Performance
<u>DTC P0237 or P0238</u>	Turbocharger Boost Sensor
<u>DTC P0243, P0245, or P0246</u>	Turbocharger Wastegate Solenoid Valve
<u>DTC P025A</u>	Fuel Pump Control Module Enable Circuit (Chassis Control Module)
<u>DTC P0300-P0304</u>	Engine/Cylinder Misfire Detected
<u>DTC P0315</u>	Crankshaft Position System
<u>DTC P0324, P0326, or P06B6</u>	Knock Sensor Performance
<u>DTC P0325, P0327, or P0328</u>	Knock Sensor
<u>DTC P0335 or P0336</u>	Crankshaft Position Sensor
<u>DTC P0340, P0341, P0365, or P0366</u>	Intake/Exhaust Camshaft Position Sensor
<u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>	Ignition Coil
<u>DTC P0420</u>	Catalyst System Low Efficiency
<u>DTC P0442</u>	Evaporative Emission (EVAP) System Small Leak Detected
<u>DTC P0443, P0458, or P0459</u>	Evaporative Emission (EVAP) Purge Solenoid Valve Control
<u>DTC P0446</u>	Evaporative Emission (EVAP) Vent System Performance

DTC	Description
<u>DTC P0449, P0498, or P0499</u>	Evaporative Emission (EVAP) Vent Solenoid Valve Control
<u>DTC P0451-P0454</u>	Fuel Tank Pressure Sensor
<u>DTC P0455</u>	Evaporative Emission (EVAP) System Large Leak Detected
<u>DTC P0496</u>	Evaporative Emission (EVAP) System Flow During Non-Purge
<u>DTC P0506 or P0507</u>	Idle Speed Low/High
<u>DTC P057B-P057D</u>	Brake Pedal Position Sensor
<u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>	Control Module (ECM)
<u>DTC P0628</u>	Fuel Pump Enable Circuit Low Voltage (LUV)
<u>DTC P0641 or P06A6</u>	5 V Reference (Chassis Control Module)
<u>DTC P0641, P0651, P0697, or P06A3</u>	5V Reference
<u>DTC P0650, P263A, or P263B</u>	Malfunction Indicator Lamp (MIL) Control
<u>DTC P0685, P0686, P0687, P0689, P0690, or P1682</u>	Engine Controls Ignition Relay
<u>DTC P069E</u>	Fuel Pump Control Module Requested MIL Illumination
<u>DTC P0700 or P1700</u>	Transmission Control Module
<u>DTC P111E</u>	Engine Coolant Temperature (ECT) Sensor Not Plausible
<u>DTC P1255 or P064A</u>	Fuel Pump Control Module (Chassis Control Module)
<u>DTC P1400</u>	Cold Start Emission Reduction Control System
<u>DTC P150C</u>	Transmission Control Module Engine Speed Request Signal Message Counter Incorrect
<u>DTC P1516, P2101, P2119, or P2176</u>	Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance
<u>DTC P2096 or P2097</u>	Post Catalyst Fuel Trim System Low/High Limit
<u>DTC P2122, P2123, P2127, P2128, or P2138</u>	Accelerator Pedal Position (APP) Sensor
<u>DTC P2199</u>	Intake Air Temperature (IAT) Sensors 1-2 Not Plausible
<u>DTC P219A</u>	Fuel Trim Cylinder Balance
<u>DTC P2227-P2230</u>	Barometric Pressure (BARO) Sensor
<u>DTC P2261</u>	Turbocharger Bypass Valve Stuck
<u>DTC P2544</u>	Transmission Torque Request Circuit Message Counter Incorrect
<u>DTC P2618 or P2619</u>	Crankshaft Position Signal
<u>DTC P2635</u>	Fuel Pump Flow Performance (Chassis Control Module)

ENGINE CONTROLS/FUEL - 1.8L (2H0) - DIAGNOSTIC TROUBLE CODES

ENGINE CONTROLS/FUEL - 1.8L (2H0) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0010 or P0013</u>	Intake/Exhaust Camshaft Position Actuator Solenoid Valve Control
<u>DTC P0011 or P0014</u>	Intake/ Exhaust Camshaft Position System Performance
<u>DTC P0016 or P0017</u>	Crankshaft Position - Intake/Exhaust Camshaft Position Not Plausible
<u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, or P0141</u>	HO2S Heater

DTC	Description
<u>DTC P0068 or P1101</u>	Throttle Body Air Flow Performance/Intake Air Flow System Performance
<u>DTC P0101</u>	Mass Air Flow (MAF) Sensor Performance
<u>DTC P0102 or P0103</u>	Mass Air Flow (MAF) Sensor Circuit Low Frequency
<u>DTC P0106</u>	Manifold Absolute Pressure (MAP) Sensor Performance
<u>DTC P0107 or P0108</u>	Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage
<u>DTC P0112, P0113, or P0114</u>	Intake Air Temperature (IAT) Sensor
<u>DTC P0117, P0118, or P0119</u>	Engine Coolant Temperature (ECT) Sensor
<u>DTC P0121-P0123, P0222, P0223, or P2135</u>	Throttle Position Sensor
<u>DTC P0128</u>	Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature
<u>DTC P0131, P0132, P0134, P0137, P0138, or P0140</u>	HO2S Circuit
<u>DTC P0133, P1133, P2270, or P2271</u>	HO2S
<u>DTC P0171 or P0172</u>	Fuel Trim System
<u>DTC P0201, P0202, P0203, P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, or P0271</u>	Cylinder Injector Control
<u>DTC P0300-P0304</u>	Engine/Cylinder Misfire Detected
<u>DTC P0315</u>	Crankshaft Position System Variation Not Learned
<u>DTC P0324, P0326, or P06B6</u>	Knock Sensor System Performance
<u>DTC P0325, P0327, or P0328</u>	Knock Sensor
<u>DTC P0335 or P0336</u>	Crankshaft Position Sensor
<u>DTC P0340, P0341, P0365, or P0366</u>	Intake/Exhaust Camshaft Position Sensor
<u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>	Ignition Coil Control
<u>DTC P0420</u>	Catalyst System Low Efficiency
<u>DTC P0443, P0458, or P0459</u>	Evaporative Emission (EVAP) Purge Solenoid Valve Control
<u>DTC P057B-P057D</u>	Brake Pedal Position Sensor
<u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P2610</u>	Control Module/VIN Not Programmed or Mismatched (ECM)
<u>DTC P0627-P0629</u>	Fuel Pump Relay Control
<u>DTC P0641, P0651, P0697, or P06A3</u>	5V Reference (ECM)
<u>DTC P0660, P0661, or P0662</u>	Intake Manifold Tuning Control Valve Control
<u>DTC P0685-P0687, P0689, P0690, or P1682</u>	Engine Controls Ignition Relay
<u>DTC P0700 or P1700</u>	Transmission Control Module
<u>DTC P1380 or P1381</u>	Misfire Detected
<u>DTC P150C</u>	Transmission Control Module Engine Speed Request Signal Message Counter Incorrect
<u>DTC P1516, P2101, P2119, or P2176</u>	Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance
<u>DTC P2122, P2123, P2127, P2128, or P2138</u>	Accelerator Pedal Position (APP) Sensor
<u>DTC P2544</u>	Transmission Torque Request Circuit Message Counter Incorrect

ENGINE COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

ENGINE COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description

DTC	Description
<u>DTC P00B3 or P00B4</u>	Radiator Coolant Temperature (RCT) Sensor
<u>DTC P00B7</u>	Engine Coolant Flow Insufficient
<u>DTC P0480 or P0481</u>	Cooling Fan Relay 1 Control Circuit (2H0)
<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694</u>	Cooling Fan Relay
<u>DTC P0597-P0599</u>	Engine Coolant Thermostat Heater Control
<u>DTC P112F</u>	Radiator Coolant Temperature Sensor Not Plausible
<u>DTC P2181</u>	Engine Cooling System Performance
<u>DTC P2600-P2603</u>	Auxiliary Coolant Pump

ENGINE MECHANICAL - 1.4L (LE2) - DIAGNOSTIC TROUBLE CODES

ENGINE MECHANICAL - 1.4L (LE2) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P06DA-P06DE</u>	Engine Oil Pressure Control Solenoid Valve

FIXED AND MOVEABLE WINDOWS - DIAGNOSTIC TROUBLE CODES

FIXED AND MOVEABLE WINDOWS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0283</u>	Rear Defogger Circuit
<u>DTC B316B, B317A, B318A, or B319A</u>	Window Switches
<u>DTC B3205</u>	Driver Window Motor

HORN SYSTEM - DIAGNOSTIC TROUBLE CODES

HORN SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B2750</u>	Horn Relay Secondary Circuit

HVAC SYSTEM - AUTOMATIC - DIAGNOSTIC TROUBLE CODES

HVAC SYSTEM - AUTOMATIC - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0163, B0183, or B1405</u>	Passenger Compartment Temperature Sensor/Solar Load Sensor/Control Module Voltage Reference Output 2
<u>DTC B0173, B0178, B0509, B0514 or B3933</u>	Air Temperature Sensor/Air Conditioning Evaporator Temperature Sensor
<u>DTC B018A, B048C, B048F, or B1395</u>	Windshield Temperature Sensor/Humidity Sensor Temperature
<u>DTC B0193</u>	Front Blower Motor Speed
<u>DTC B0223, B022A, B0233, B023A, B0408, or B0418</u>	Recirculate Position Command/Air Flow Control/HVAC Actuators/Temperature Control
<u>DTC B048D or B048E</u>	Auxiliary Heater System
<u>DTC P0532 or P0533</u>	Air Conditioning (A/C) Refrigerant Pressure Sensor
<u>DTC P0645, P0646, or P0647</u>	Air Conditioning (A/C) Compressor Clutch Relay Control

HVAC SYSTEM - MANUAL - DIAGNOSTIC TROUBLE CODES

HVAC SYSTEM - MANUAL - DIAGNOSTIC TROUBLE CODES

DTC	Description
-----	-------------

DTC	Description
<u>DTC B0193</u>	Front Blower Motor Speed Circuit
<u>DTC B0223</u>	Recirculate Position Command 1 Circuit (C60)
<u>DTC B0223, B0233, B023A, or B0408</u>	Recirculate Position Command 1 Circuit/Air Flow Control Circuit/HVAC Actuators Supply Voltage/Main Temperature Control Circuit (C67)
<u>DTC B3933</u>	Air Conditioning Evaporator Temperature Sensor Circuit
<u>DTC P0532 or P0533</u>	Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit Low/High Voltage
<u>DTC P0645, P0646, or P0647</u>	Air Conditioning (A/C) Compressor Clutch Relay Control Circuit

HYDRAULIC BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

HYDRAULIC BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C025E</u>	Brake Booster
<u>DTC C0267</u>	Low Brake Fluid Indicated
<u>DTC C027B</u>	Brake Booster
<u>DTC P050F</u>	Brake Booster Weak Vacuum
<u>DTC P0556, P0557, or P0558</u>	Brake Booster Pressure Sensor

IMMOBILIZER SYSTEM - DIAGNOSTIC TROUBLE CODES

IMMOBILIZER SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B2955</u>	Security Sensor Data Circuit
<u>DTC B302A</u>	Mobile Telephone Communications Interface Requested Immobilization
<u>DTC B3031</u>	Security Controller In Learn Mode
<u>DTC B3055</u>	No Transponder Modulation or No Transponder
<u>DTC B305C</u>	Immobilizer Transponder of Wrong Type Programmed
<u>DTC B3060</u>	Unprogrammed Transponder Identification Code Received
<u>DTC B389A</u>	Environment Identification
<u>DTC B3902</u>	Incorrect Immobilizer Identifier Received
<u>DTC B3924-B3928</u>	Incorrect Environmental Identifier Received
<u>DTC B3935</u>	Transponder Authentication
<u>DTC B3976</u>	Unconfigured Transponder
<u>DTC B3978-B3982</u>	Incorrect Environmental Identifier Received
<u>DTC B3984</u>	Device 1 Environment Identifier Not Programmable
<u>DTC P0513</u>	Immobilizer Key Incorrect
<u>DTC P0633</u>	Immobilizer Key Not Programmed
<u>DTC P162B</u>	Remote Vehicle Speed Limiting Signal Message Counter Incorrect
<u>DTC P1630</u>	Immobilizer Learn Mode Active
<u>DTC P1631</u>	Immobilizer Fuel Enable Signal Not Correct
<u>DTC P1649</u>	Immobilizer Security Code Not Programmed
<u>DTC P1677</u>	Immobilizer System Disabled

INSTRUMENT PANEL SYSTEM DISPLAYS AND GAUGES - DIAGNOSTIC TROUBLE CODES

INSTRUMENT PANEL SYSTEM DISPLAYS AND GAUGES - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0158</u>	Ambient Air Temperature Sensor
<u>DTC B0550</u>	Odometer Circuit General Memory Malfunction
<u>DTC B071F</u>	Transmission Range Indicator
<u>DTC B1370</u>	Control Module Ignition On
<u>DTC B3567</u>	Info Display Select Switch
<u>DTC P0070</u>	Ambient Air Temperature Sensor Circuit
<u>DTC P0071-P0074</u>	Ambient Air Temperature Sensor
<u>DTC P0461-P0464</u>	Fuel Level Sensor (FWD)
<u>DTC P0461-P0464, P2066, P2067, or P2068</u>	Fuel Level Sensor (AWD)
<u>DTC P0520</u>	Engine Oil Pressure Switch Circuit
<u>DTC P0521</u>	Engine Oil Pressure Sensor Performance Malfunction (without LE2)
<u>DTC P0521, P0522, or P0523</u>	Engine Oil Pressure Sensor (with LE2)

KEYLESS ENTRY SYSTEM AND REMOTE FUNCTIONS - DIAGNOSTIC TROUBLE CODES

KEYLESS ENTRY SYSTEM AND REMOTE FUNCTIONS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B305D</u>	Challenge Active Circuit
<u>DTC B3101</u>	Keyless Entry Data Link Circuit
<u>DTC B3105</u>	Keyless Entry Transmitters
<u>DTC B3106</u>	Keyless Entry Data Link
<u>DTC B3109-B3113</u>	Keyless Entry Transmitter 1-5 Battery
<u>DTC B310D-B310E</u>	Keyless Entry Transmitter 6-8 Battery
<u>DTC B3119</u>	Keyless Entry Antenna 1
<u>DTC B3120</u>	Keyless Entry Antenna 2
<u>DTC B3121</u>	Keyless Entry Antenna 3
<u>DTC B3122</u>	Keyless Entry Antenna 4
<u>DTC B3123</u>	Keyless Entry Antenna 5
<u>DTC B3124</u>	Keyless Entry Antenna 6

LIGHTING SYSTEM - DIAGNOSTIC TROUBLE CODES

LIGHTING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1395</u>	Control Module Voltage Reference Output 1 Circuit Low/High Voltage
<u>DTC B1480</u>	Battery Rundown Protection Circuit Short to Ground
<u>DTC B2530</u>	Front Fog Lamps Control Circuit
<u>DTC B2545</u>	Backup Lamps Circuit
<u>DTC B2570</u>	Rear Compartment Courtesy Lamp Control Circuit Short to Ground
<u>DTC B2575 or B2699</u>	Headlamp Control Circuit
<u>DTC B257A</u>	Headlamp Switch Input Signals Correlation Malfunction
<u>DTC B2580</u>	High Beam Control Circuit
<u>DTC B2585 or B3867</u>	Left/Right Park Lamps Control Circuit
<u>DTC B259A or B259B</u>	Left/Right Cornering Lamp Relay Control Circuit Open

DTC	Description
<u>DTC B260B or B260C</u>	Left/Right Daytime Running Lamp Relay Control Circuit
<u>DTC B2610</u>	Passenger Compartment Dimming 1 Circuit
<u>DTC B2615</u>	Passenger Compartment Dimming 2 Circuit Short to Ground
<u>DTC B2625</u>	Display Dimming Pulse Width Modulation Output Circuit Short to Ground
<u>DTC B2645</u>	Ambient Light Sensor Circuit Low/High Voltage
<u>DTC B2740</u>	Front Fog Lamp Switch Circuit Malfunction
<u>DTC B3596</u>	Hazard Lamps Request Circuit Malfunction
<u>DTC B3600</u>	Passenger Compartment Dimming Request Signal Circuit Low/High Voltage
<u>DTC B3650</u>	High Beam Request Signal Circuit Performance - Signal Invalid
<u>DTC B3806</u>	High Beam and Headlamp Flash Select Circuit Malfunction
<u>DTC B3881 or B3882</u>	Tail Lamp Circuit
<u>DTC B3883</u>	License Plate Lamp Circuit
<u>DTC B3884</u>	Center High Mounted Brake Lamp Circuit Short to Ground
<u>DTC B3948 or B3949</u>	Left/Right Front Turn Signal Circuit
<u>DTC B3950 or B3951</u>	Left/Right Rear Turn Signal Circuit
<u>DTC C0277 or C0890</u>	Brake Pedal Position Sensor Circuit/Control Module Voltage Reference Output 3 Circuit Voltage
<u>DTC C0297</u>	Brake Applied Output Circuit Short to Ground

MANUAL TRANSMISSION - D16/D20 (M4P) - DIAGNOSTIC TROUBLE CODES

MANUAL TRANSMISSION - D16/D20 (M4P) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0502 or P0503</u>	Vehicle Speed Sensor
<u>DTC P0806-P0808</u>	Clutch Pedal Position (CPP) Sensor
<u>DTC P080A</u>	Clutch Pedal Position (CPP) Not Learned

MANUAL TRANSMISSION - M20/M32 (MR5) - DIAGNOSTIC TROUBLE CODES

MANUAL TRANSMISSION - M20/M32 (MR5) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0502 or P0503</u>	Vehicle Speed Sensor
<u>DTC P0806-P0808</u>	Clutch Pedal Position (CPP) Sensor
<u>DTC P080A</u>	Clutch Pedal Position (CPP) Not Learned

MIRROR SYSTEM - DIAGNOSTIC TROUBLE CODES

MIRROR SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B154A or B154B</u>	Driver/Passenger Mirror Internal Malfunction

OBJECT DETECTION SYSTEM AND PEDESTRIAN PROTECTION - DIAGNOSTIC TROUBLE CODES

OBJECT DETECTION SYSTEM AND PEDESTRIAN PROTECTION - DIAGNOSTIC**TROUBLE CODES**

DTC	Description
<u>DTC B094C</u>	Right Side Object Detection Control Module
<u>DTC B0954, B0955, B0956, or B0957</u>	Parking Assist Front Sensor Circuits
<u>DTC B0958, B0959, B0960, or B0961</u>	Parking Assist Rear Sensor Circuits
<u>DTC B0967 or B0968</u>	Parking Assist On/Off Switch
<u>DTC B0987</u>	Vehicle Direction Camera Indicator Circuit
<u>DTC B1011</u>	System Disabled Information Stored Malfunction
<u>DTC B1015</u>	Vehicle Identification Number Information
<u>DTC B101D</u>	Electronic Control Unit Hardware
<u>DTC B127B</u>	Rear Vision Camera (Buick)
<u>DTC B127B</u>	Rear Vision Camera (Chevrolet)
<u>DTC B1405</u>	Control Module Voltage Reference Output 2 Circuit (Rear Park Assist - UD7)
<u>DTC B1405</u>	Control Module Voltage Reference Output 2 Circuit (Front and Rear Park Assist - UD5)
<u>DTC B356A</u>	Vehicle Direction Warning Switch Circuit Short

POWER DOOR LOCK SYSTEM AND RELEASE SYSTEMS - DIAGNOSTIC TROUBLE CODES**POWER DOOR LOCK SYSTEM AND RELEASE SYSTEMS - DIAGNOSTIC TROUBLE CODES**

DTC	Description
<u>DTC B1474 or B3849</u>	Exterior Door Handle Switch
<u>DTC B1534 or B1535</u>	Left/Right Rear Door Handle Switch Circuit
<u>DTC B297B or B297C</u>	Driver Door Open Switch Circuit
<u>DTC B3125, B3130, or B3135</u>	All Doors Unlock/Lock Circuit
<u>DTC B3140, B3145, B3150, or B3155</u>	Driver Door Unlock/Lock Switch
<u>DTC B3245</u>	Rear Cargo Door Lock Actuator Circuit

POWER SEAT SYSTEM - DIAGNOSTIC TROUBLE CODES**POWER SEAT SYSTEM - DIAGNOSTIC TROUBLE CODES**

DTC	Description
<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>	Driver Seat Switches
<u>DTC B1825, B2355, B2365, or B2375</u>	Driver Seat Position Sensor
<u>DTC B3920</u>	Driver Seat Motors Group

POWER STEERING SYSTEM - DIAGNOSTIC TROUBLE CODES**POWER STEERING SYSTEM - DIAGNOSTIC TROUBLE CODES**

DTC	Description
<u>DTC C0176</u>	Control Module Temperature Sensor High Temperature
<u>DTC C0475</u>	Electric Steering Motor
<u>DTC C0545</u>	Steering Wheel Torque Sensor

REAR DRIVE AXLE - DIAGNOSTIC TROUBLE CODES**REAR DRIVE AXLE - DIAGNOSTIC TROUBLE CODES**

DTC	Description

DTC	Description
<u>DTC C0417</u>	Rear Drive Clutch Control Solenoid Valve Control Circuit
<u>DTC C0561</u>	System Disabled Information Stored

SEAT BELT SYSTEM - DIAGNOSTIC TROUBLE CODES

SEAT BELT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0072 or B0073</u>	Driver/Passenger Seat Belt Switch Circuit
<u>DTC B059A</u>	Passenger Seat Belt Indicator Circuit

SEAT HEATING SYSTEM AND SEAT COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

SEAT HEATING SYSTEM AND SEAT COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1925 or B2170</u>	Driver Seat Cushion Heater Sensor (Without Memory AAG)
<u>DTC B1925 or B2170</u>	Driver Seat Cushion Heater Sensor (With Memory AAG)
<u>DTC B2345</u>	Seat Heater Disable Circuit Low Voltage/High Temperature (Without Memory AAG)
<u>DTC B2345</u>	Seat Heater Disable Circuit Low Voltage High/Temperature (With Memory AAG)
<u>DTC B2425 or B2430</u>	Driver/Passenger Seat Cushion Heater (Without Memory AAG)
<u>DTC B2425 or B2430</u>	Driver/Passenger Seat Cushion Heater (With Memory AAG)
<u>DTC B242A</u>	Seat Heaters Common (Without Memory AAG)
<u>DTC B242A</u>	Seat Heaters Common (With Memory AAG)

SECONDARY AND CONFIGURABLE CUSTOMER CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

SECONDARY AND CONFIGURABLE CUSTOMER CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1405</u>	Control Module Voltage Reference Output 2
<u>DTC B1529</u>	Control Module Voltage Reference Output 5
<u>DTC B3622</u>	Steering Wheel Controls Signal Circuit High Voltage

SHIFT LOCK CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

SHIFT LOCK CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B270A</u>	Park Lock Solenoid Control

SUNROOF SYSTEM - DIAGNOSTIC TROUBLE CODES

SUNROOF SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1023</u>	Integral Switch Malfunction
<u>DTC B144C</u>	Inverted Run/Start Power Relay Circuit

DTC	Description
<u>DTC B2515</u>	Steering Column Lock Motor Feedback Circuit Not Plausible
<u>DTC B2897</u>	Steering Column Lock Motor Lock Circuit
<u>DTC B2910</u>	Steering Column Lock Password Incorrect
<u>DTC B305A</u>	No Response From Steering Column Lock Received

SUPPLEMENTAL INFLATABLE RESTRAINT SYSTEM - DIAGNOSTIC TROUBLE CODES

SUPPLEMENTAL INFLATABLE RESTRAINT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0012 or B0013</u>	Driver Steering Wheel Air Bag Deployment Loop Stage
<u>DTC B0014, B0021, B0031, or B0038</u>	Driver Seat Side Air Bag Deployment Loop
<u>DTC B0015, B001A, B001B, or B0022</u>	Driver Seat Belt Retractor Pretensioner Deployment Loop
<u>DTC B0016, B0018, B0023, or B0025</u>	Air Bag Deployment Loop
<u>DTC B0017 or B0024</u>	Driver Knee Air Bag Deployment Loop
<u>DTC B0019 or B0020</u>	Passenger Instrument Panel Air Bag Deployment Loop Stage (without AY0 or AYF)
<u>DTC B0019 or B0020</u>	Passenger Instrument Panel Air Bag Deployment Loop Stage (with AY0 or AYF)
<u>DTC B0052</u>	Deployment Commanded
<u>DTC B0071</u>	Passenger Seat Belt Tension Sensor
<u>DTC B0074</u>	Passenger Presence Sensor
<u>DTC B0081</u>	Passenger Presence Module (Inflatable Restraint Sensing and Diagnostic Module)
<u>DTC B0081</u>	Passenger Presence Module (Passenger Presence Module)
<u>DTC B0083-B0088</u>	Left/Right Front Impact Sensor
<u>DTC B009</u>	Center Front Impact Sensor
<u>DTC B1001</u>	Option Configuration
<u>DTC B1019</u>	System Configuration Error

TIRE PRESSURE MONITORING SYSTEM - DIAGNOSTIC TROUBLE CODES

TIRE PRESSURE MONITORING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C0569</u>	System Configuration Malfunction
<u>DTC C0750, C0755, C0760, or C0765</u>	Tire Pressure Sensor
<u>DTC C0775</u>	Tire Pressure Monitoring System Sensors Malfunction

WIPER SYSTEM AND WASHER SYSTEM - DIAGNOSTIC TROUBLE CODES

WIPER SYSTEM AND WASHER SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B370A</u>	Rain Sensor
<u>DTC B370B</u>	Rear Wiper Function Control Circuit
<u>DTC B3715 or B3875</u>	Windshield Wiper Relay Circuit/Windshield Wiper High Speed Relay Circuit

DTC	Description
<u>DTC B3811</u>	Rear Washer Relay Circuit
<u>DTC B3873</u>	Front Washer Relay Circuit

WIRING SYSTEMS AND POWER MANAGEMENT - DIAGNOSTIC TROUBLE CODES

WIRING SYSTEMS AND POWER MANAGEMENT - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B097B</u>	Power Mode Start Switch Circuit
<u>DTC B097C</u>	Power Mode Run/Start Indicator Circuit
<u>DTC B1370</u>	Control Module Ignition On and Start Circuit
<u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>	Body Control Module (BCM) Ignition Circuits
<u>DTC B1445</u>	Control Module Voltage Output Circuit (Body Control Module)
<u>DTC B1445</u>	Device Voltage Output 1 Circuit (Power Supply Transformer)
<u>DTC B144A</u>	RUN Power Relay Circuit
<u>DTC B144B</u>	Run/Crank Power Relay Circuit
<u>DTC B144D</u>	Device Voltage Output 2 Circuit
<u>DTC B1451</u>	Accessory Power Circuit
<u>DTC B147E or B147F</u>	Battery Saver Relay Set/Reset Secondary Circuit (With LUV)
<u>DTC B147E or B147F</u>	Battery Saver Relay Set/Reset Secondary Circuit (With LE2)
<u>DTC B305E</u>	Interruptible RAP Relay Circuit
<u>DTC P156D</u>	DC/DC Converter Ignition Switch Run/Start Position Signal Message Counter Incorrect
<u>DTC P2534 or P2535</u>	Ignition On/Start Switch Circuit Low/High Voltage
<u>DTC P2537</u>	Ignition Accessory Switch Circuit Low Voltage
<u>DTC P305B or P305C</u>	DC/DC Converter Ignition On/Start Switch Circuit High/Low Voltage