

2017 ELECTRICAL**Wiring Systems And Power Management - Component Connector End Views - Index - Encore****COMPONENT CONNECTOR END VIEWS - INDEX - ENCORE****COMPONENT CONNECTOR END VIEWS - INDEX - ENCORE**

Description
<u>A3L Sunshade - Left</u>
<u>A3R Sunshade - Right</u>
<u>A7 Fuel Pump and Level Sensor Assembly</u>
<u>A9A Outside Rearview Mirror - Driver (UFT)</u>
<u>A9A Outside Rearview Mirror - Driver (-UFT)</u>
<u>A9B Outside Rearview Mirror - Passenger (UFT)</u>
<u>A9B Outside Rearview Mirror - Passenger (-UFT)</u>
<u>A10 Inside Rearview Mirror</u>
<u>A11 Radio X1 (IO5/IO6)</u>
<u>A11 Radio X1 (UKS/IOD)</u>
<u>A11 Radio X2 (IO5/IO6)</u>
<u>A11 Radio X6</u>
<u>A11 Radio X9</u>
<u>A14D Seat Lumbar Support Pump - Driver</u>
<u>A14P Seat Lumbar Support Pump - Passenger (AQ5)</u>
<u>A23D Door Latch Assembly - Driver</u>
<u>A23LR Door Latch Assembly - Left Rear</u>
<u>A23P Door Latch Assembly - Passenger</u>
<u>A23RR Door Latch Assembly - Right Rear</u>
<u>A24LR Door Handle Assembly - Left Rear Exterior</u>
<u>A24RR Door Handle Assembly - Right Rear Exterior</u>
<u>A26 HVAC Controls</u>
<u>B1 A/C Refrigerant Pressure Sensor</u>
<u>B5LF Wheel Speed Sensor - Left Front</u>
<u>B5LR Wheel Speed Sensor - Left Rear</u>
<u>B5RF Wheel Speed Sensor - Right Front</u>
<u>B5RR Wheel Speed Sensor - Right Rear</u>
<u>B7B Air Temperature Sensor - Duct Lower (C4P)</u>
<u>B7D Air Temperature Sensor - Duct Left Lower (CJ2)</u>
<u>B7E Air Temperature Sensor - Duct Right Lower (CJ2)</u>
<u>B7H Air Temperature Sensor - Duct Left Upper (CJ2)</u>
<u>B7J Air Temperature Sensor - Duct Right Upper (CJ2)</u>
<u>B9 Ambient Air Temperature Sensor (UGM)</u>
<u>B9 Ambient Air Temperature Sensor (-UGM)</u>
<u>B10B Ambient Light/Sunload Sensor</u>
<u>K71 Transmission Control Module X3 (MM1)</u>
<u>K71 Transmission Control Module X2 (MM1)</u>
<u>B18 Battery Current Sensor</u>
<u>B19B Brake Booster Vacuum Sensor</u>
<u>B20 Brake Fluid Level Switch</u>
<u>B22 Brake Pedal Position Sensor (MM1)</u>
<u>B23E Camshaft Position Sensor - Exhaust (LE2)</u>

Description
<u>B23E Camshaft Position Sensor - Exhaust (LUV/2H0).</u>
<u>B23F Camshaft Position Sensor - Intake (LE2).</u>
<u>B23F Camshaft Position Sensor - Intake (LUV).</u>
<u>B24 Mobile Telephone Microphone</u>
<u>B26 Crankshaft Position Sensor (LE2).</u>
<u>B26 Crankshaft Position Sensor (LUV).</u>
<u>B34 Engine Coolant Temperature Sensor (LE2).</u>
<u>B34 Engine Coolant Temperature Sensor (LUV/2H0).</u>
<u>B37B Engine Oil Pressure Sensor</u>
<u>B37 Engine Oil Pressure Switch (LUV).</u>
<u>B39 A/C Evaporator Temperature Sensor</u>
<u>B46B Fuel Level Sensor - Secondary.</u>
<u>B47B Fuel Rail Pressure Sensor (LE2).</u>
<u>B47 Fuel Pressure Sensor</u>
<u>B52A Heated Oxygen Sensor 1 (LE2).</u>
<u>B52A Heated Oxygen Sensor 1 (LUV).</u>
<u>B52B Heated Oxygen Sensor 2 (LE2).</u>
<u>B52B Heated Oxygen Sensor 2 (LUV).</u>
<u>B55 Engine Hood Switch</u>
<u>B59L Front Impact Sensor - Left</u>
<u>B59R Front Impact Sensor - Right</u>
<u>B60 Passenger Presence Sensor</u>
<u>B61P Seat Belt Tension Sensor - Passenger</u>
<u>B63LF Side Impact Sensor - Left Front</u>
<u>B63LR Side Impact Sensor - Left Rear</u>
<u>B63RF Side Impact Sensor - Right Front</u>
<u>B63RR Side Impact Sensor - Right Rear</u>
<u>B65 Intake Manifold Pressure and Air Temperature Sensor (LE2).</u>
<u>B68 Knock Sensor (LE2).</u>
<u>B68 Knock Sensor (LUV).</u>
<u>B74 Manifold Absolute Pressure Sensor (LE2).</u>
<u>B75C Multifunction Intake Air Sensor</u>
<u>B77LF Radio Volume Compensator Interior Noise Microphone - Left Front</u>
<u>B77R Radio Volume Compensator Interior Noise Microphone - Rear</u>
<u>B77RF Radio Volume Compensator Interior Noise Microphone - Right Front</u>
<u>B80 Park Brake Switch</u>
<u>B87 Rearview Camera (-UVC).</u>
<u>B88D Seat Belt Switch - Driver</u>
<u>B88P Seat Belt Switch - Passenger</u>
<u>B99 Steering Wheel Angle Sensor</u>
<u>B107 Accelerator Pedal Position Sensor</u>
<u>B110 Battery Sensor Module</u>
<u>B111B Turbocharger Boost/Intake Air Temperature Sensor</u>
<u>B150 Fuel Tank Pressure Sensor</u>
<u>B153D Seat Belt Buckle - Driver</u>
<u>B153P Seat Belt Buckle - Passenger</u>
<u>B160 Windshield Temperature and Inside Moisture Sensor</u>
<u>B177 Rain/Ambient Light Sensor Module</u>
<u>B203 Radiator Coolant Temperature Sensor</u>
<u>B218L Side Object Sensor Module - Left</u>
<u>B218R Side Object Sensor Module - Right</u>
<u>B224 Multifunction Windshield Sensor</u>

Description
<u>B280 Automatic Transmission Accumulator Solenoid Valve</u>
<u>B306A Parking Assist Sensor - Front Left Outer</u>
<u>B306B Parking Assist Sensor - Front Left Middle</u>
<u>B306C Parking Assist Sensor - Front Right Middle</u>
<u>B306D Parking Assist Sensor - Front Right Outer</u>
<u>B306E Parking Assist Sensor - Rear Left Outer</u>
<u>B306F Parking Assist Sensor - Rear Left Middle</u>
<u>B306G Parking Assist Sensor - Rear Right Middle</u>
<u>B306H Parking Assist Sensor - Rear Right Outer</u>
<u>C1 Battery (-)</u>
<u>C1 Battery (+)</u>
<u>C3 Telematics Communication Interface Control Module Battery</u>
<u>E2LR Side Marker Lamp - Left Rear</u>
<u>E2RR Side Marker Lamp - Right Rear</u>
<u>E4E Headlamp - Left High Beam (T4L)</u>
<u>E4F Headlamp - Right High Beam (T4L)</u>
<u>E4G Headlamp - Left Low Beam</u>
<u>E4GA Headlamp - Left Low Beam Inner (T4L)</u>
<u>E4GB Headlamp - Left Low Beam Outer (T4L)</u>
<u>E4H Headlamp - Right Low Beam</u>
<u>E4HA Headlamp - Right Low Beam Inner (T4L)</u>
<u>E4HB Headlamp - Right Low Beam Outer (T4L)</u>
<u>E5A Backup Lamp - Left</u>
<u>E5B Backup Lamp - Right</u>
<u>E6 Center High Mounted Stop Lamp</u>
<u>E7L License Plate Lamp - Left</u>
<u>E7R License Plate Lamp - Right</u>
<u>E8S Rear Compartment Courtesy Lamp</u>
<u>E14A Seat Heating Element - Driver Back</u>
<u>E14B Seat Heating Element - Driver Cushion</u>
<u>E14C Seat Heating Element - Passenger Back</u>
<u>E14D Seat Heating Element - Passenger Cushion</u>
<u>E15 Steering Wheel Heater</u>
<u>E17D Outside Rearview Mirror Glass - Driver X1</u>
<u>E17D Outside Rearview Mirror Glass - Driver X2</u>
<u>E17P Outside Rearview Mirror Glass - Passenger X1</u>
<u>E17P Outside Rearview Mirror Glass - Passenger X2</u>
<u>E18 Rear Defogger Grid X1</u>
<u>E18 Rear Defogger Grid X2</u>
<u>E29LF Fog Lamp - Left Front</u>
<u>E29RF Fog Lamp - Right Front</u>
<u>E32 Cigarette Lighter Receptacle</u>
<u>E36AH Dome Lamp</u>
<u>E37A Dome/Reading Lamps</u>
<u>E40 Electrical Auxiliary Heater X1</u>
<u>E40 Electrical Auxiliary Heater X2</u>
<u>E41 Engine Coolant Thermostat Heater (LUV)</u>
<u>E42L Tail Lamp Assembly - Left (UGE)</u>
<u>E42R Tail Lamp Assembly - Right (UGE)</u>
<u>E67L Multifunction LED - Left Headlamp (T4L)</u>
<u>E67R Multifunction LED - Right Headlamp (T4L)</u>
<u>F105L Roof Rail Air Bag - Left</u>

Description
<u>F105R Roof Rail Air Bag - Right</u>
<u>F106D Seat Side Air Bag - Driver</u>
<u>F106LR Seat Side Air Bag - Left Rear</u>
<u>F106P Seat Side Air Bag - Passenger</u>
<u>F106RR Seat Side Air Bag - Right Rear</u>
<u>F112D Seat Belt Retractor Pretensioner - Driver</u>
<u>F112P Seat Belt Retractor Pretensioner - Passenger</u>
<u>F113D Seat Belt Anchor Pretensioner - Driver</u>
<u>F113P Seat Belt Anchor Pretensioner - Passenger</u>
<u>F114D Knee Air Bag - Driver</u>
<u>F114P Knee Air Bag - Passenger</u>
<u>G13 Generator X1</u>
<u>G13 Generator X2</u>
<u>G18 High Pressure Fuel Pump</u>
<u>G24 Windshield Washer Pump</u>
<u>G36 Auxiliary Heater Coolant Pump (LE2).</u>
<u>G46L Cooling Fan - Left Headlamp (T4L).</u>
<u>G46R Cooling Fan - Right Headlamp (T4L).</u>
<u>K8 Blower Motor Control Module X1</u>
<u>K8 Blower Motor Control Module X2</u>
<u>K9 Body Control Module X1</u>
<u>K9 Body Control Module X2</u>
<u>K9 Body Control Module X3</u>
<u>K9 Body Control Module X4</u>
<u>K9 Body Control Module X5</u>
<u>K9 Body Control Module X6</u>
<u>K9 Body Control Module X7</u>
<u>K17 Electronic Brake Control Module (KL9).</u>
<u>K17 Electronic Brake Control Module (-JL4).</u>
<u>K20 Engine Control Module X1 (LE2).</u>
<u>K20 Engine Control Module X1 (LUV).</u>
<u>K20 Engine Control Module X2 (LE2).</u>
<u>K20 Engine Control Module X2 (LUV).</u>
<u>K20 Engine Control Module X3 (LE2).</u>
<u>K20 Engine Control Module X3 (LUV).</u>
<u>K29 Seat Heating Control Module X1</u>
<u>K29 Seat Heating Control Module X2</u>
<u>K29 Seat Heating Control Module X3</u>
<u>K32 Steering Wheel Heating Control Module</u>
<u>K33 HVAC Control Module X1</u>
<u>K33 HVAC Control Module X2</u>
<u>K33 HVAC Control Module X3</u>
<u>K33 HVAC Control Module X4</u>
<u>K35 Ignition Coil Module (LUV).</u>
<u>K36 Inflatable Restraint Sensing and Diagnostic Module X1 (AY0).</u>
<u>K36 Inflatable Restraint Sensing and Diagnostic Module X1 (AYF).</u>
<u>K36 Inflatable Restraint Sensing and Diagnostic Module X2 (AY0/AYF).</u>
<u>K38 Chassis Control Module</u>
<u>K40 Seat Memory Control Module X1 (AAG).</u>
<u>K40 Seat Memory Control Module X2 (AAG).</u>
<u>K40 Seat Memory Control Module X3 (AAG).</u>
<u>K40 Seat Memory Control Module X4 (AAG).</u>

Description
<u>K40 Seat Memory Control Module X5 (AAG)</u>
<u>K43 Power Steering Control Module X1</u>
<u>K43 Power Steering Control Module X2</u>
<u>K47 Rear Differential Clutch Control Module X1</u>
<u>K47 Rear Differential Clutch Control Module X2 (F46)</u>
<u>K56 Serial Data Gateway Module X1</u>
<u>K56 Serial Data Gateway Module X2</u>
<u>K60 Steering Column Lock Module</u>
<u>K61 Sunroof Control Module</u>
<u>K73 Telematics Communication Interface Control Module X1</u>
<u>K73 Telematics Communication Interface Control Module X2</u>
<u>K74 Human Machine Interface Control Module X1</u>
<u>K74 Human Machine Interface Control Module X2</u>
<u>K74 Human Machine Interface Control Module X3 (USR/UST)</u>
<u>K77 Remote Control Door Lock Receiver</u>
<u>K84 Keyless Entry Control Module X1</u>
<u>K84 Keyless Entry Control Module X2</u>
<u>K85 Passenger Presence Module</u>
<u>K89 Immobilizer Control Module (BTM)</u>
<u>K109 Frontview Camera Module</u>
<u>K166L Multifunction LED Control Module - Left Headlamp X1 (T4L)</u>
<u>K166L Multifunction LED Control Module - Left Headlamp X2 (T4L)</u>
<u>K166R Multifunction LED Control Module - Right Headlamp X1 (T4L)</u>
<u>K166R Multifunction LED Control Module - Right Headlamp X2 (T4L)</u>
<u>K182 Parking Assist Control Module X1</u>
<u>K182 Parking Assist Control Module X2</u>
<u>K182 Parking Assist Control Module X3</u>
<u>K189L Headlamp/Cornering Lamp Control Module - Left (T4L)</u>
<u>K189R Headlamp/Cornering Lamp Control Module - Right (T4L)</u>
<u>M6L Air Temperature Door Actuator - Left (CJ2)</u>
<u>M6R Air Temperature Door Actuator - Right (CJ2)</u>
<u>M6 Air Temperature Door Actuator (C67)</u>
<u>M8 Blower Motor (C41/C60)</u>
<u>M9 Brake Booster Pump Motor</u>
<u>M30 Liftgate Latch</u>
<u>M37 Mode Door Actuator (CJ2)</u>
<u>M45 Rear Wiper Motor</u>
<u>M46 Air Recirculation Door Actuator (CJ2)</u>
<u>M50D Seat Front Vertical Motor - Driver</u>
<u>M50P Seat Front Vertical Motor - Passenger (AQ5)</u>
<u>M51D Seat Horizontal Motor - Driver</u>
<u>M51P Seat Horizontal Motor - Passenger (AQ5)</u>
<u>M55D Seat Rear Vertical Motor - Driver</u>
<u>M55P Seat Rear Vertical Motor - Passenger (AQ5)</u>
<u>M64 Starter Motor X1 (LE2)</u>
<u>M64 Starter Motor X1 (LUV)</u>
<u>M64 Starter Motor X2 (LE2/KL9)</u>
<u>M64 Starter Motor X2 (LUV-KPK)</u>
<u>M64 Starter Motor X2 (LUV/KPK/F46)</u>
<u>M74D Window Motor - Driver</u>
<u>M74LR Window Motor - Left Rear (AEQ)</u>
<u>M74P Window Motor - Passenger (AEQ)</u>

Description
<u>M74RR Window Motor - Right Rear (AEQ).</u>
<u>M75 Windshield Wiper Motor</u>
<u>M97 Fuel Fill Door Lock Actuator</u>
<u>P2 Transmission Shift Lever Position Indicator</u>
<u>P12A Horn - High Note</u>
<u>P12B Horn - Low Note</u>
<u>P16 Instrument Cluster</u>
<u>P17 Info Display Module X1</u>
<u>P17 Info Display Module X2 (UQG/UQA&NKC).</u>
<u>P19AC Speaker - Subwoofer</u>
<u>P19AG Speaker - Left Front Door (UQA).</u>
<u>P19AH Speaker - Right Front Door (UQA).</u>
<u>P19AL Speaker - Left Rear Door (UQ3).</u>
<u>P19AL Speaker - Left Rear Door (UQA).</u>
<u>P19AL Speaker - Left Rear Door (UQG).</u>
<u>P19AM Speaker - Right Rear Door (UQ3).</u>
<u>P19AM Speaker - Right Rear Door (UQA).</u>
<u>P19AM Speaker - Right Rear Door (UQG).</u>
<u>P19H Speaker - Left Front Tweeter</u>
<u>P19V Speaker - Right Front Tweeter</u>
<u>P43 Collision Alert Indicators</u>
<u>Q2 A/C Compressor Clutch</u>
<u>Q6E Camshaft Position Actuator Solenoid Valve - Exhaust (LE2).</u>
<u>Q6E Camshaft Position Actuator Solenoid Valve - Exhaust (LUV).</u>
<u>Q6F Camshaft Position Actuator Solenoid Valve - Intake (LE2).</u>
<u>Q6F Camshaft Position Actuator Solenoid Valve - Intake (LUV).</u>
<u>Q8 Control Solenoid Valve Assembly X1</u>
<u>Q12 Evaporative Emission Purge Solenoid Valve (LE2).</u>
<u>Q12 Evaporative Emission Purge Solenoid Valve (2H0/LFH/LUV).</u>
<u>Q13 Evaporative Emission Vent Solenoid Valve</u>
<u>Q17A Fuel Injector 1 (LE2).</u>
<u>Q17A Fuel Injector 1 (LUV).</u>
<u>Q17B Fuel Injector 2 (LE2).</u>
<u>Q17B Fuel Injector 2 (LUV).</u>
<u>Q17C Fuel Injector 3 (LE2).</u>
<u>Q17C Fuel Injector 3 (LUV).</u>
<u>Q17D Fuel Injector 4 (LE2).</u>
<u>Q17D Fuel Injector 4 (LUV).</u>
<u>Q38 Throttle Body (LE2).</u>
<u>Q38 Throttle Body (2H0/LUV).</u>
<u>Q40 Turbocharger Bypass Solenoid Valve (LE2).</u>
<u>Q40 Turbocharger Bypass Solenoid Valve (LUV).</u>
<u>Q42 Turbocharger Wastegate Solenoid Valve (LE2).</u>
<u>Q42 Turbocharger Wastegate Solenoid Valve (LUV).</u>
<u>Q44 Engine Oil Pressure Control Solenoid Valve (LE2).</u>
<u>Q49 Rear Differential Clutch Solenoid Valve (F46).</u>
<u>R10 Cooling Fan Resistor (LUJ/LUV/LFF/LE2).</u>
<u>S2 Transmission Manual Shift Switch</u>
<u>S3 Transmission Shift Lever</u>
<u>S13D Door Lock Switch - Driver</u>
<u>S13P Door Lock Switch - Passenger</u>
<u>S25 Garage Door Opener</u>

Description
<u>S26 Hazard Warning Switch</u>
<u>S30 Headlamp Switch</u>
<u>S33 Horn Switch X1</u>
<u>S33 Horn Switch X2</u>
<u>S38 Ignition Mode Switch (BTM)</u>
<u>S46B Liftgate Unlatch Switch</u>
<u>S47D Seat Memory Switch - Driver (AAG)</u>
<u>S48A Multifunction Switch - Instrument Panel (UD5)</u>
<u>S48C Multifunction Switch 1 - Instrument Panel</u>
<u>S48D Multifunction Switch 2 - Instrument Panel (UD5/UD7)</u>
<u>S48D Multifunction Switch 2 - Instrument Panel (UFL)</u>
<u>S52 Outside Rearview Mirror Switch</u>
<u>S64D Seat Adjuster Switch - Driver</u>
<u>S64P Seat Adjuster Switch - Passenger</u>
<u>S65D Seat Lumbar Support Switch - Driver</u>
<u>S65P Seat Lumbar Support Switch - Passenger</u>
<u>S70L Steering Wheel Controls Switch - Left</u>
<u>S70R Steering Wheel Controls Switch - Right</u>
<u>S72 Sunroof Switch</u>
<u>S75 Traction Control Switch</u>
<u>S78 Turn Signal/Multifunction Switch</u>
<u>S79D Window Switch - Driver</u>
<u>S79LR Window Switch - Left Rear (AEQ)</u>
<u>S79P Window Switch - Passenger X1 (AAG)</u>
<u>S79P Window Switch - Passenger X1 (-AAG)</u>
<u>S79P Window Switch - Passenger X2 (AAG)</u>
<u>S79RR Window Switch - Right Rear (AEQ)</u>
<u>S82 Windshield Wiper/Washer Switch</u>
<u>S86 Vehicle Stability Control Switch (JL4)</u>
<u>S88 Sunroof Tilt Switch</u>
<u>S112 Fuel Economy Mode Switch</u>
<u>T3 Audio Amplifier X1</u>
<u>T3 Audio Amplifier X2</u>
<u>T3 Audio Amplifier X3</u>
<u>T3 Audio Amplifier X4</u>
<u>T4G Cellular Phone, Navigation, and Digital Radio Antenna (-U2K)</u>
<u>T6 Power Inverter Module</u>
<u>T8A Ignition Coil 1 (LE2)</u>
<u>T8B Ignition Coil 2 (LE2)</u>
<u>T8C Ignition Coil 3 (LE2)</u>
<u>T8D Ignition Coil 4 (LE2)</u>
<u>T10B Keyless Entry Antenna - Instrument Panel Compartment</u>
<u>T10E Keyless Entry Antenna - Rear Compartment</u>
<u>T10 Keyless Entry Antenna</u>
<u>T10K Keyless Entry Antenna - Center Console Rear (BTM)</u>
<u>T10M Keyless Entry Antenna - Driver Door Handle</u>
<u>T10N Keyless Entry Antenna - Passenger Door Handle</u>
<u>T10J Keyless Entry Antenna - Center Console Front</u>
<u>T19 Power Supply Transformer (MM1+KL9)</u>
<u>X81 Accessory Power Receptacle - 110V AC X1</u>
<u>X81 Accessory Power Receptacle - 110V AC X2</u>
<u>E4HB Headlamp - Right Low Beam Outer (T4L)</u>

Description
<u>X83 Auxiliary Audio Input X1</u>
<u>X84 Data Link Connector</u>
<u>X85 Steering Wheel Air Bag Coil X1 (BTM)</u>
<u>X85 Steering Wheel Air Bag Coil X2</u>
<u>X85 Steering Wheel Air Bag Coil X3</u>
<u>X85 Steering Wheel Air Bag Coil X4 (UVD)</u>
<u>X85 Steering Wheel Air Bag Coil X4</u>
<u>X85 Steering Wheel Air Bag Coil X5 (UVD)</u>

mcx30.com