



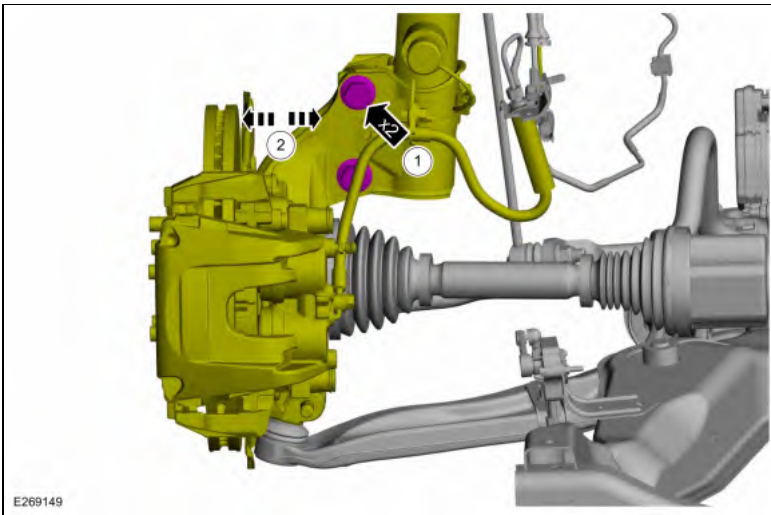

5. Tighten the strut-to-wheel knuckle bolts and nuts.
Torque: 173 lb.ft (235 Nm)

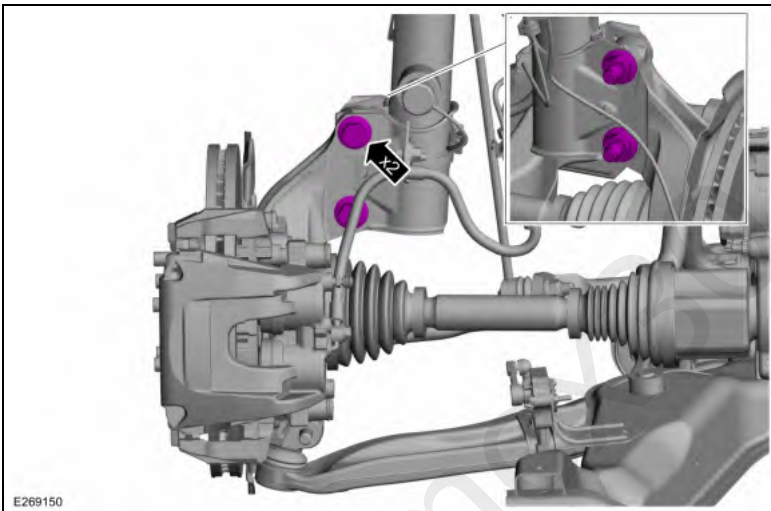

6. Install the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
7. Recheck alignment to verify camber change and adjust front toe if necessary.
Refer to: Front Toe Adjustment (204-00 Suspension System - General Information, General Procedures).