
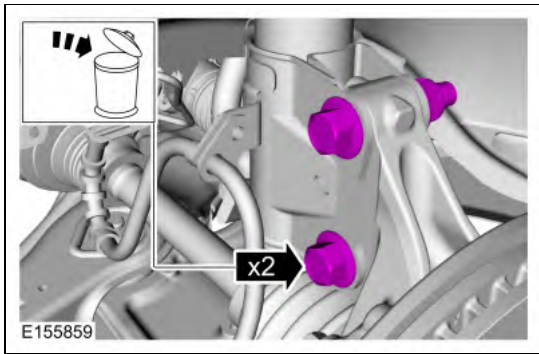


5. Remove the cowl panel.
Refer to: Cowl Panel (501-02 Front End Body Panels, Removal and Installation).
6. Remove and discard the front strut and spring assembly upper bolts and remove the front strut and spring assembly from the vehicle.

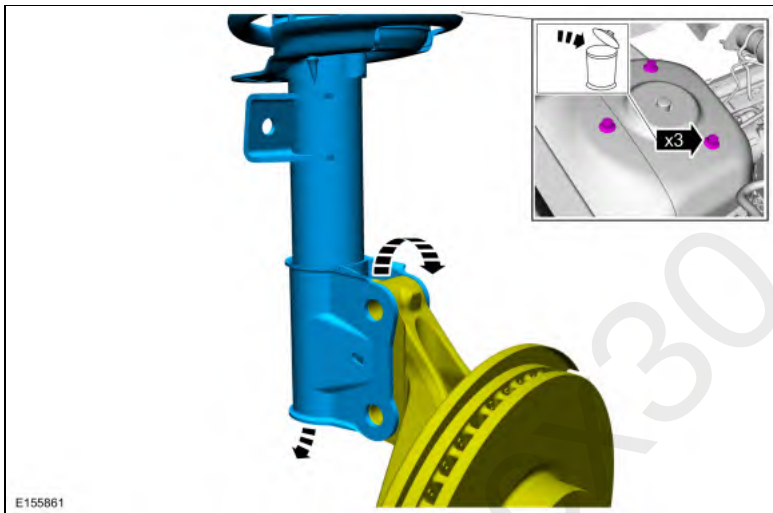

Installation

1. Position the front strut and spring assembly and install the new front strut and spring assembly upper bolts.
Torque: 26 lb.ft (35 Nm)