



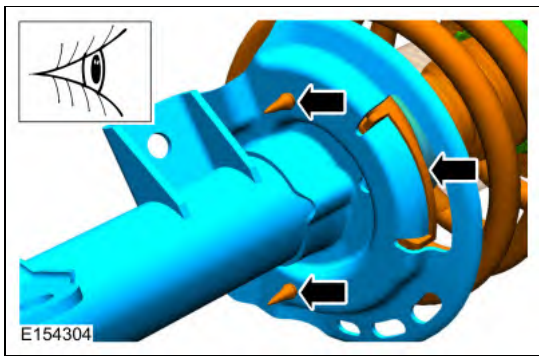

3. **NOTE:** Make sure the strut bearing tabs are aligned before compressing the spring.

Align the strut bearing tabs.

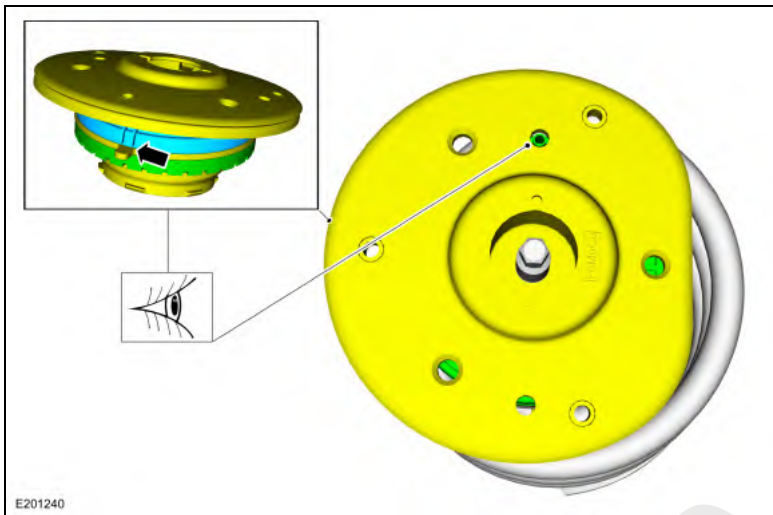

4. **NOTICE:** Use care not to damage the spring coating.

NOTE: Typical strut and spring assembly shown.

Install the new strut rod nut.

Use the General Equipment: Spring Compressor

Use the General Equipment: Vise

Torque: 98 lb.ft (133 Nm)

