


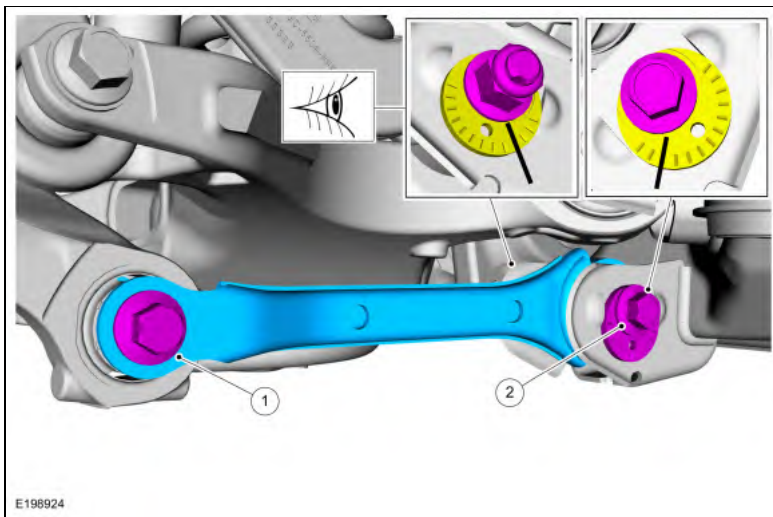

2. Install the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
3. Check and if necessary adjust rear toe.
Refer to: Rear Toe Adjustment (204-00 Suspension System - General Information, General Procedures).

Upper Arm

Special Tool(s) / General Equipment


Vehicle/Axle Stands

Removal


NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
2. Raise suspension to curb height.
Use the General Equipment: Vehicle/Axle Stands

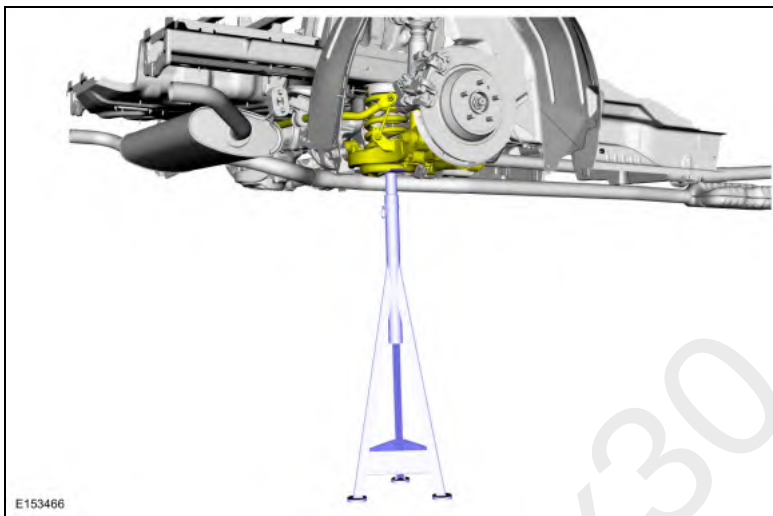

3. **NOTICE:** Tighten the suspension bushing fasteners with the suspension loaded or with the weight of the vehicle resting on the wheels and tires, otherwise incorrect clamp load and bushing damage may occur.
 1. Remove and discard the upper arm-to-wheel knuckle bolt and nut.
Torque: 76 lb.ft (103 Nm)
 2. Remove and discard the upper arm-to-frame bolt and nut and remove the upper arm.
Torque: 85 lb.ft (115 Nm)

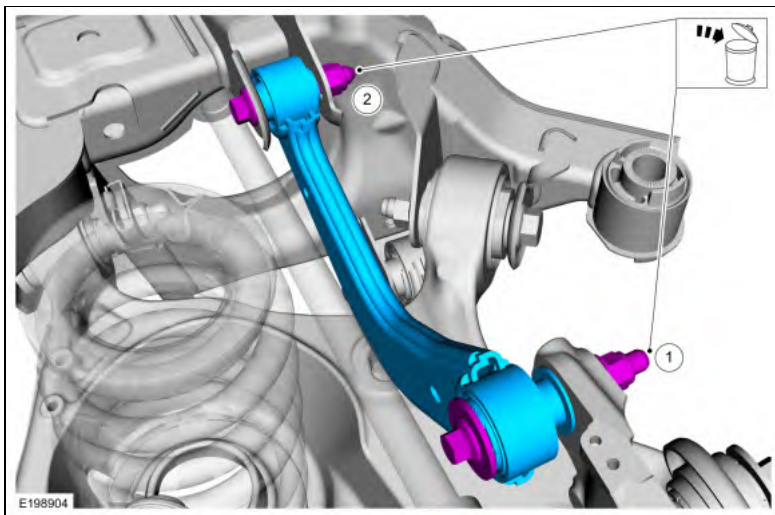

Installation

1. To install, reverse the removal procedure.
2. Check and if necessary adjust rear camber.
Refer to: Rear Camber Adjustment (204-00 Suspension System - General Information, General Procedures).