


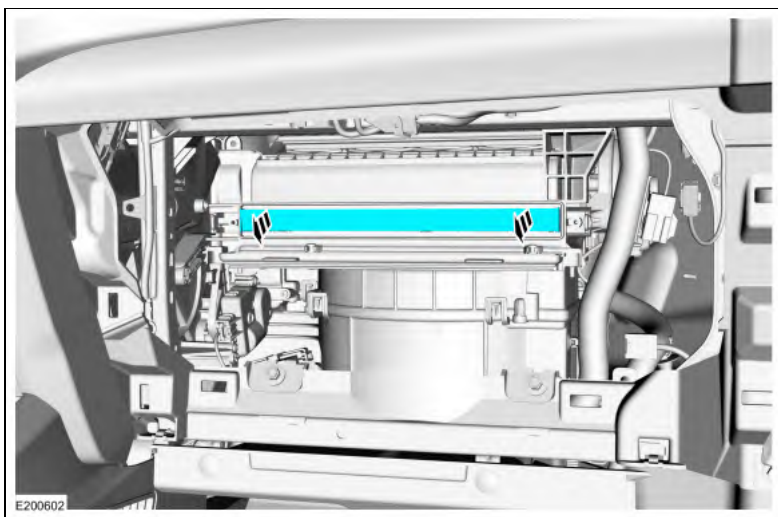

Installation

1. To install, reverse the removal procedure.

Cabin Heater Coolant Pump - 2.0L EcoBoost (184kW/250PS) â€“ MI4

Special Tool(s) / General Equipment


Hose Clamp(s)

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. **WARNING:** When releasing the cooling system pressure, cover the coolant expansion tank cap with a thick cloth.


Remove the pressure relief cap.

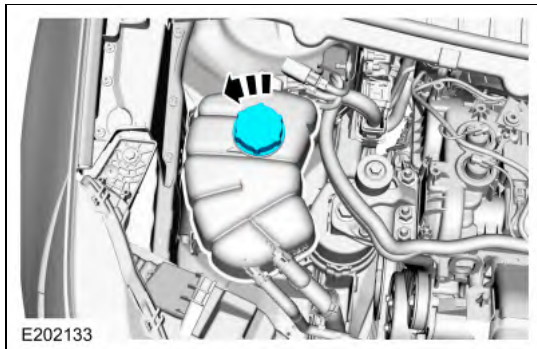


2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
3. Remove the bolts, the retainers and the front underbody shield.

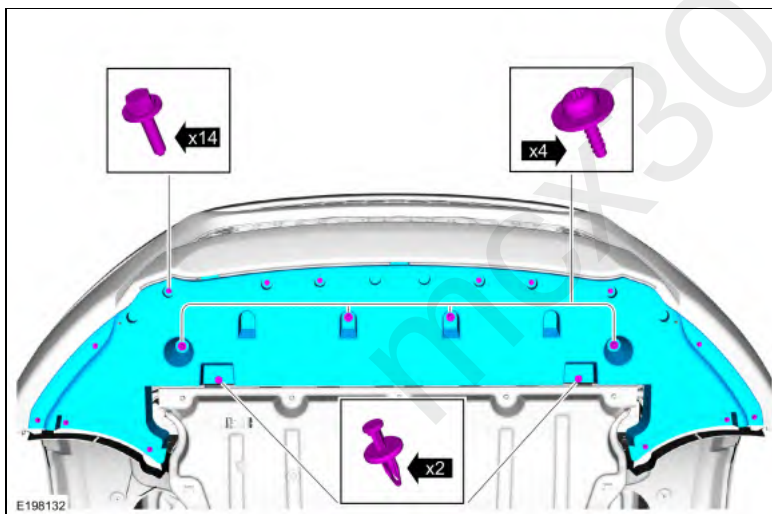

4. Remove the retainers and the underbody shield.

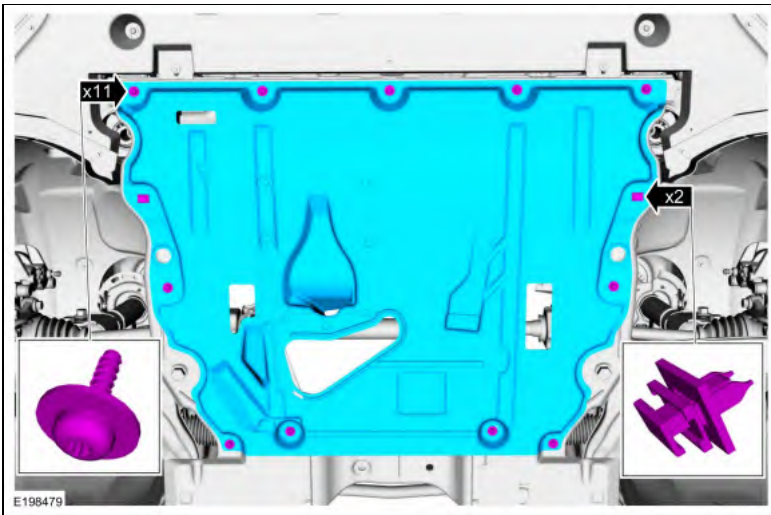

- Remove the retainers, bolts and the cooling module support panel.
Torque: 18 lb.ft (24 Nm)

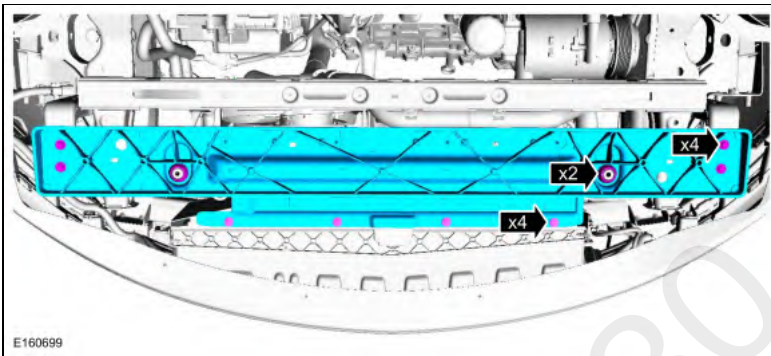

- Loosen the clamp and position the CAC tube aside.
Torque: 44 lb.in (5 Nm)