


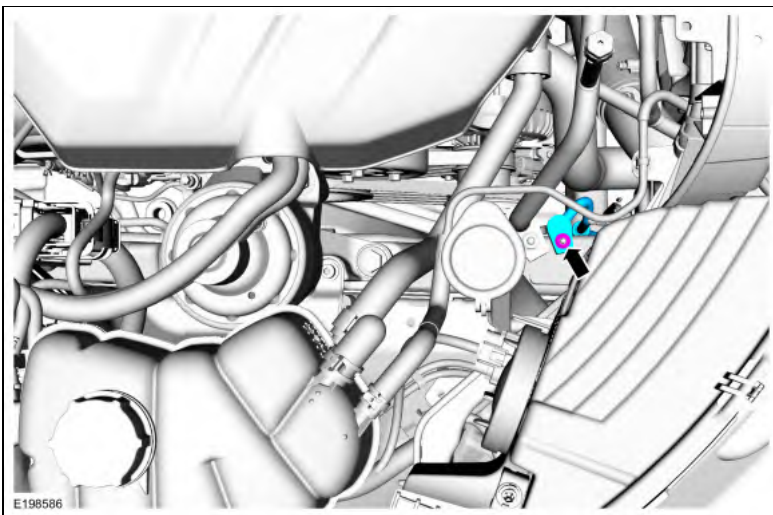

Installation

1. To install, reverse the removal procedure.
 2. **NOTICE: Only use the specified material to lubricate the seals.**
Install and lubricate new O-ring seals. Refer to the appropriate Specifications in Group 412.
 3. Lubricate the refrigerant system with the correct amount of clean PAG oil. Refer to the appropriate Refrigerant Oil Adding procedure in Group 412.
-