


Thermostatic Expansion Valve - 2.0L EcoBoost (184kW/250PS) “ MI4

Removal

NOTICE: During the removal of components, cap, tape or otherwise appropriately protect all openings to prevent the ingress of dirt or other contamination. Remove protective materials prior to installation.

NOTE: Removal steps in this procedure may contain installation details.

1. Recover the refrigerant. Refer to the appropriate Recovery procedure in Group 412.
2. Remove the evaporator inlet and outlet manifold bracket nut.
Torque: 18 lb.in (2 Nm)

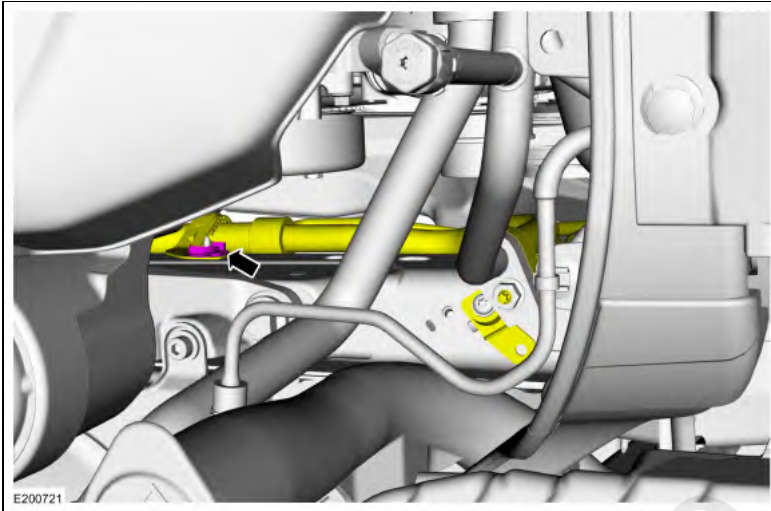

3. Remove the air cleaner outlet pipe.
4. Remove the nut and position aside the evaporator inlet and outlet manifold.
 - Make sure to cover any open ports to prevent debris from entering the system.
Torque: 159 lb.in (18 Nm)