

7	BCM
8	Door ajar switches
9	Parking brake switch
10	Brake fluid level switch
11	GWM
12	Washer fluid level switch
13	SODR
14	Fuel pump and sender unit
15	IPMA
16	PAM
17	Oil pressure sensor
18	FCIM
19	SODL
20	Fuel level sensor
21	Ambient air temperature sensor
22	CCM
23	DSM
24	PSCM
25	SCCM
26	APIM

Network Message Chart

Module Network Input Messages - IPC

Broadcast Message	Originating Module	Message Purpose
Adaptive cruise control warning request	IPMA	Input used to display the adaptive cruise control warning messages.
Ambient air temperature	PCM	Filtered input used to display the outside air temperature.
Auto high beam indication request	IPMA	Input used to control the auto high beam RTT indicator.
AWD service required	AWD module/ PCM	Input used for the AWD component to control the powertrain malfunction (wrench) RTT indicator.
AWD status display	AWD module/ PCM	Input used to display the AWD messages.
Battery low state of charge	BCM	Input used to control the charging system RTT indicator, check charging system warning message and load shed messages.
Body service required request	BCM	Input used for the BCM controlled system faults input to control the powertrain malfunction (wrench) RTT indicator.
Brake fluid level low message request	BCM	Input used to display the low brake fluid level message center message.
Brake (red) warning indicator request	ABS module	- Input used to display the message center brake system messages. - Input used to display the electronic parking brake message center warning messages.
Camera status	IPMA	Input used to display the lane keeping system camera malfunction message.
Check fuel fill inlet message request	PCM	Input used to display the check fuel fill inlet message.