



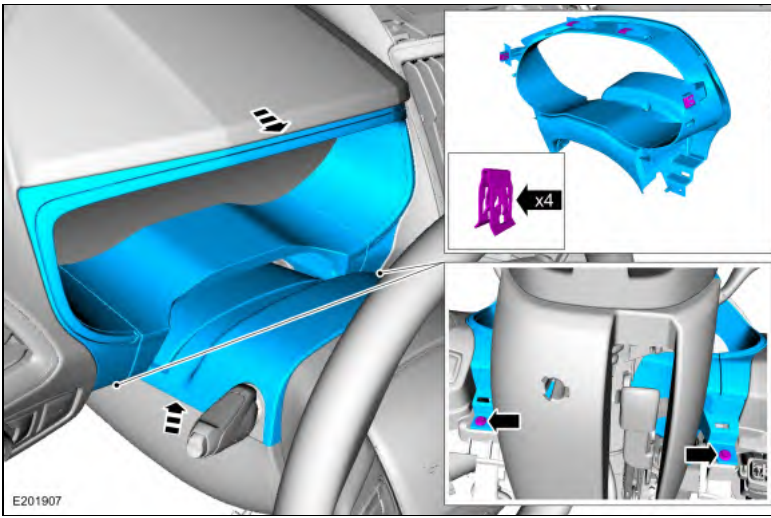

5. Remove the bolts and position the IPC.
Torque: 22 lb.in (2.5 Nm)

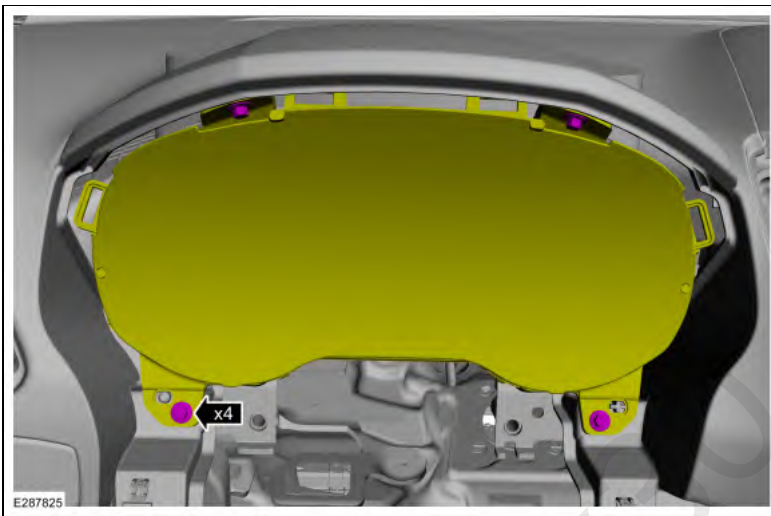

6. Disconnect the electrical connector and remove the IPC.