

DTC	Description	Action
B13F3:96	Left Rear Side Sensor: Component Internal Failure	REFER to: Parking Aid (413-13C Parking Aid - Vehicles With: Active Park Assist, Diagnosis and Testing).
B13F4:12	Right Rear Side Sensor: Circuit Short To Battery	REFER to: Parking Aid (413-13C Parking Aid - Vehicles With: Active Park Assist, Diagnosis and Testing).
B13F4:14	Right Rear Side Sensor: Circuit Short To Ground or Open	REFER to: Parking Aid (413-13C Parking Aid - Vehicles With: Active Park Assist, Diagnosis and Testing).
B13F4:96	Right Rear Side Sensor: Component Internal Failure	REFER to: Parking Aid (413-13C Parking Aid - Vehicles With: Active Park Assist, Diagnosis and Testing).
B1B36:12	Right Front Outer Sensor: Circuit Short To Battery	GO to Pinpoint Test H
B1B36:14	Right Front Outer Sensor: Circuit Short To Ground or Open	GO to Pinpoint Test I
B1B36:96	Right Front Outer Sensor: Component Internal Failure	GO to Pinpoint Test J
B1B38:12	Right Front Inner Sensor: Circuit Short To Battery	GO to Pinpoint Test H
B1B38:14	Right Front Inner Sensor: Circuit Short To Ground or Open	GO to Pinpoint Test I
B1B38:96	Right Front Inner Sensor: Component Internal Failure	GO to Pinpoint Test J
B1B40:12	Left Front Outer Sensor: Circuit Short To Battery	GO to Pinpoint Test H
B1B40:14	Left Front Outer Sensor: Circuit Short To Ground or Open	GO to Pinpoint Test I
B1B40:96	Left Front Outer Sensor: Component Internal Failure	GO to Pinpoint Test J