



Rear Parking Aid Camera

Removal

1. Remove the reversing lamp.
Refer to: Reversing Lamp (417-01) .
2. Remove the screws, separate the wiring guide and remove the rear parking aid camera bracket.

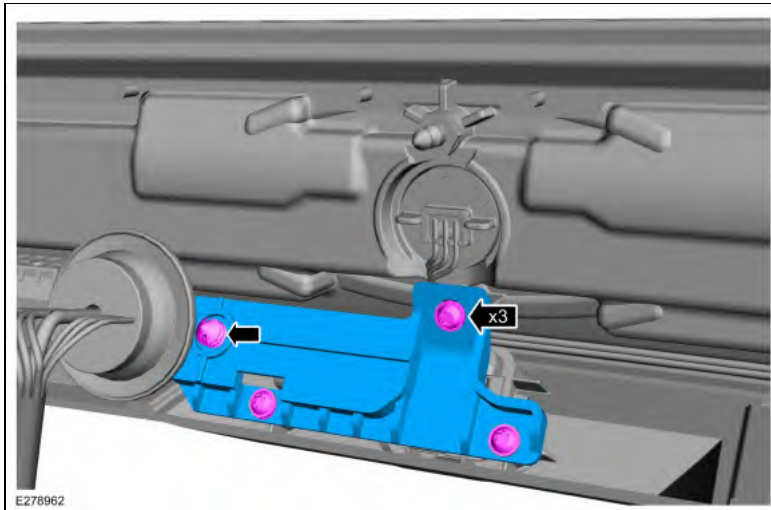

3. Disconnect the electrical connector and remove the rear parking aid camera.

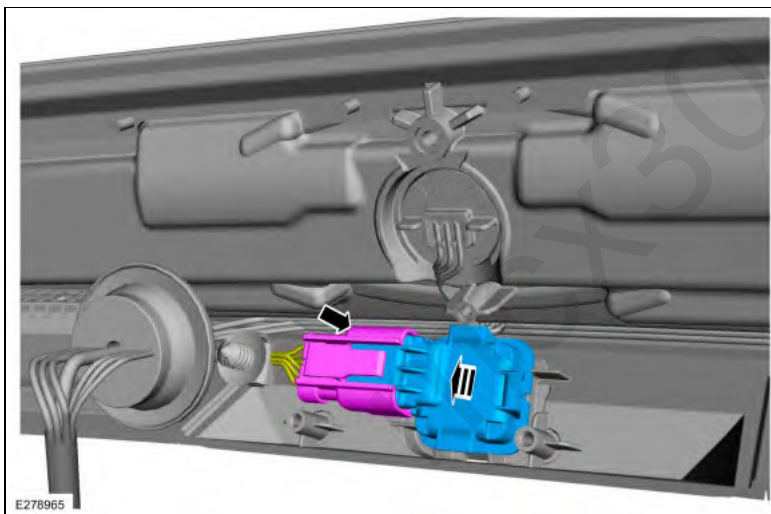

Installation

1. To install, reverse the removal procedure.

Vehicles equipped with rear only parking aid camera

2. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-BCM configure the BCM.

Vehicles equipped with front and rear split view parking aid cameras only

3. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.

