


Parking Aid - Component Location

Component Location - Active Park Assist

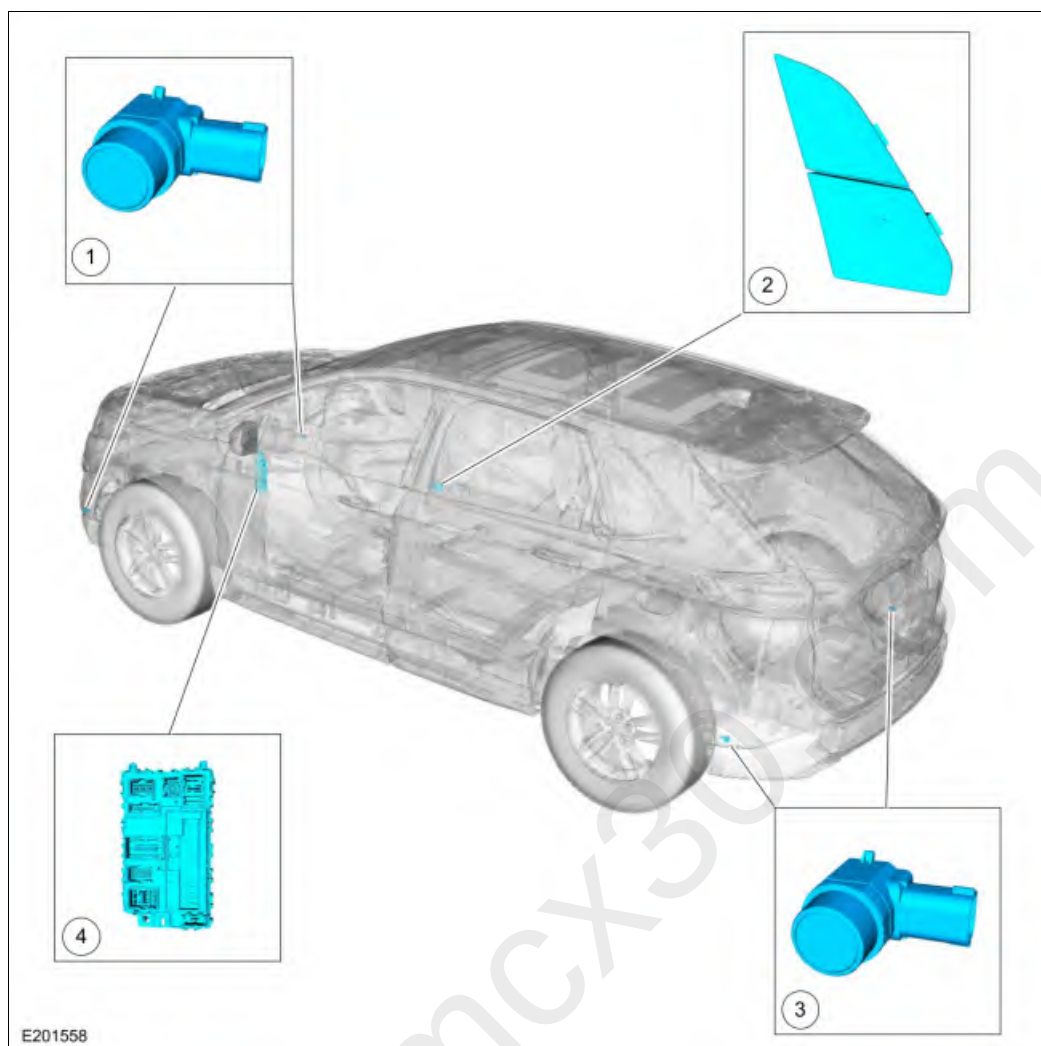

Item	Description
1	Front active park assist sensors
2	Active park assist switch
3	Rear active park assist sensors
4	PAM (integral to the BCM)