


Front Active Park Assist Sensors

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: This procedure can be used for all locations of the component.

1. Remove the front wheel and tire assemblies.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
2. Remove the fender liner to radiator closeout screws.
Torque: 13 lb.in (1.5 Nm)

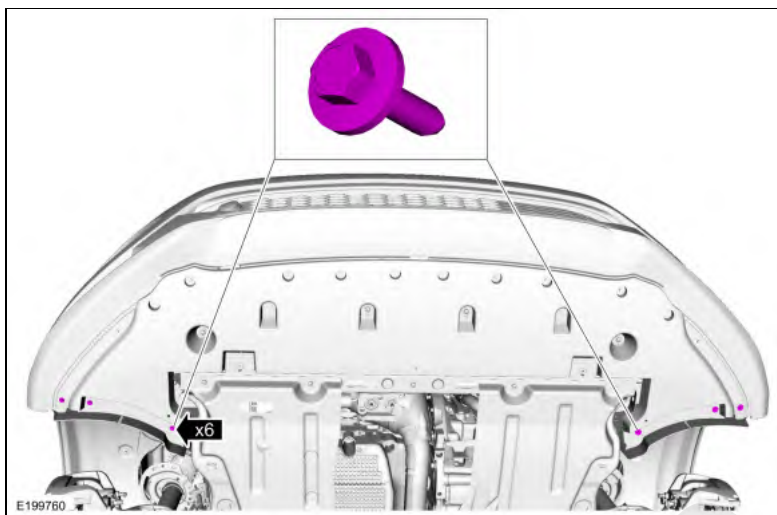

3. On both sides.
Remove the screws and nuts from the front of the fender liner.
Torque:
Fender liner screws: 13 lb.in (1.5 Nm)
Fender liner nuts: 22 lb.in (2.5 Nm)

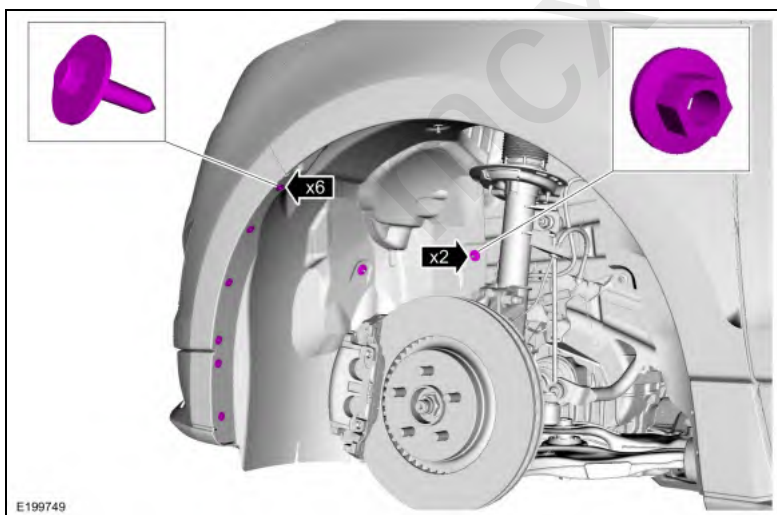

4. Position the fender liner aside.