




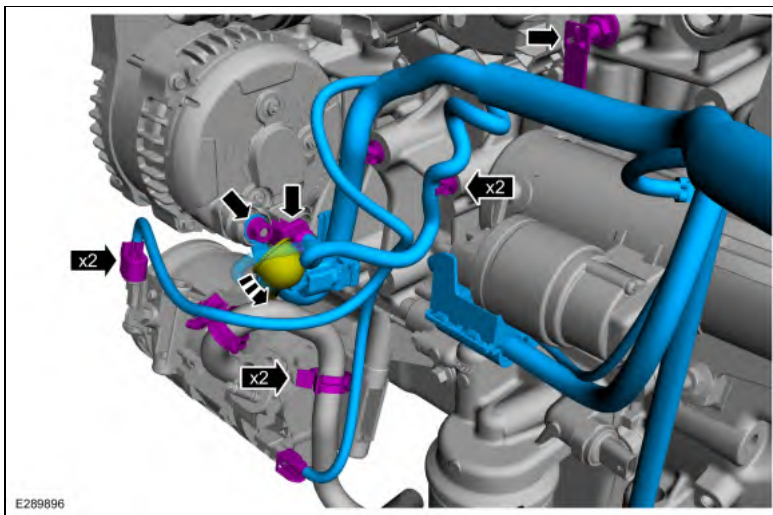

7.

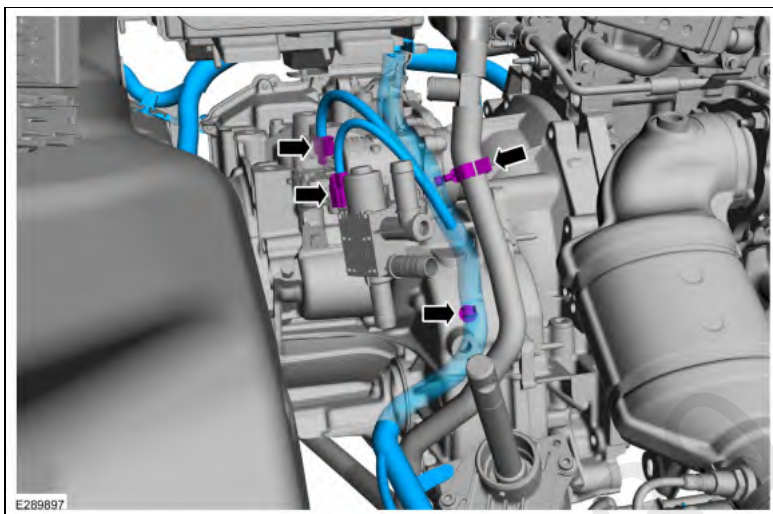

8.

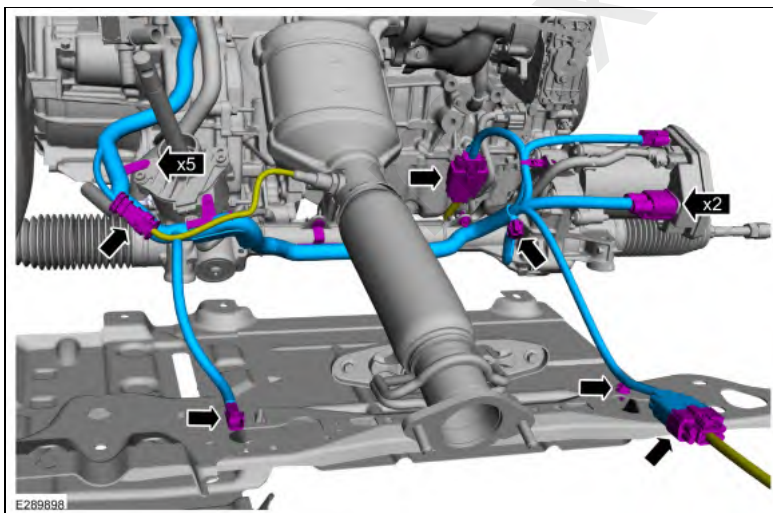

Installation

1. To install, reverse the removal procedure.


Battery Cables - 2.7L EcoBoost (238kW/324PS)

Removal


NOTE: This procedure provides information about routing, retaining points and connectors of the cable. It does not include the steps for removing components to gain access to the cable.

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the battery.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3.
 1. Torque: 48 lb.in (5.4 Nm)
 2. Torque: 106 lb.in (12 Nm)
 3. Torque: 106 lb.in (12 Nm)
 4. Torque: 48 lb.in (5.4 Nm)

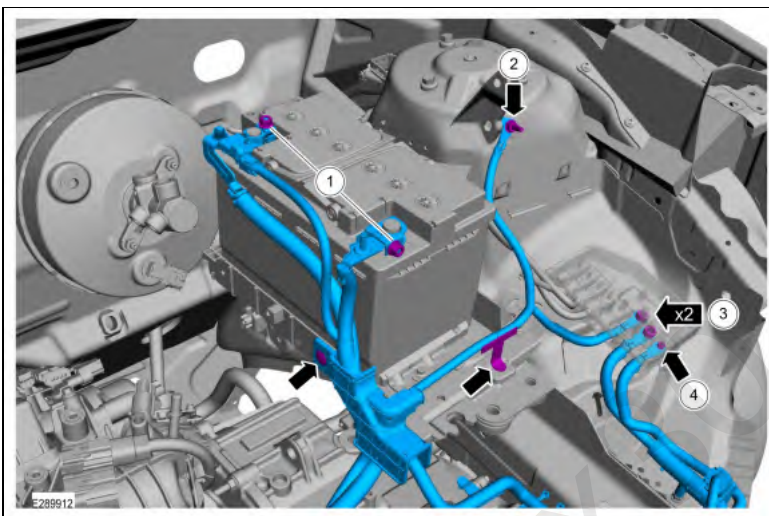

4. Torque: 93 lb.in (10.5 Nm)

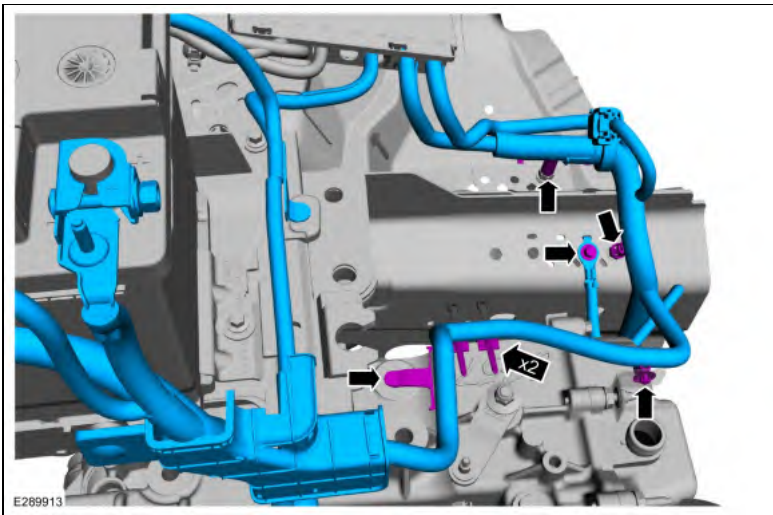

5.

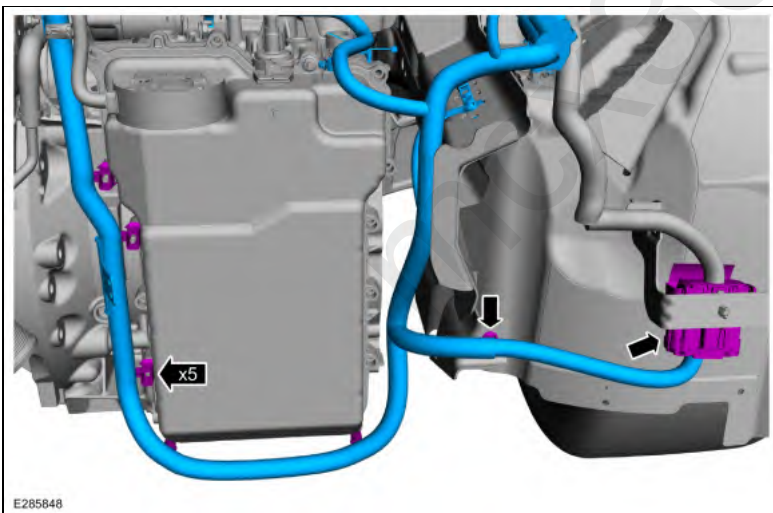

6.

1. Torque: 106 lb.in (12 Nm)
2. Torque: 55 lb.in (6.2 Nm)