




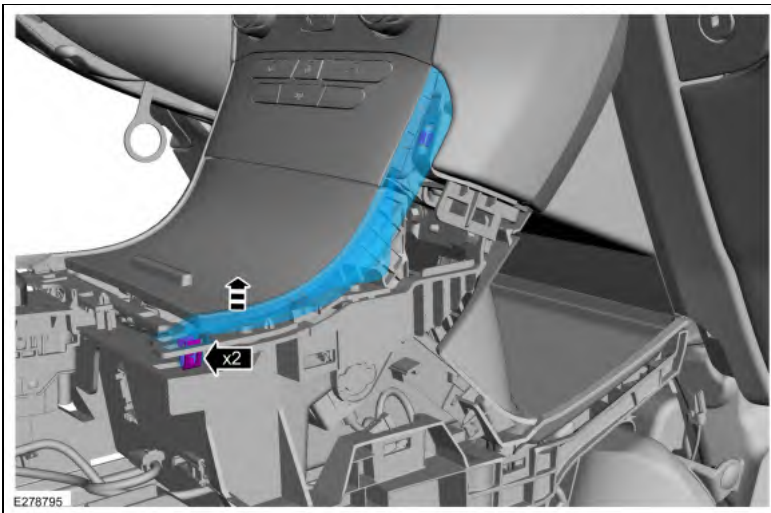


8. Remove the screws and the media bin.
- Disconnect the electrical connectors.

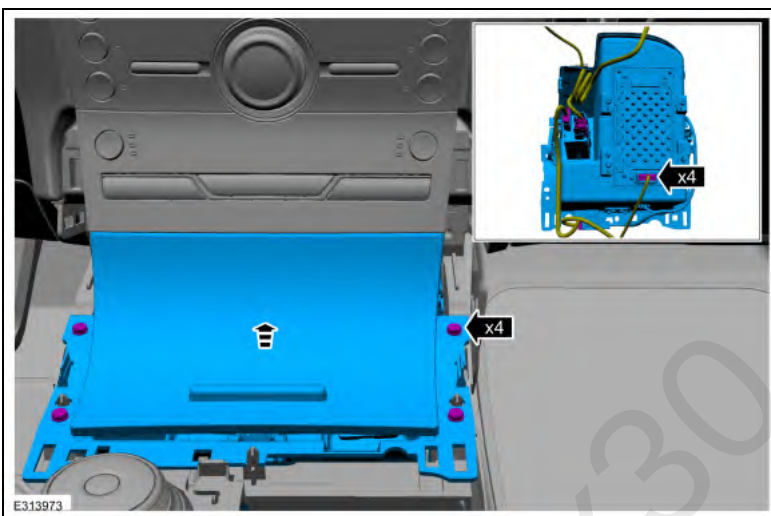


9. Remove the gear selector and bracket assembly.
1. Remove the screws.
Torque: 22 lb.in (2.5 Nm)
 2. Separate the clips and position the gear selector and bracket aside.
 3. Separate the wiring guide and disconnect the electrical connector.

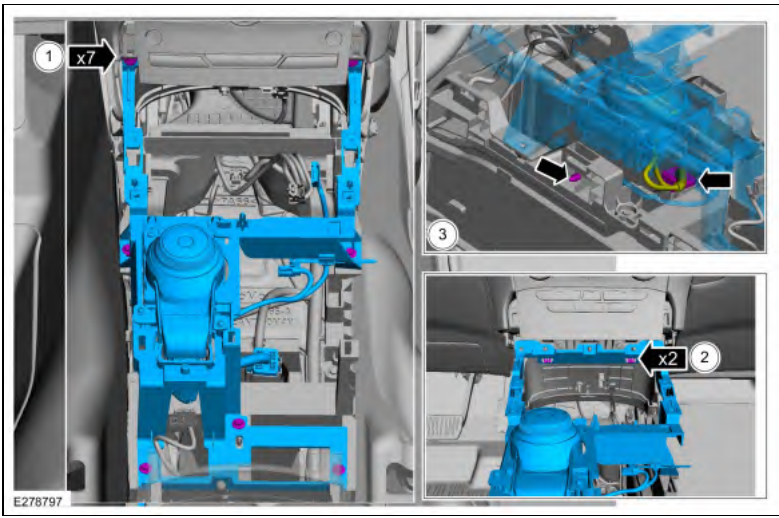

10. Remove the center heater outlets.

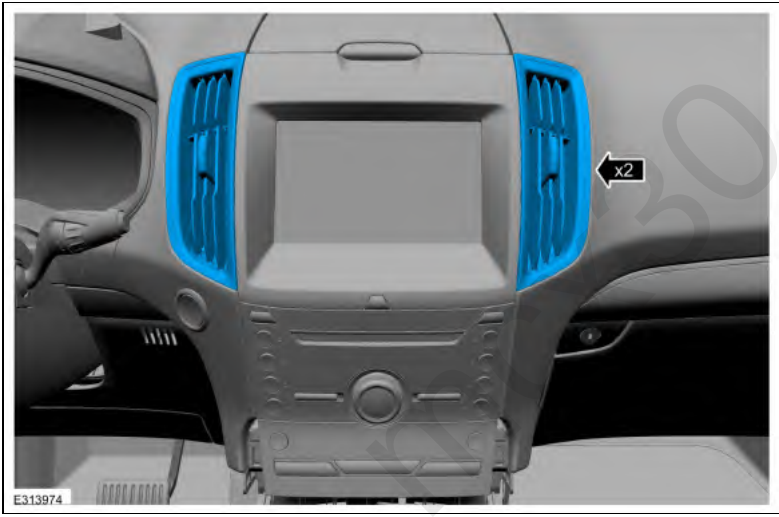

 11. Remove the screws, disconnect the electrical connectors and remove the FCIM.



Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary if replacing the component.*


Using a diagnostic scan tool, complete the PMI process for the FCIM following the on-screen instructions.

mcx30.com


Front Display Interface Module (FDIM)

Removal

1. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
2. Remove the screws, disconnect the connectors and remove the FDIM and APIM assembly.
Torque: 22 lb.in (2.5 Nm)

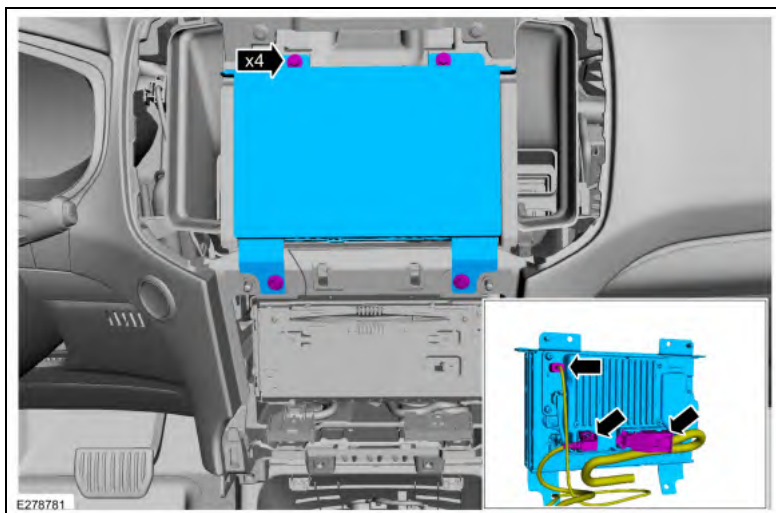

3. Remove the screws, disconnect the electrical connector and separate the APIM from the FDIM.
Torque: 9 lb.in (1 Nm)

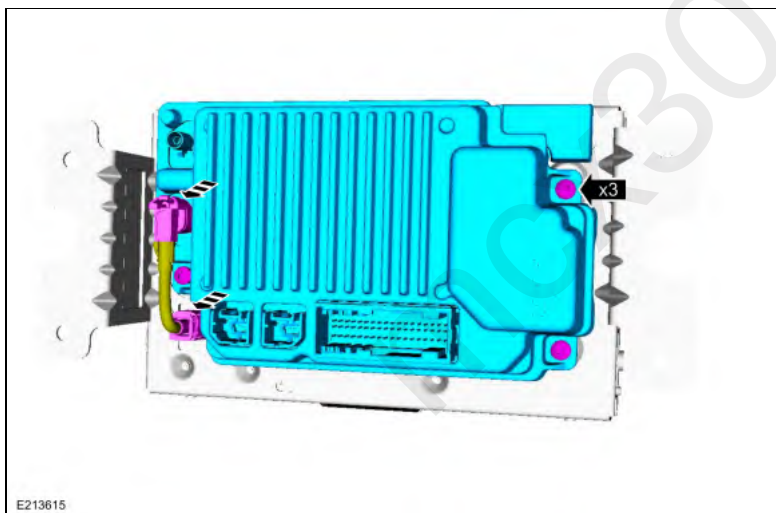

Installation

1. To install, reverse the removal procedure.

