


Front Door Speaker LH

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the bolts and the speaker.
 - Disconnect the electrical connector.

Torque: 22 lb.in (2.5 Nm)

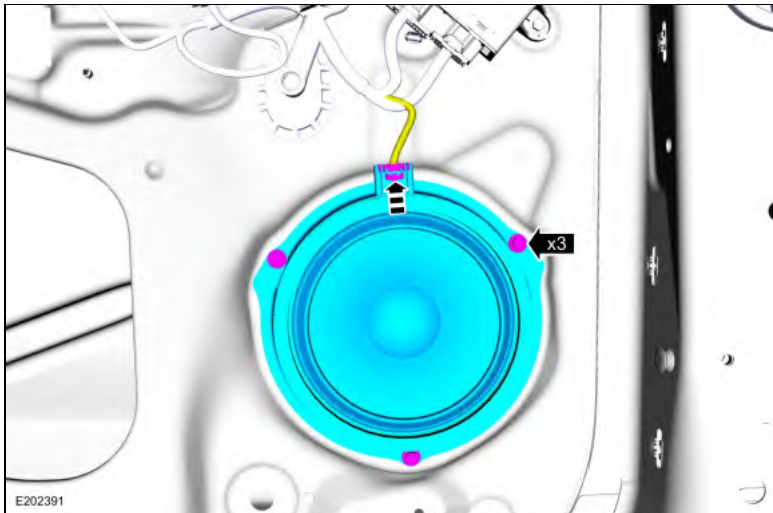

Installation

1. To install, reverse the removal procedure.


Front Door Speaker RH

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the bolts and the speaker.
 - Disconnect the electrical connector.

Torque: 22 lb.in (2.5 Nm)

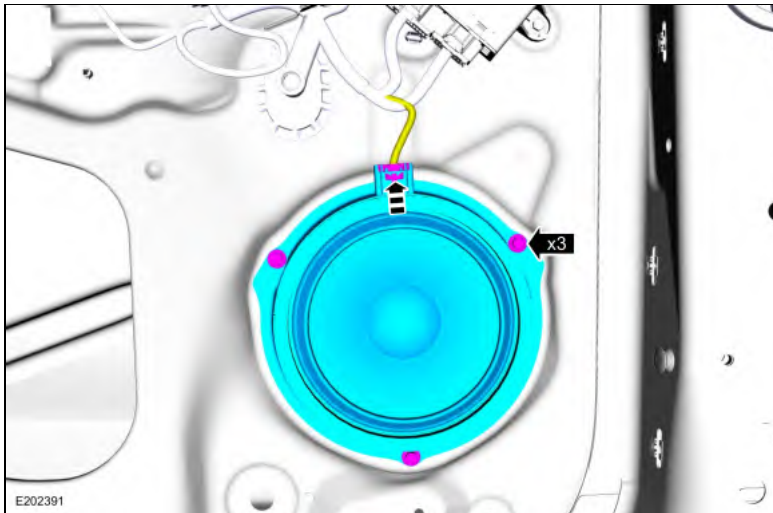

Installation

1. To install, reverse the removal procedure.