


Headlamp Assembly


Removal

1. Remove the headlamp assembly.
 - Remove the scrivet.
 - Remove the rear headlamp mounting bolt.
 - Remove the front mounting bolt
 - Position the headlamp assembly forward and disconnect the electrical connector.

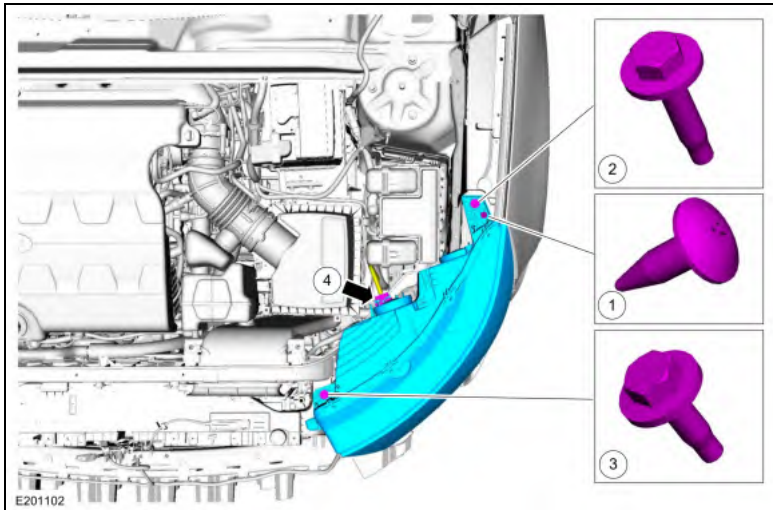

Installation

1.
 1. Position the front of the headlamp assembly into the front fascia.
 2. Check the alignment of the lower headlamp retainer.
 3. Rotate the rear corner of the headlamp assembly into the fender.

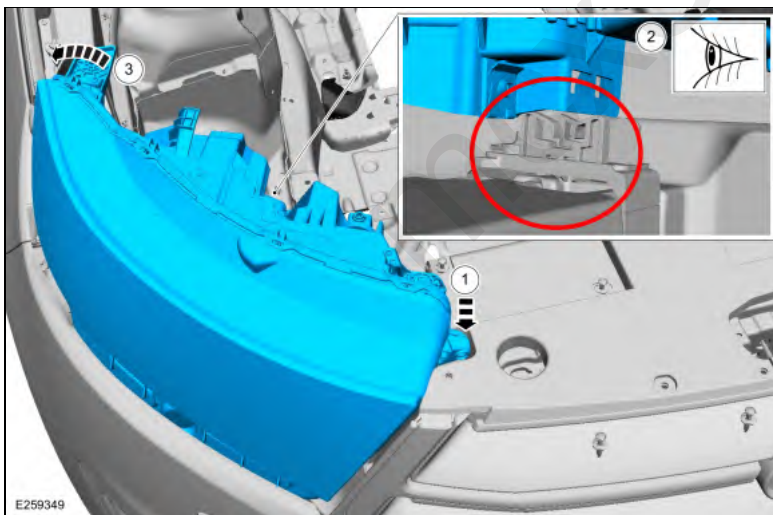

2.
 1. Install the scrivet.
 2. Install the rear headlamp mounting bolt.
Torque: 42 lb.in (4.8 Nm)
 3. Install the front mounting bolt
Torque: 42 lb.in (4.8 Nm)
 4. Connect the electrical connector.