

Reversing Lamp

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Remove the liftgate interior trim panel.
Refer to: Liftgate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).


Installation

1. Remove and tighten the nuts in the sequence shown.
 1. Disconnect the electrical connector.

Torque: 28 lb.in (3.2 Nm)

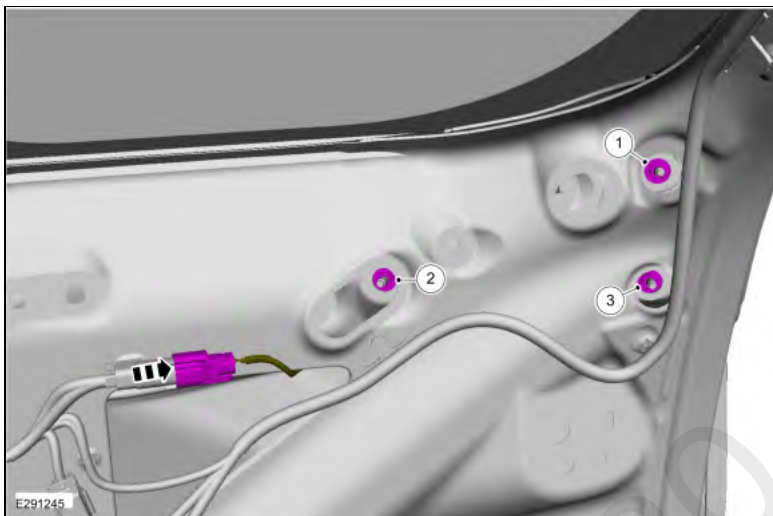

2. Remove the reversing lamp.

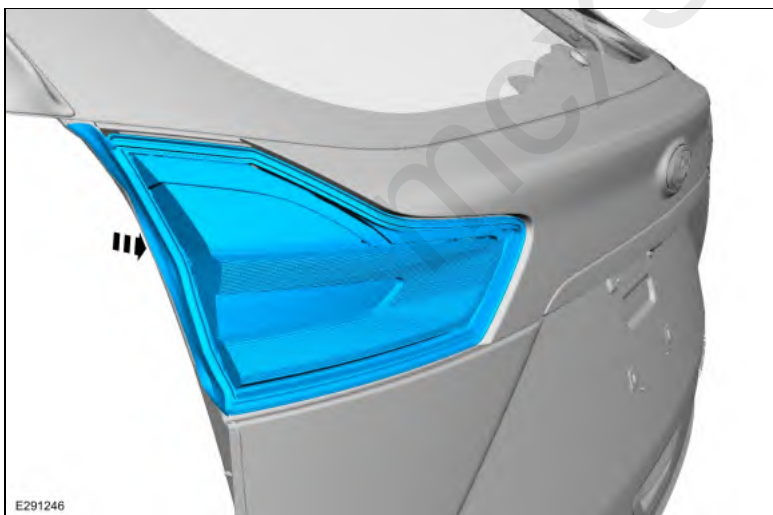

3. To install, reverse the removal procedure.