

Universal Transmitter

Symptom Chart(s)

Symptom Chart: Universal Home Transmitter

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices.
REFER to: Diagnostic Methods (100-00 General Information, Description and Operation).

Symptom Chart

Condition	Actions
The universal transmitter is inoperative	GO to Pinpoint Test A

Pinpoint Tests

[PINPOINT TEST A : UNIVERSAL TRANSMITTER IS INOPERATIVE](#)

Normal Operation and Fault Conditions

REFER to: Universal Transmitter - Overview (419-02 Remote Convenience, Description and Operation).

Possible Sources

- Interior lighting concern
- Universal transmitter (part of the LH sun visor)

A1 CHECK FOR VOLTAGE TO THE UNIVERSAL TRANSMITTER

- Check the illumination of the universal transmitter by pressing one of the buttons.

Does the indicator on the universal transmitter illuminate?

Yes	GO to A2
No	GO to A3

A2 PROGRAM A HAND-HELD TRANSMITTER TO THE UNIVERSAL TRANSMITTER

- **NOTE:** The customer's hand-held transmitter is required when programming the universal transmitter.

Program the universal transmitter. Refer to the Owner's Literature.

Does the universal transmitter program successfully?

Yes	The universal transmitter is OK. VERIFY the receiver unit operates correctly.
No	INSTALL a new LH sun visor.

A3 CHECK THE OPERATION OF THE LH (LEFT-HAND) VANITY MIRROR LAMP