



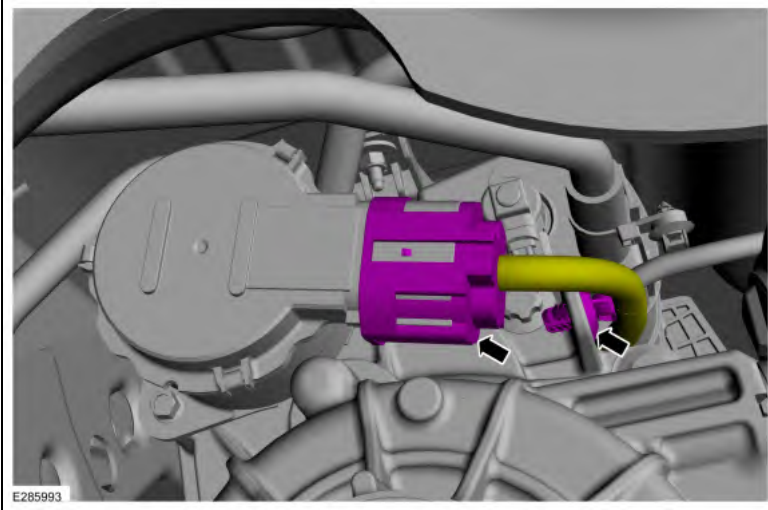

5. Disconnect the speed sensor electrical connector and detach wiring harness retainers.

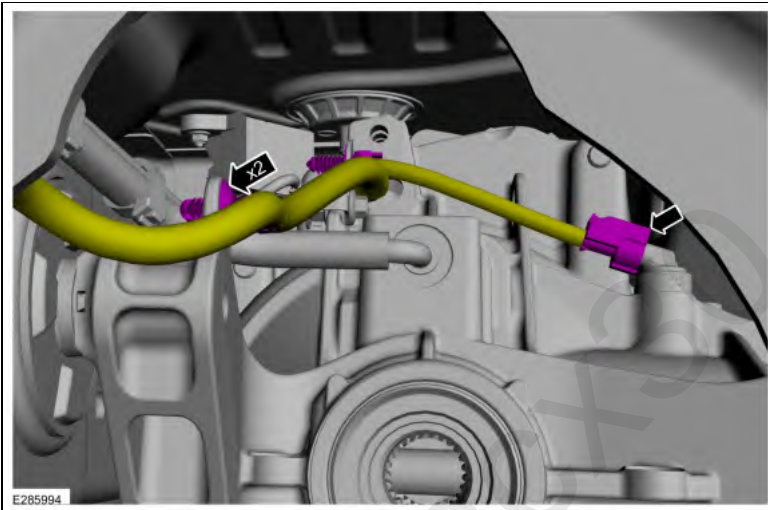

6.
 1. Remove the rear differential vent hose from RDU.
 2. Detach the connector and position the vent hose aside.