


Hood


Removal

NOTE: Removal steps in this procedure may contain installation details.

- 1. Detach the windshield washer hose coupling.

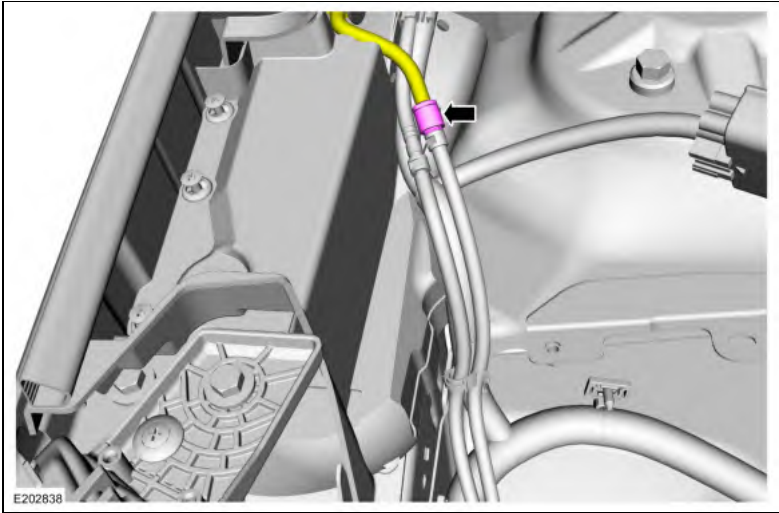


- 2. Detach the windshield washer hose retainers from the RH side hood hinge and cowl panel.

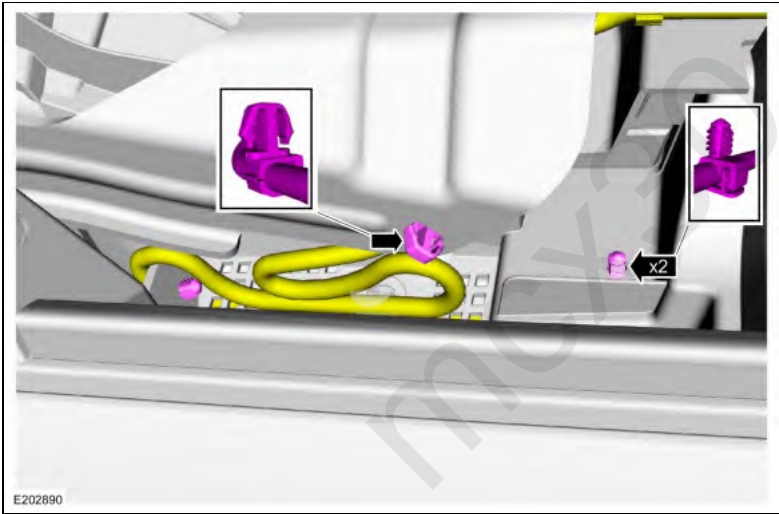


- 3. **NOTE:** LH side shown, RH side similar.

Index-mark the hood hinge location to aid in hood installation.

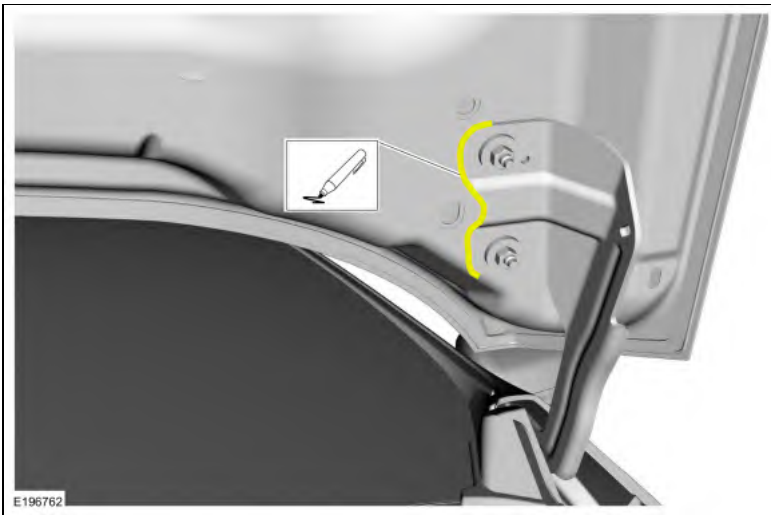

4. **NOTE:** An assistant is necessary to support the hood.
Remove the clips and the hood struts.

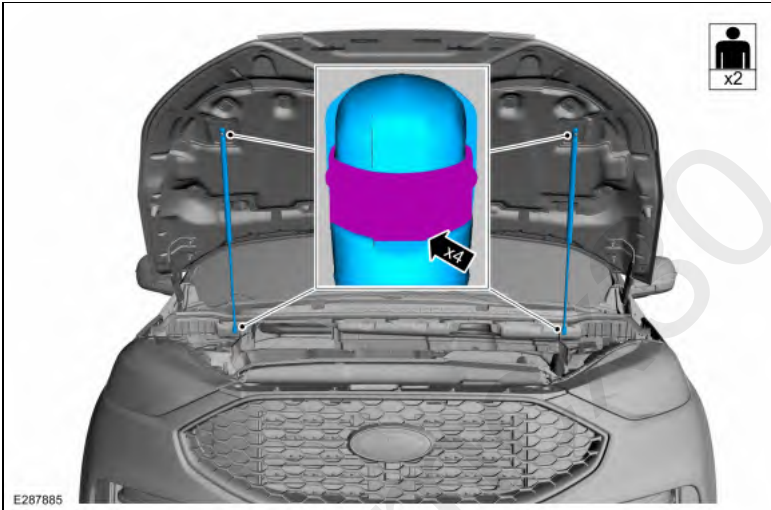

5. **NOTE:** An assistant is necessary for the support and removal of the hood.
Remove the nuts and the hood.
Torque: 18 lb.ft (25 Nm)