





8. Carefully open the hood.

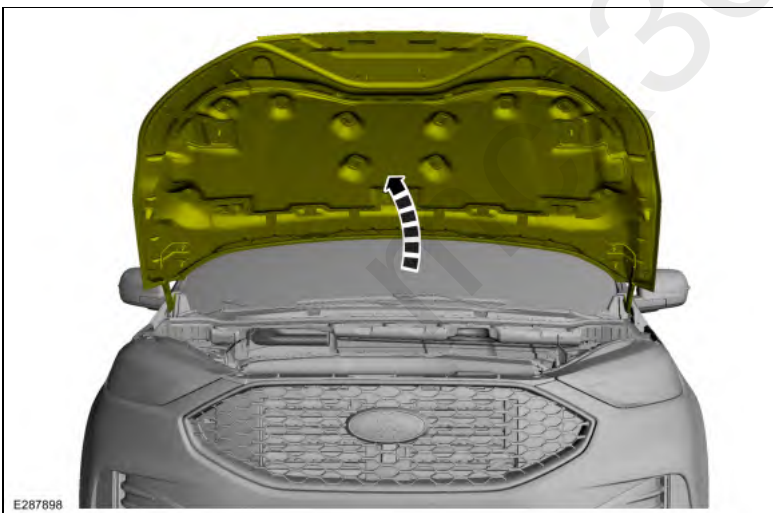


9. Tighten the nuts.
Torque: 18 lb.ft (25 Nm)

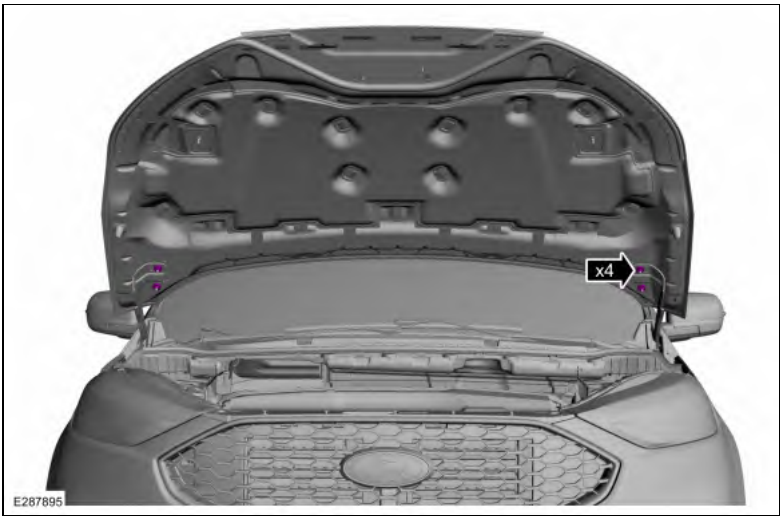


Hood front up and down alignments


10. Adjust the bump stop rubbers.

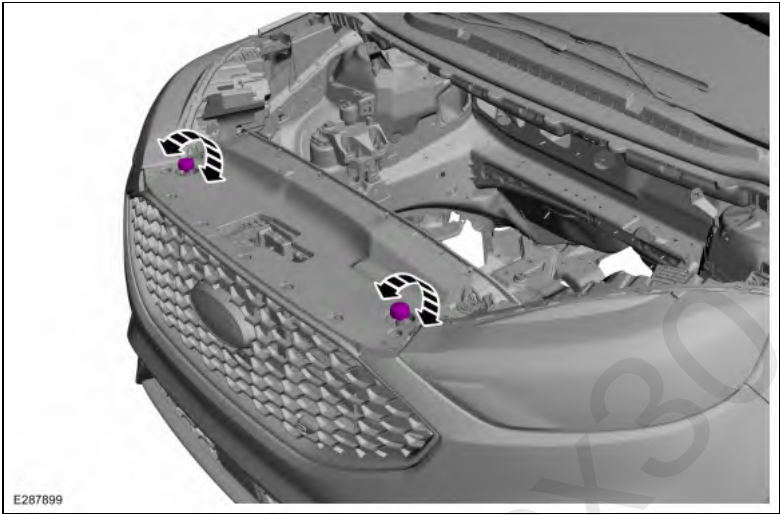

11. Carefully close the hood.

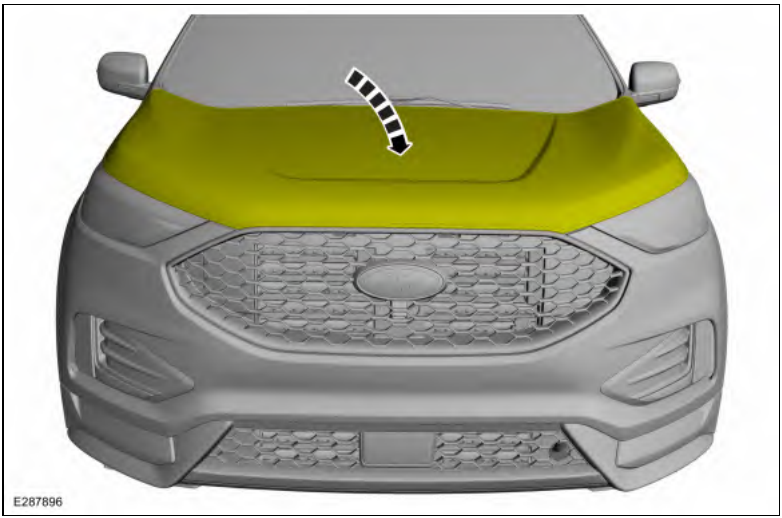


12. Adjust the hood to specification.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

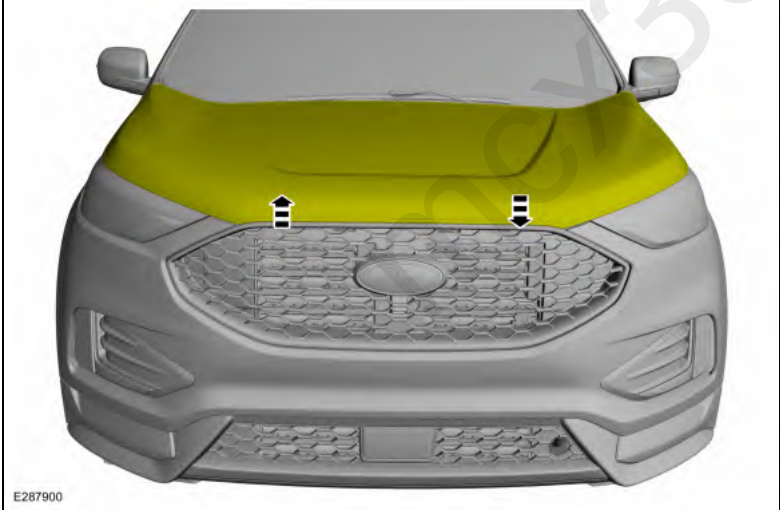


All alignments

13. Carefully open the hood.

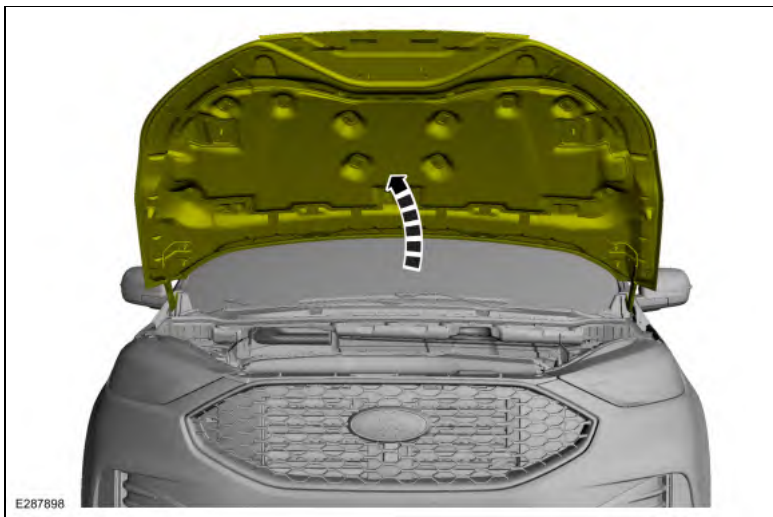

14. Install the struts and secure the clips.

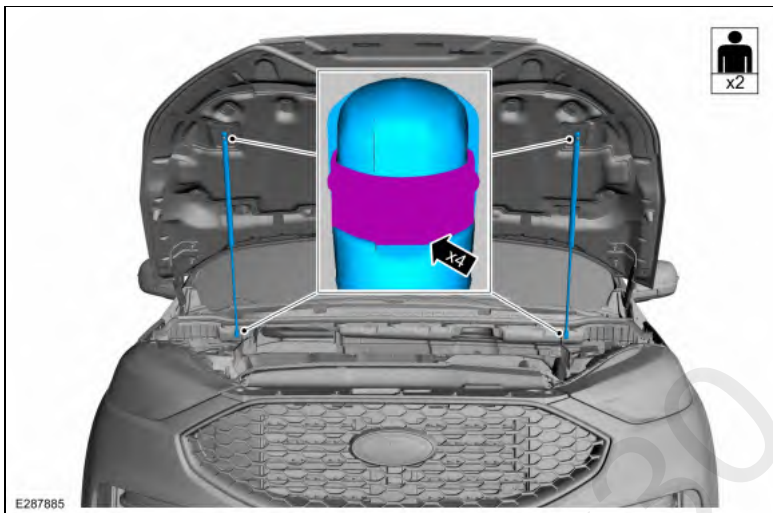

15. Install the hood latch.
Refer to: Hood Latch (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
16. Inspect the body-to-hood dimensions.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).



Liftgate Alignment

Inspection


NOTE: Removal steps in this procedure may contain installation details.

1. Check liftgate-to-body dimensions.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).


Adjustment

All alignments

1. Position aside the load compartment luggage cover.

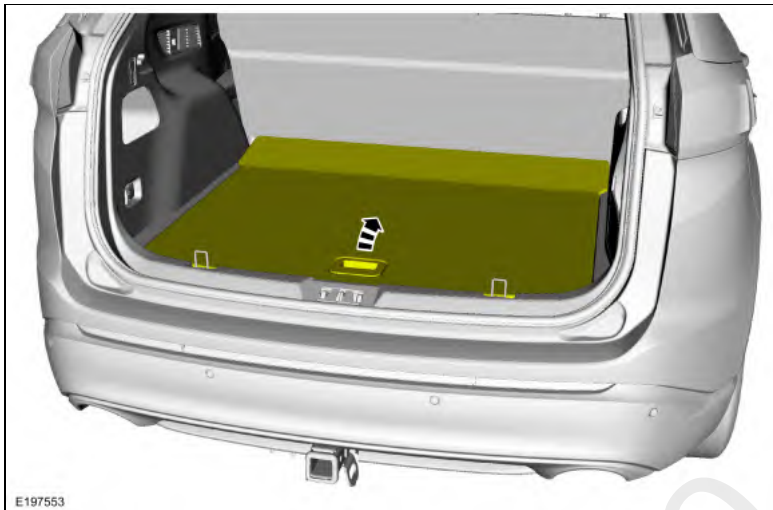

2.
 1. Remove the bolts.
Torque: 80 lb.in (9 Nm)
 2. Remove the retainers.
 3. Remove the liftgate opening trim panel.

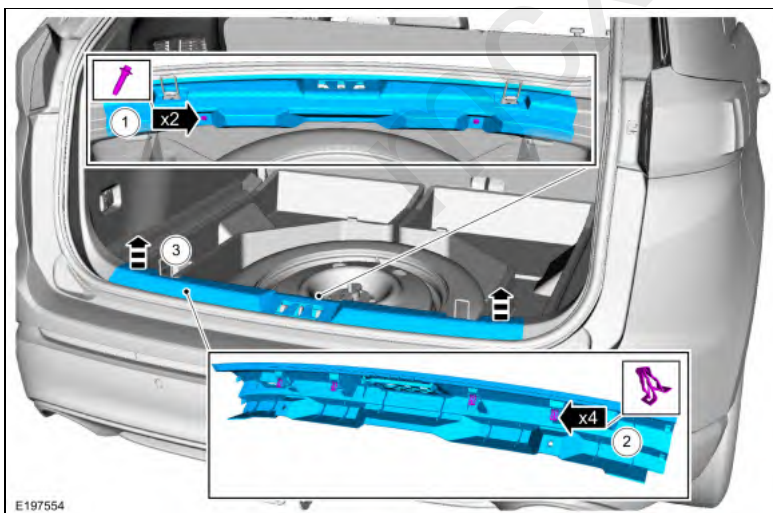


3. Remove the liftgate striker.
Torque: 177 lb.in (20 Nm)



Liftgate left and right, up and down alignment

4. Loosen the bolts.
Loosen:
: 2 turn(s)

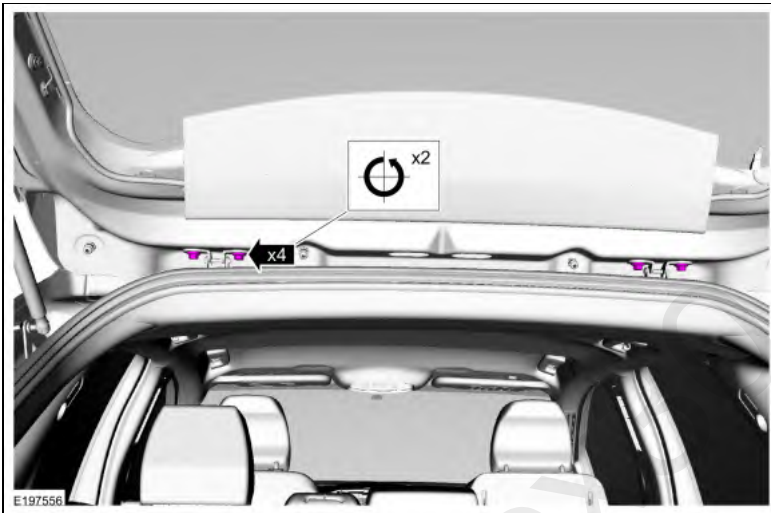

5. Carefully close the liftgate.