



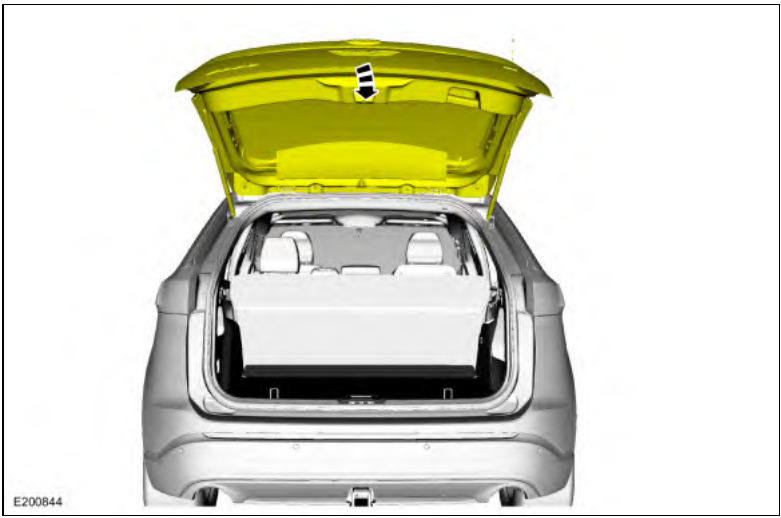


6. Adjust the liftgate to specification.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

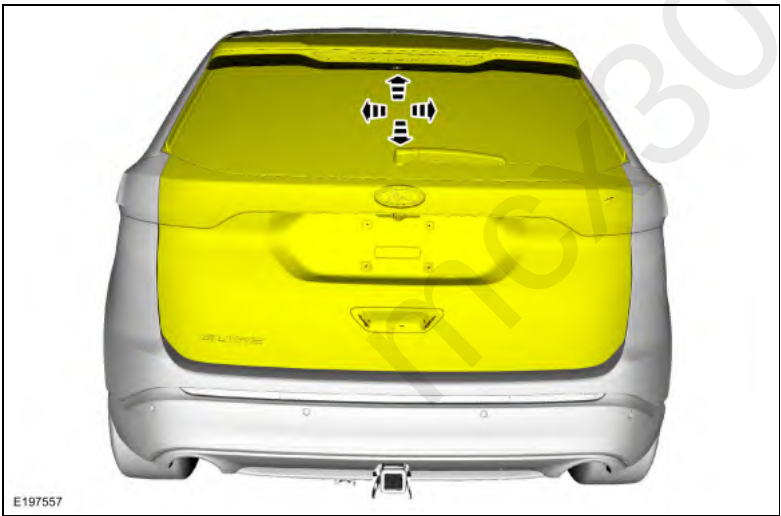

7. Carefully open the liftgate.




8. Tighten the bolts.
Torque: 22 lb.ft (30 Nm)

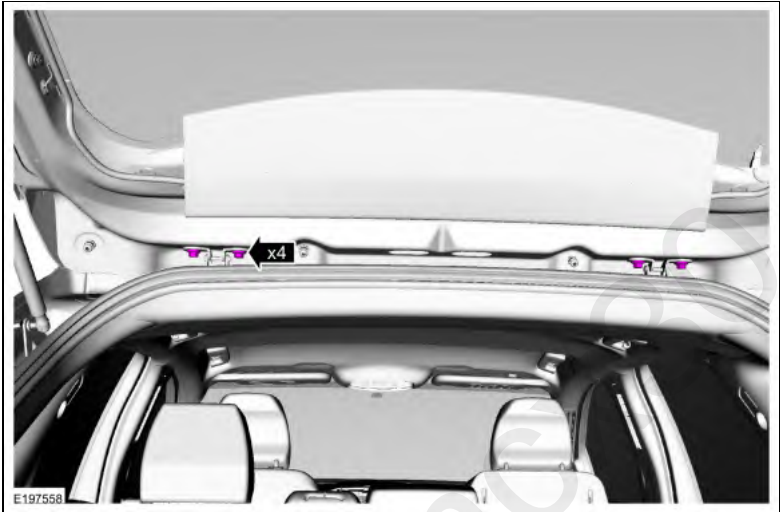


Liftgate in and out alignment

9. Lower the headliner.
Refer to: Headliner - Lowering (501-05 Interior Trim and Ornamentation, Removal and Installation).
10. Loosen the nuts.
Loosen:
: 2 turn(s)

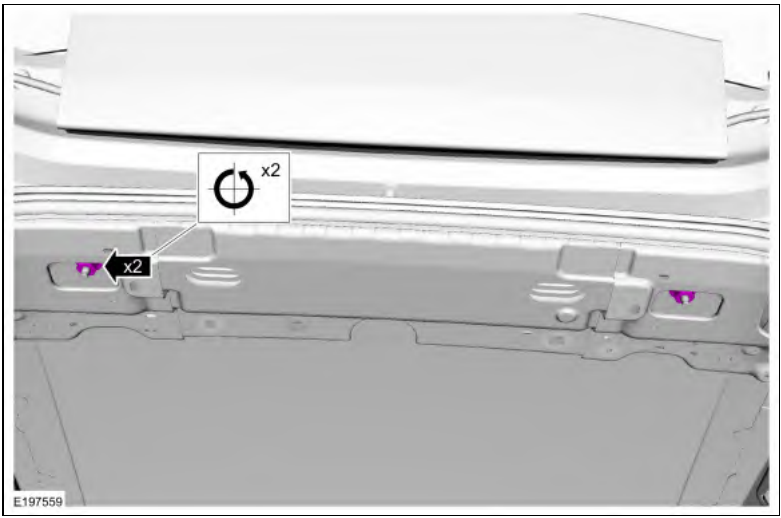


11. **NOTE:** Nominal overslam bumpers have a small lip and should be adjusted flush with the sheet metal surface.



Adjust the nominal overslam bumpers.

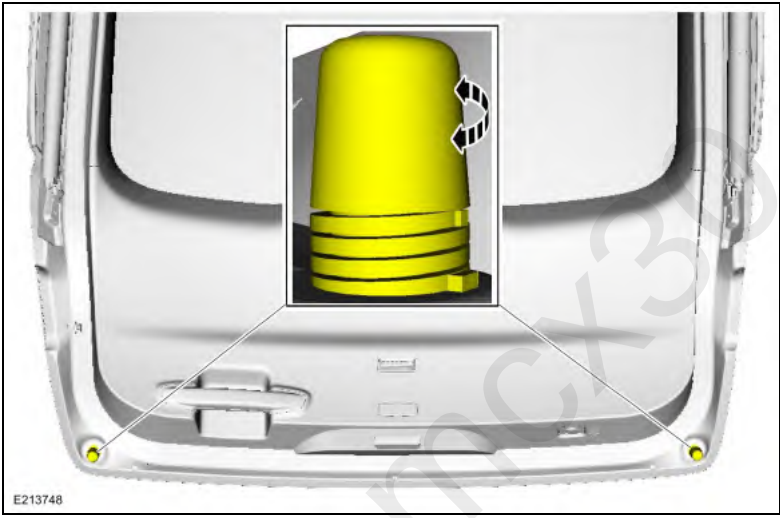


12. Carefully close the liftgate.

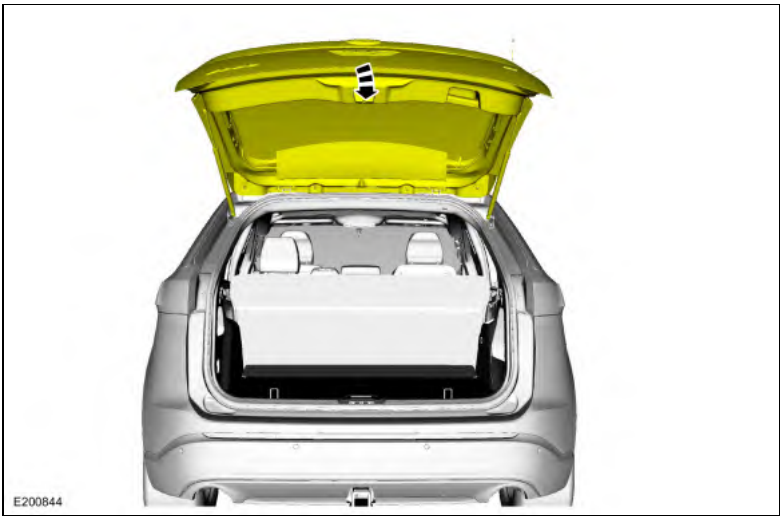

 

13. Adjust the liftgate to specification.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

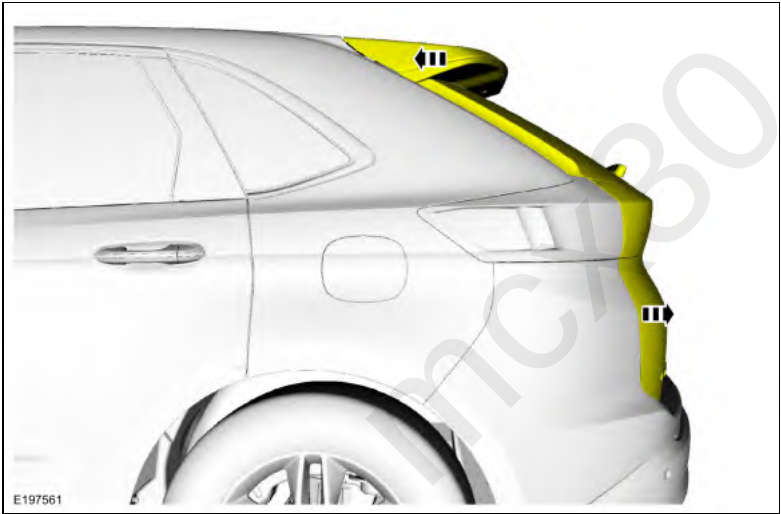

 14. Carefully open the liftgate.




 15. Tighten the nuts.
Torque: 46 lb.ft (62.5 Nm)

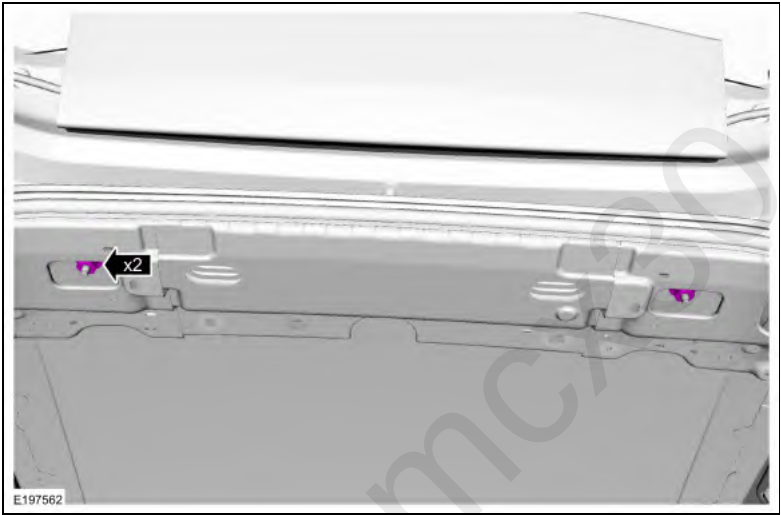

All alignments

16. Inspect the body-to-liftgate door dimensions.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

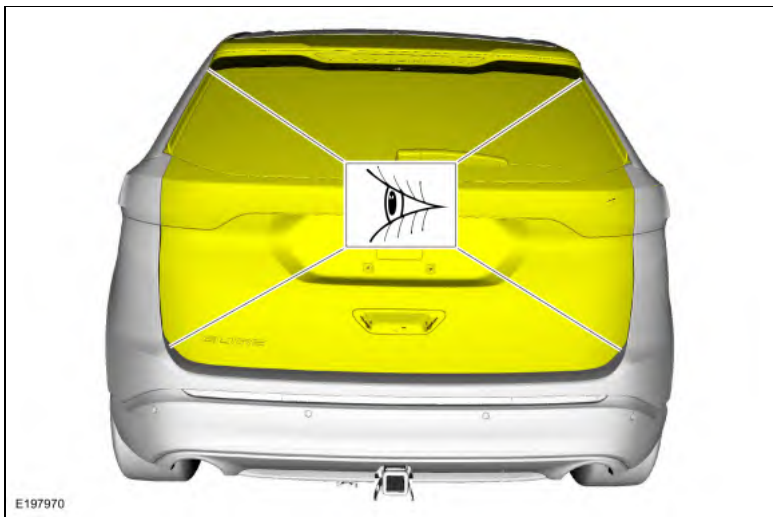

17. Install the removed components.
18. If equipped, carry out the power liftgate initialization.
Refer to: Power Liftgate Initialization (501-03 Body Closures, General Procedures).

mcx30.com

Power Liftgate Initialization

Initialization

1. Disconnect the battery or remove the RGTM fuse(s).
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
2. **NOTE:** *Remove the battery power from the RGTM for 20 seconds before entering initialization mode.*

Wait 20 seconds and reconnect the battery or reinstall the RGTM fuse(s).
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3. If the liftgate is not already in the fully closed position, manually close and fully latch the power liftgate.
4. **NOTE:** *If equipped, make sure the power liftgate system is turned ON in the message center before performing this step.*

NOTE: *If the power liftgate does not open during this step, refer to the Symptom Chart to diagnose the inoperative power liftgate.*

Power open the liftgate by using a programmed RKE transmitter or the front control switch.
5. Once the liftgate is fully open, power close the liftgate by using a programmed RKE transmitter or the front power liftgate control switch.
6. Carry-out the RGTM self-test.

Rear Door Alignment

Inspection

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.

1. Inspect the rear door-to-body dimensions.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).


Adjustment

All alignments

1. Open the rear door.



2. Remove the bolts and the striker assembly.
Torque: 18 lb.ft (25 Nm)

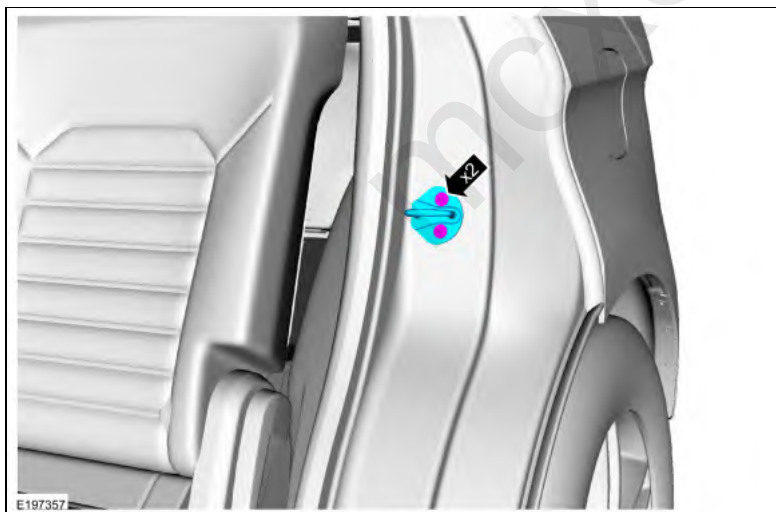

Rear door in and out, up and down alignment

3. Loosen the bolts to permit movement of the door.
Loosen:
: 2 turn(s)