




4. Adjust the door to specification.
Refer to: Body and Frame (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

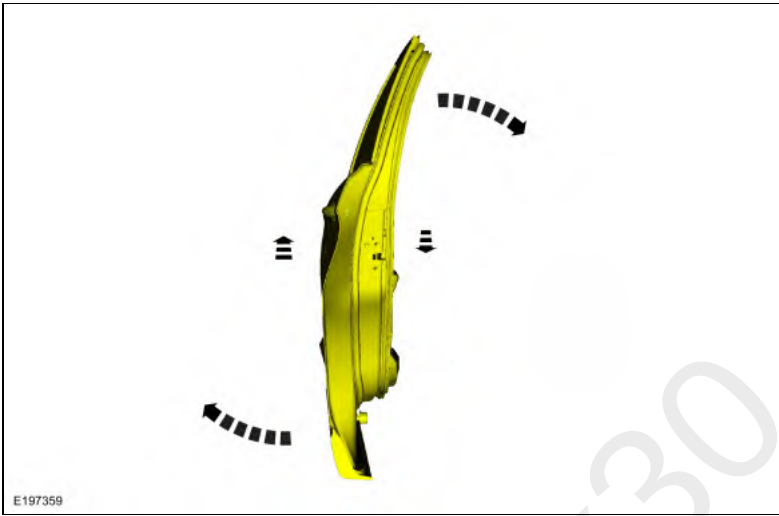

5. Tighten the bolts.
Torque: 35 lb.ft (48 Nm)