



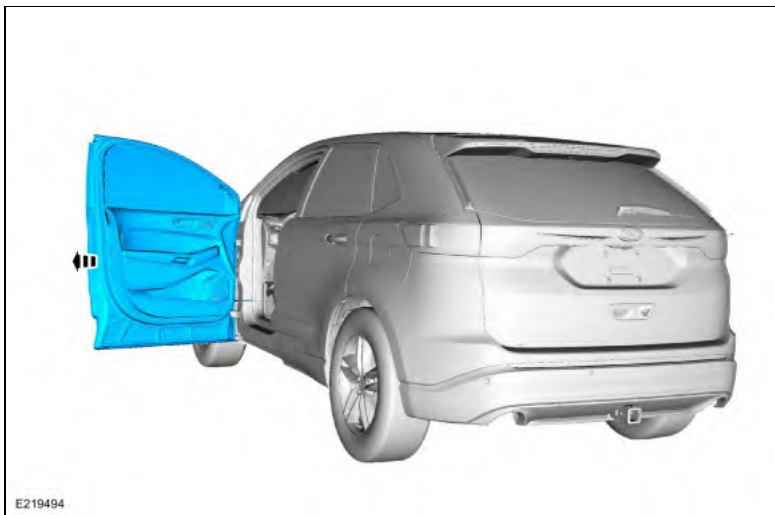

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Check the door-to-body alignment. Align the door as necessary.
Refer to: Front Door Alignment (501-03 Body Closures, General Procedures).

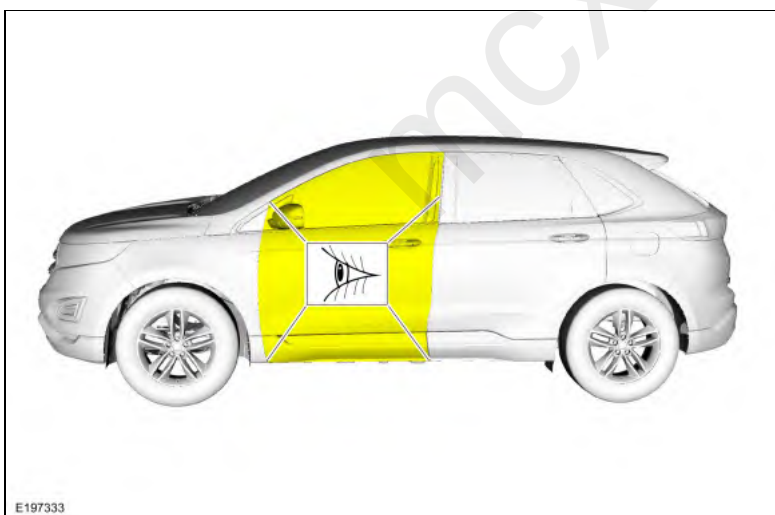


Front Door Check Arm

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.

1. Open the door.

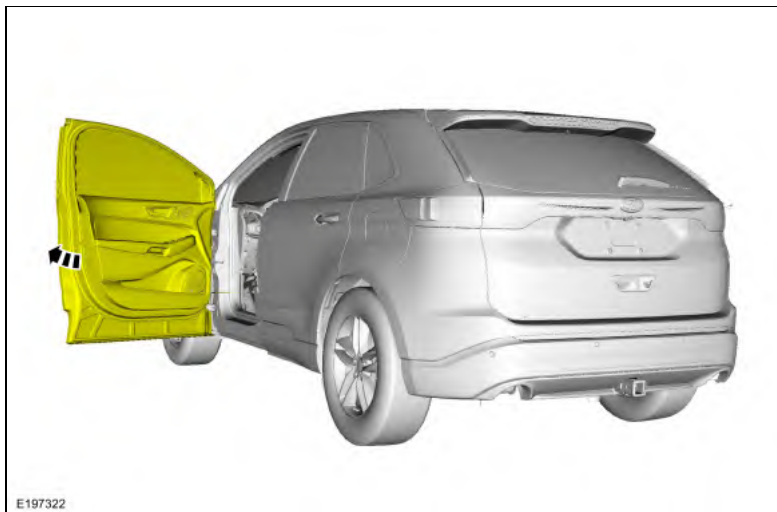


2. Remove the check arm bolt.
Torque: 18 lb.ft (25 Nm)

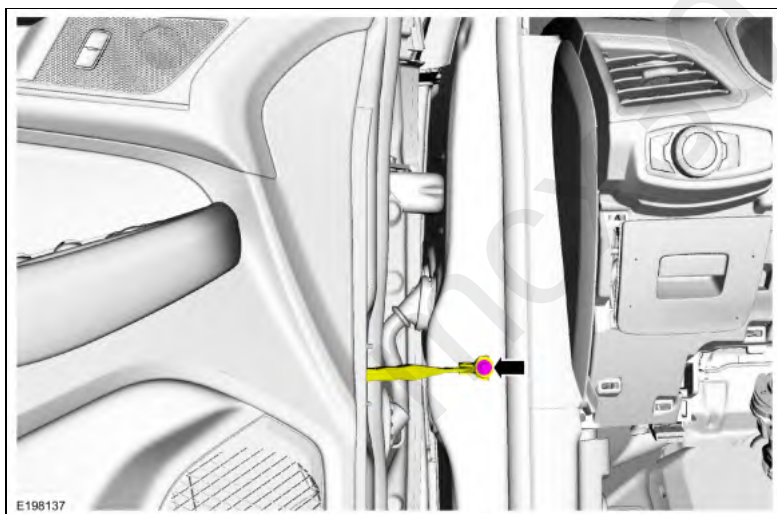

3. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
4. **NOTE:** Door removed from vehicle for clarity.


Remove the front door speaker.

1. Disconnect the electrical connector.
2. Remove the bolts and the speaker.
Torque: 22 lb.in (2.5 Nm)

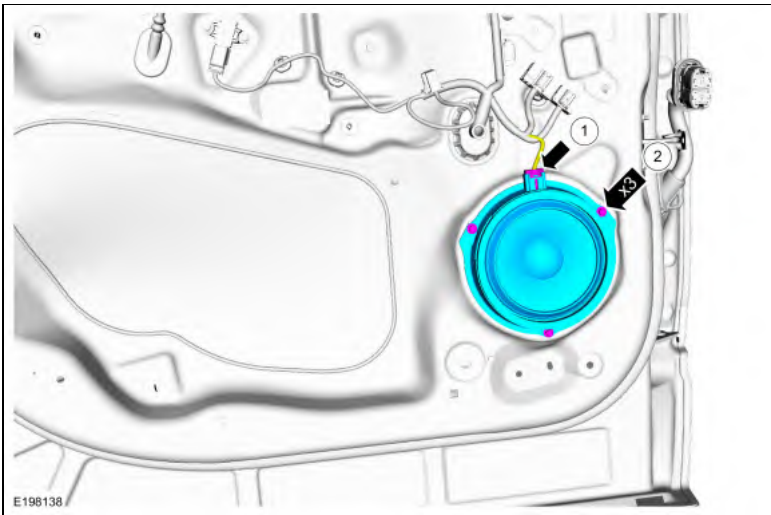

5. **NOTE:** *Door removed from vehicle for clarity.*

Remove the front door check arm nuts.
Torque: 106 lb.in (12 Nm)

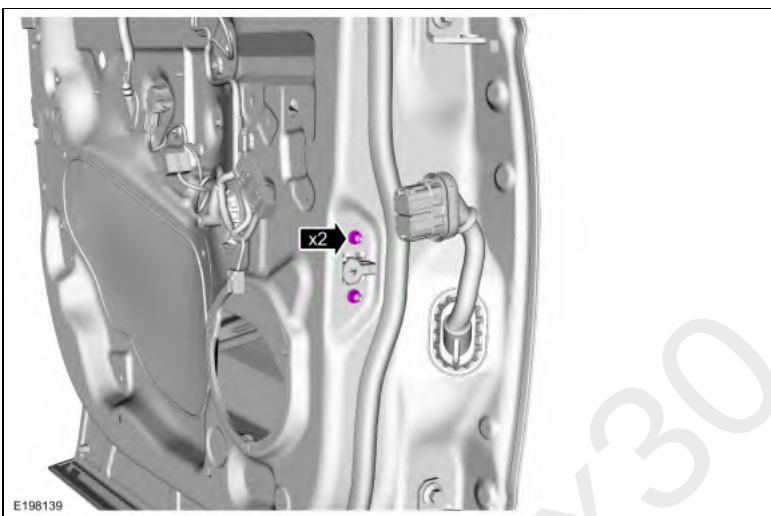

6. **NOTE:** *Door removed from vehicle for clarity.*

Remove the front door check arm assembly.