


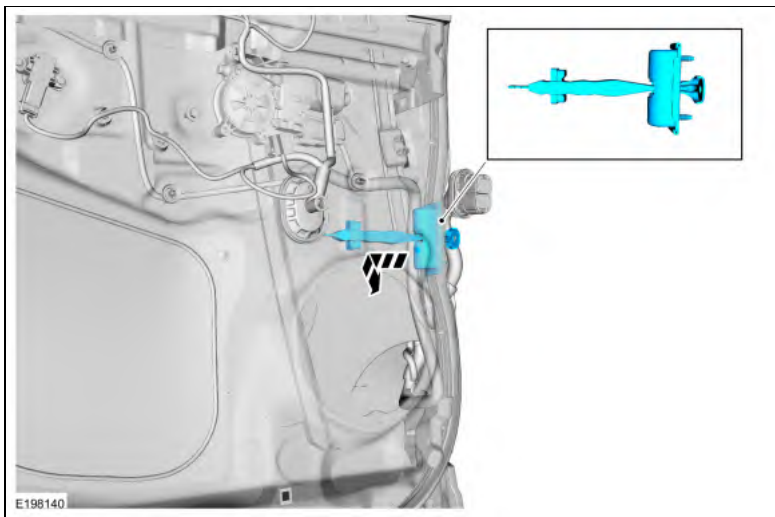

Installation


1. To install, reverse the removal procedure.

Hands-Free Liftgate Actuation Module


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear bumper cover.
Refer to: Rear Bumper Cover (501-19 Bumpers, Removal and Installation).
2. Disconnect the hands-free liftgate actuation module electrical connectors.

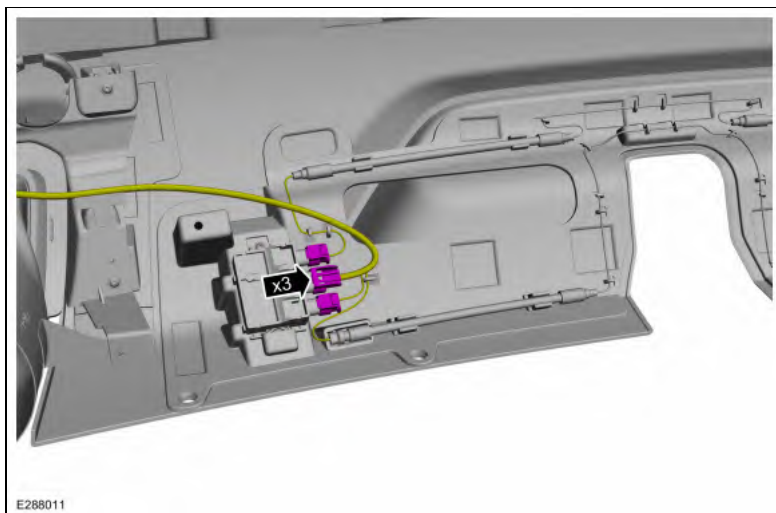

3. Remove the screw and the hands-free liftgate actuation module.
Torque: 27 lb.in (3 Nm)

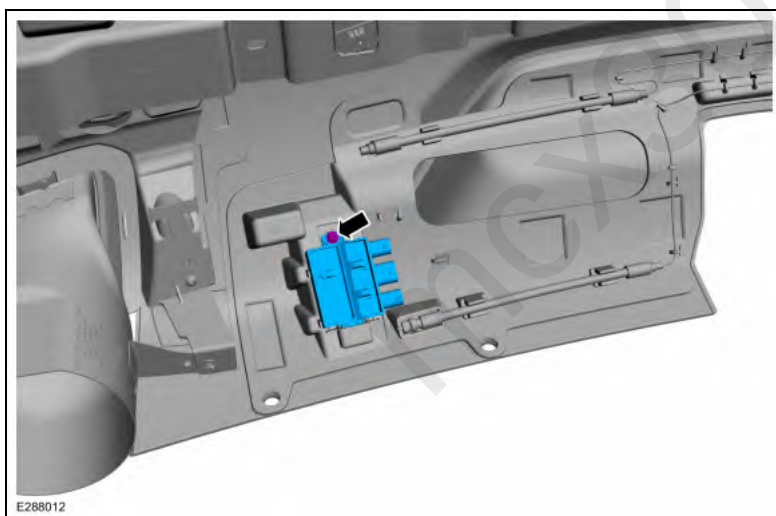

Installation

1. To install, reverse the removal procedure.

