



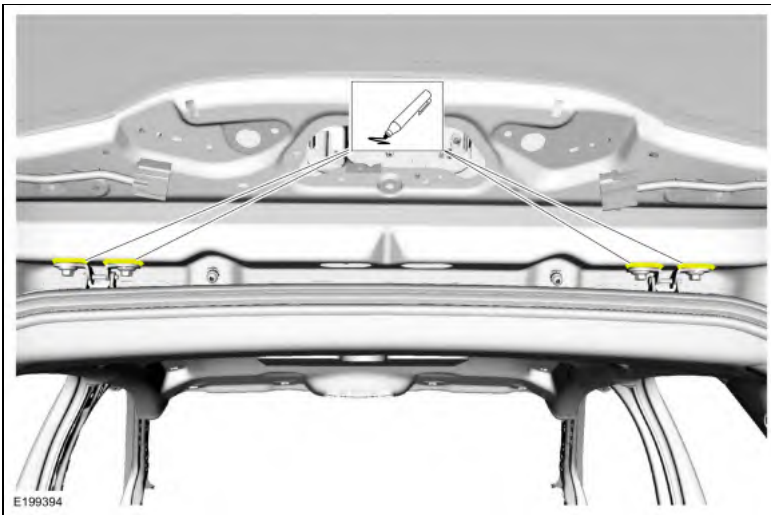

6. **NOTE:** This step requires the aid of another technician.

On both sides.
Remove the clips holding the liftgate struts or the power liftgate motor and position aside.

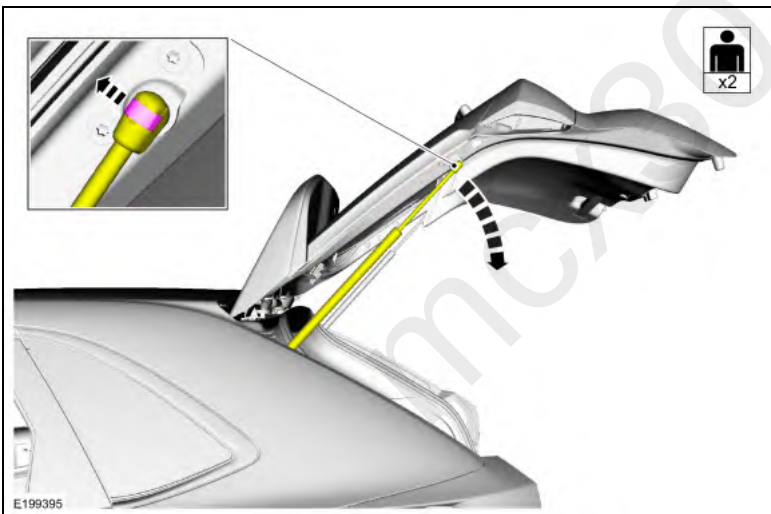

7. **NOTE:** This step requires the aid of another technician.

Remove the liftgate bolts and remove the liftgate from the vehicle.
Torque: 22 lb.ft (30 Nm)



Installation

- 1. To install, reverse the removal procedure.
 - 2. Align the liftgate as necessary.
- Refer to: Liftgate Alignment (501-03 Body Closures, General Procedures).


mcx30.com

Liftgate Anti-Pinch Switch


Removal

NOTE: LH side shown, RH side similar.


1. Remove the liftgate trim panel.
Refer to: Liftgate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the liftgate anti-pinch switch electrical connector.

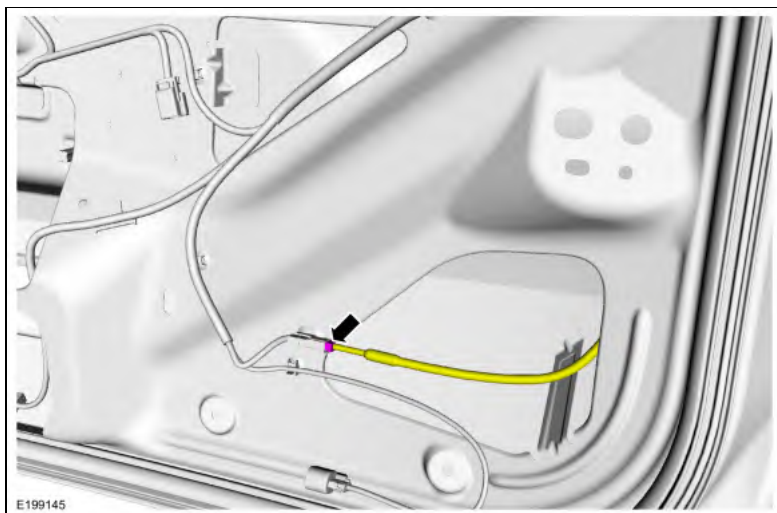

3. Remove the retainers.

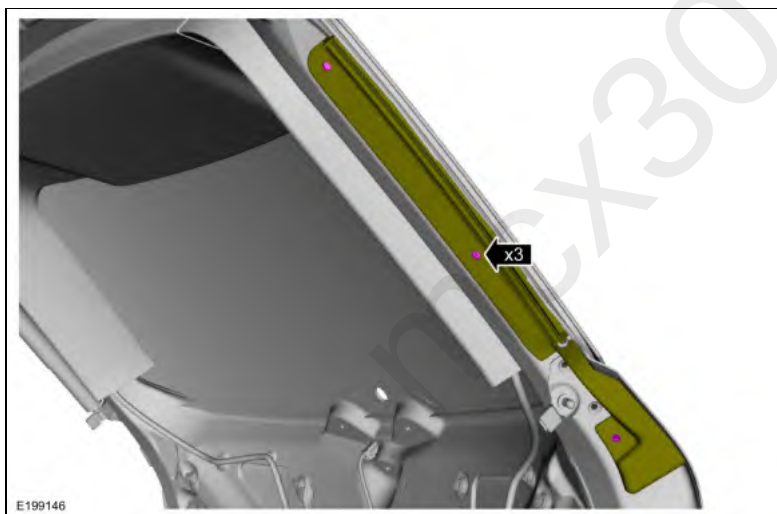

4. Remove the liftgate anti-pinch switch.
 1. Remove the rubber grommet and route the electrical connector out of the liftgate.
 2. Remove the liftgate anti-pinch switch.

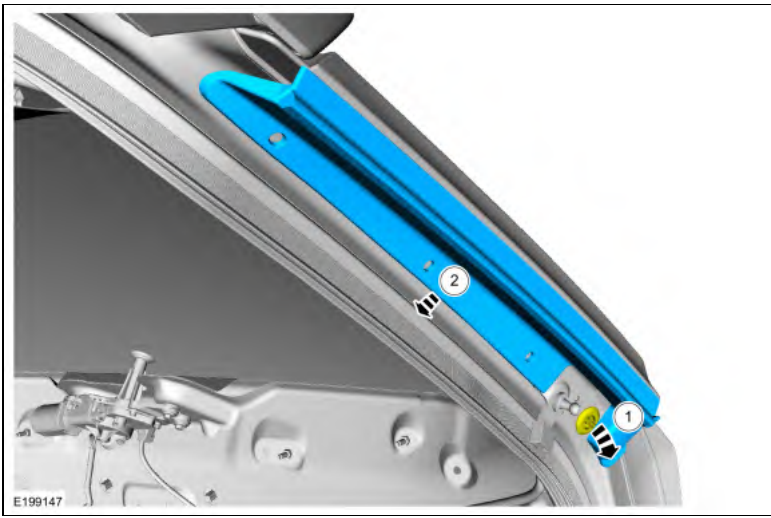

Installation

- 1. To install, reverse the removal procedure.

mcx30.com