

Rear Door

Special Tool(s) / General Equipment

Door Lift

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.


1. Open the door.




2. Remove the check arm bolt.
Torque: 18 lb.ft (25 Nm)

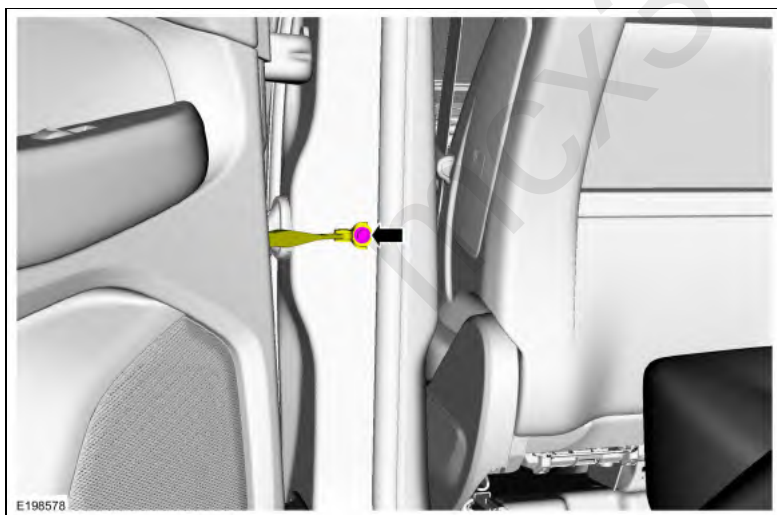

3. Disconnect the rear door electrical connector.

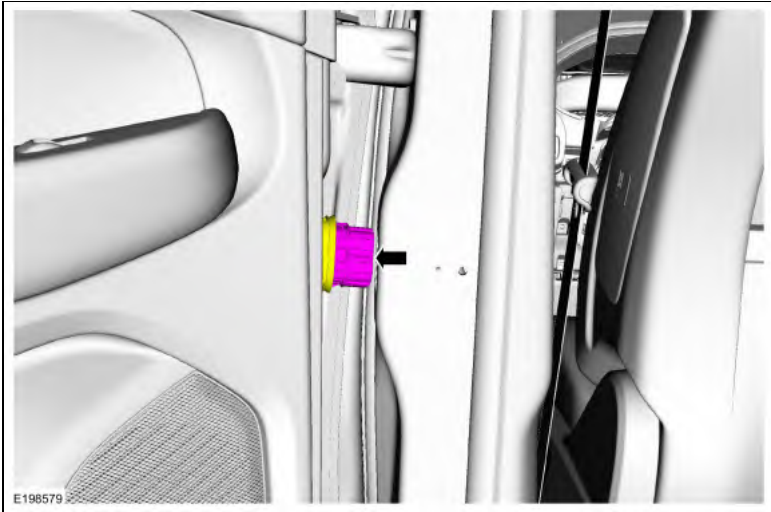

- Remove the door hinge pivot bolts.
Use the General Equipment: Door Lift
Torque: 22 lb.ft (30 Nm)

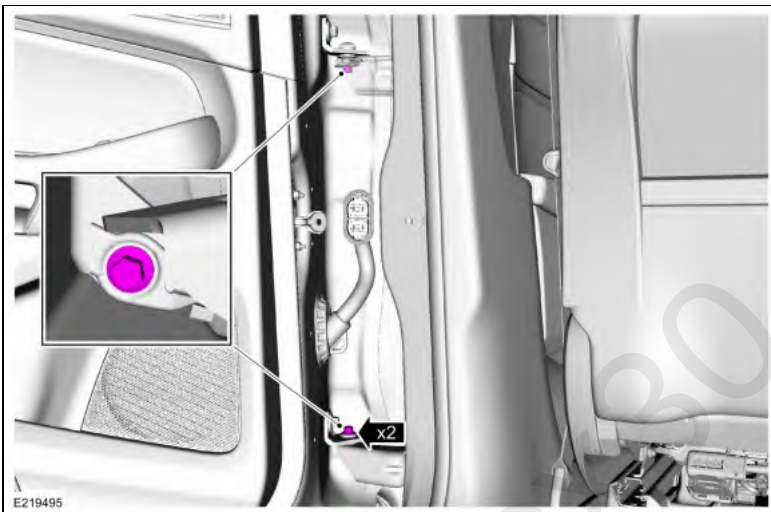

- Remove the rear door.
Use the General Equipment: Door Lift