





6. Remove the lower B-pillar trim panel retainer.
Torque: 80 lb.in (9 Nm)

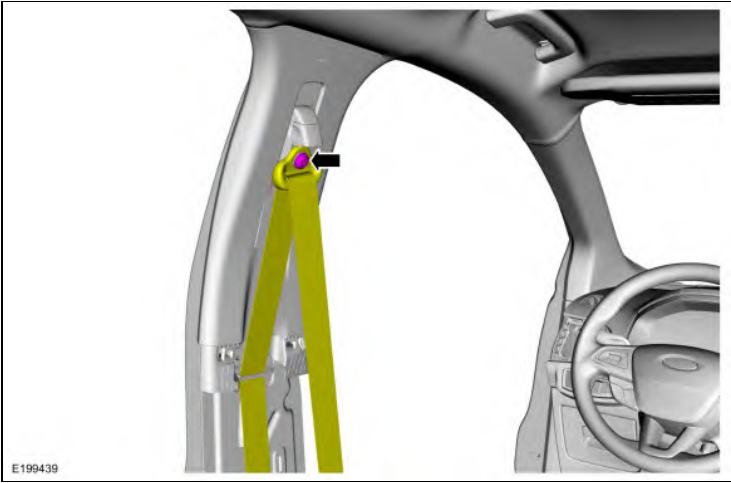


7. Release the upper B-pillar trim panel lower clip.

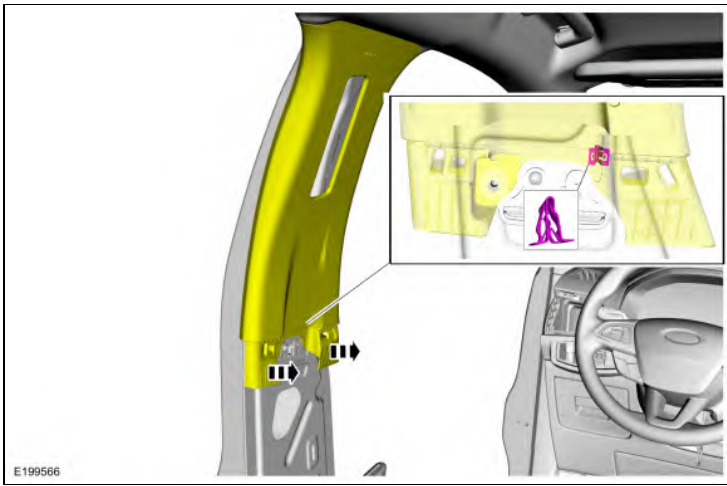

8. **NOTICE:** The trim panel must be positioned downward to allow the upper clips to release correctly. Failure to follow this direction may cause damage to the trim panel.

Slide the upper B-pillar trim panel down, aligning the clips to the slots in the sheet metal.

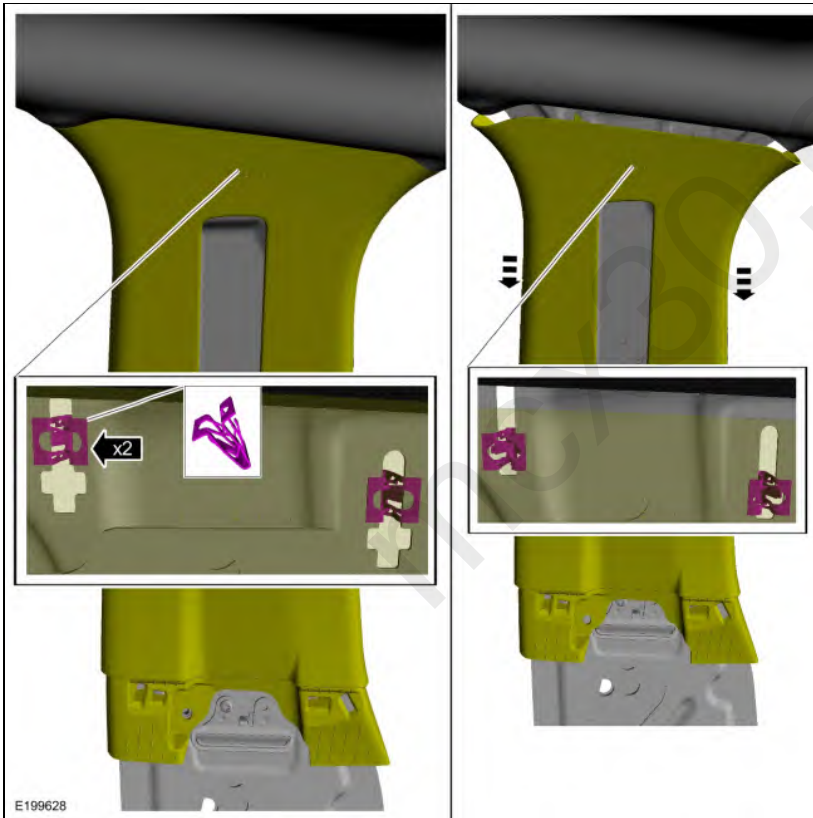

9. Remove the upper B-pillar trim panel.



Installation

1. To install, reverse the removal procedure.
 - During installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

mcx30.com


C-Pillar Trim Panel

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.


1. Remove the loadspace trim panel.
Refer to: Loadspace Trim Panel (501-05 Interior Trim and Ornamentation).
2. Release the clips and remove the D-ring bolt cover.

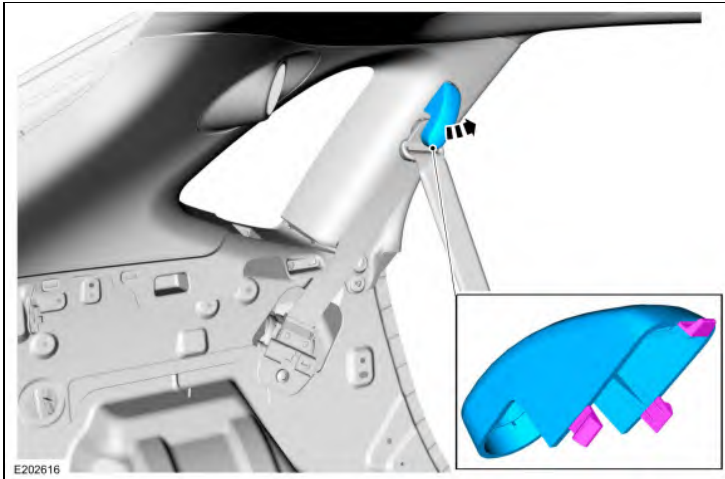


3. Remove the D-ring bolt and position the safety belt aside.
Torque: 30 lb.ft (40 Nm)

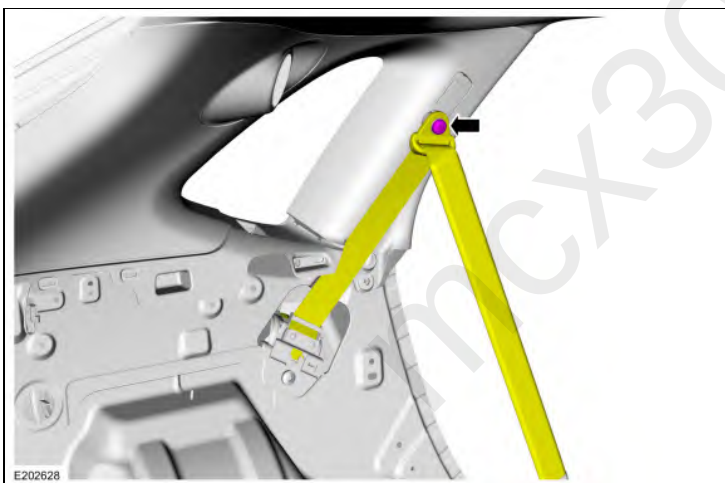

4. If equipped.
Disconnect the speaker electrical connector.

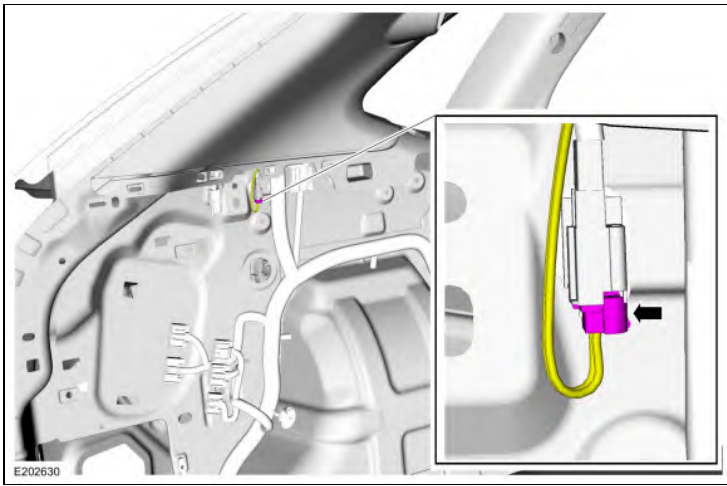

5. Remove the C-pillar trim panel bolt.
Torque: 80 lb.in (9 Nm)

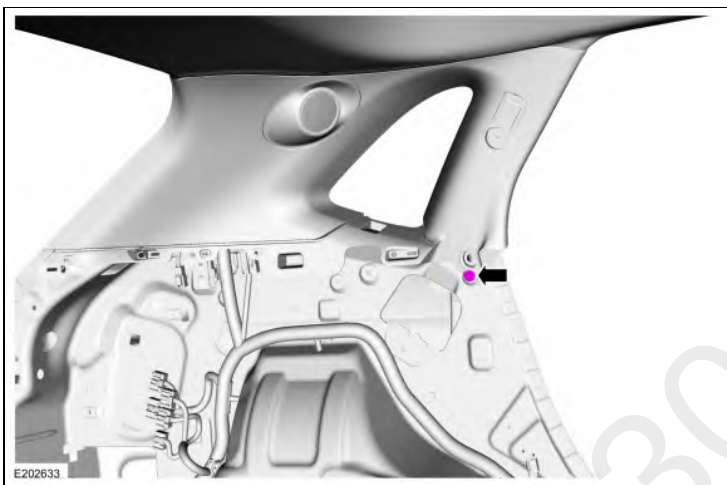

6. Release the front lower clip and the upper rear pin-type retainer.