



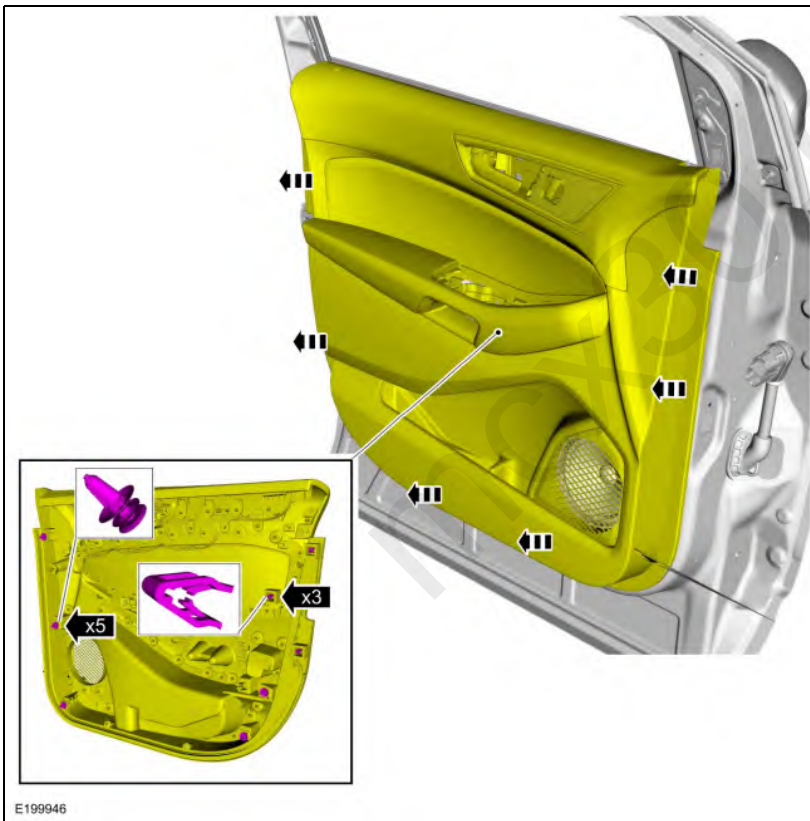

7. Release the door trim panel clips and separate the door trim panel from the door..

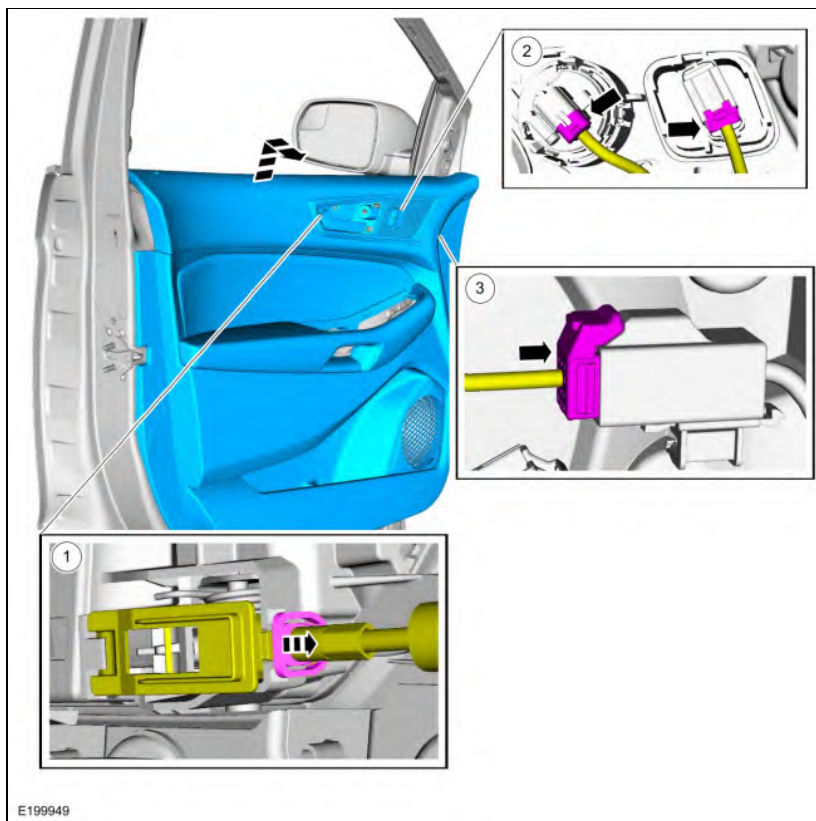

- 8.
1. Release the tab and disconnect the latch cable.
 2. Disconnect the speaker and the power door locks switch electrical connectors.
 3. Disconnect the ambient light electrical connector and remove the front door trim panel.



Installation

1. To install, reverse the removal procedure.

mcx30.com

Headliner

Special Tool(s) / General Equipment

Interior Trim Remover

Materials

Name	Specification
3M [®] Super-Fast Repair Adhesive - 04747	-


Removal

1. Remove the following items:
1. On both sides, remove the A-pillar trim panels.
Refer to: A-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. On both sides, remove the B-pillar trim panels.
Refer to: B-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).



3. On both sides, remove the C-pillar trim panels.
Refer to: C-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. If equipped.
1. Disconnect the headliner RH wire harness.

2. Release the clips and position the RH wire harness aside.


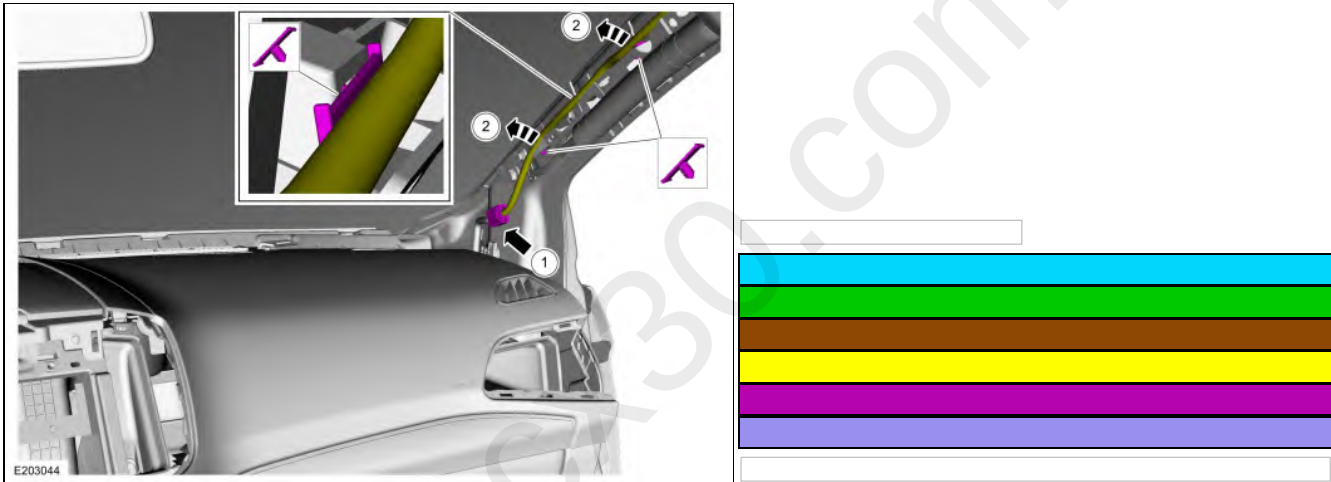


3. Position aside the headliner LH wire harness.
1. Disconnect the LH wire harness.

 2. Release the clips and position the LH wire harness aside.

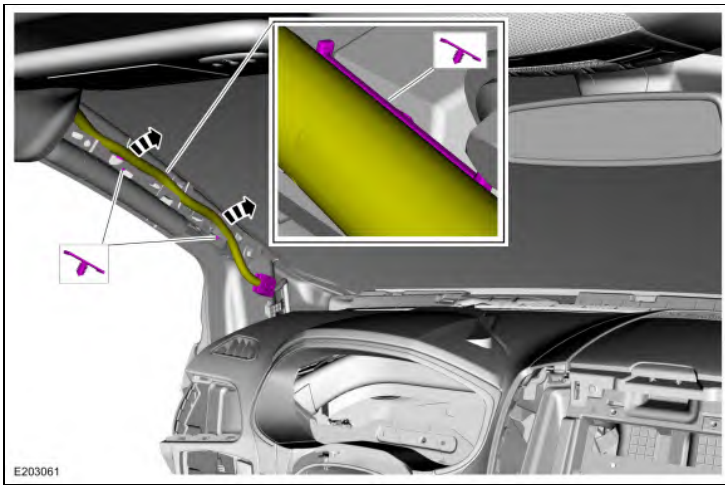

 4. If equipped.
Release the clips and remove the rear view mirror front cover.
Use the General Equipment: Interior Trim Remover

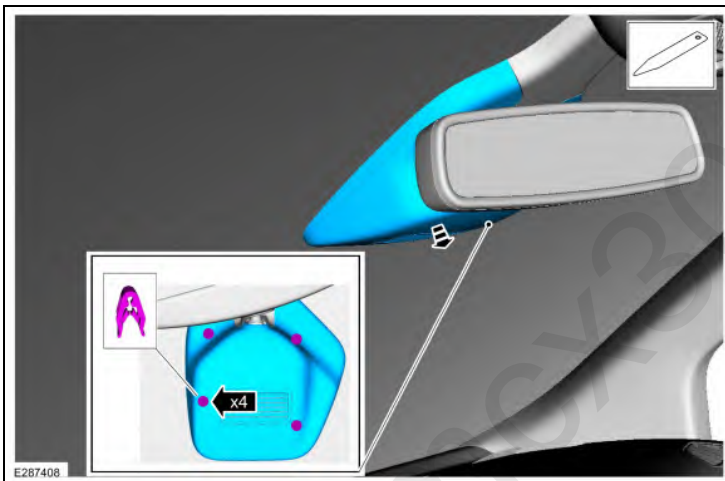

5. If equipped.
Release the clips and remove the rear view mirror rear cover.
Use the General Equipment: Interior Trim Remover