


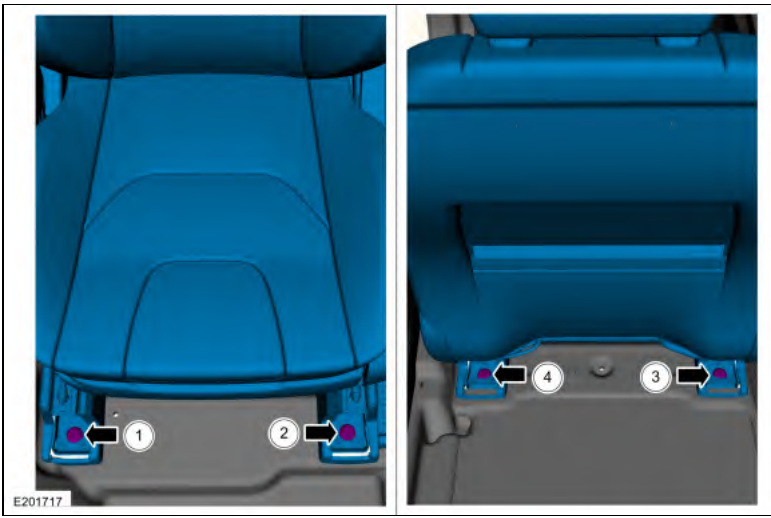

3. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).

mcx30.com

Front Seat Backrest Blower Motor

Special Tool(s) / General Equipment

Hog Ring Plier



Removal

NOTE: Driver seat shown, passenger seat similar.

NOTE: Seat backrest blower motor without snorkel shown, unless otherwise called out.

NOTE: Methods are common among all options unless otherwise specified.


1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. Position the backrest wire harnesses aside.
 1. Detach the electrical connector retainers from the seat track.
 2. Release the locking tabs and disconnect the backrest wire harness electrical connectors.

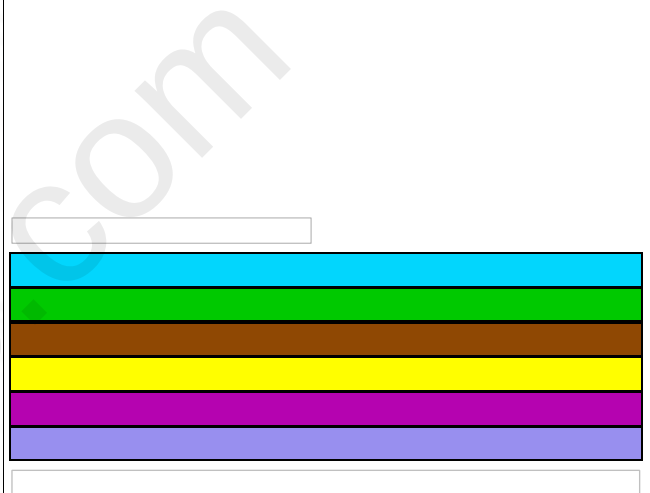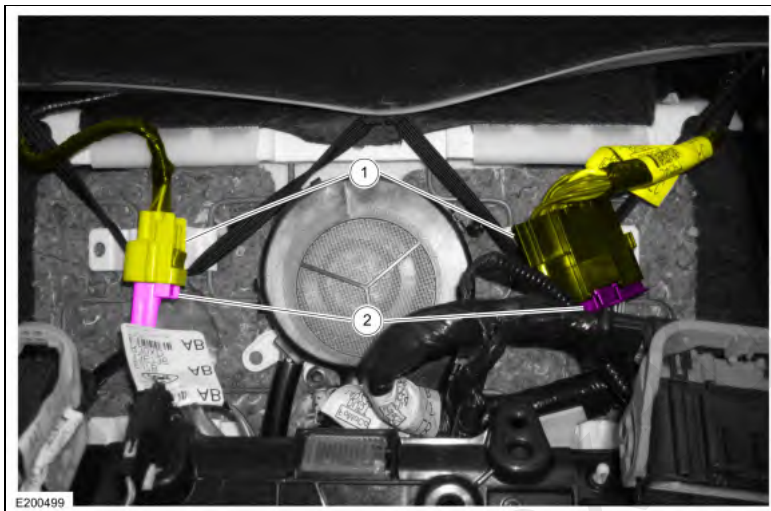


3. **NOTE:** Seat cushion blower motor shown.

NOTE: Follow the unique instructions or graphics for this step in the installation for backrest blower motor snorkel routing.

1. Detach the backrest cover straps.
2. Route the backrest cover straps through the backrest blower motor snorkel.
3. Position the backrest cover upward.

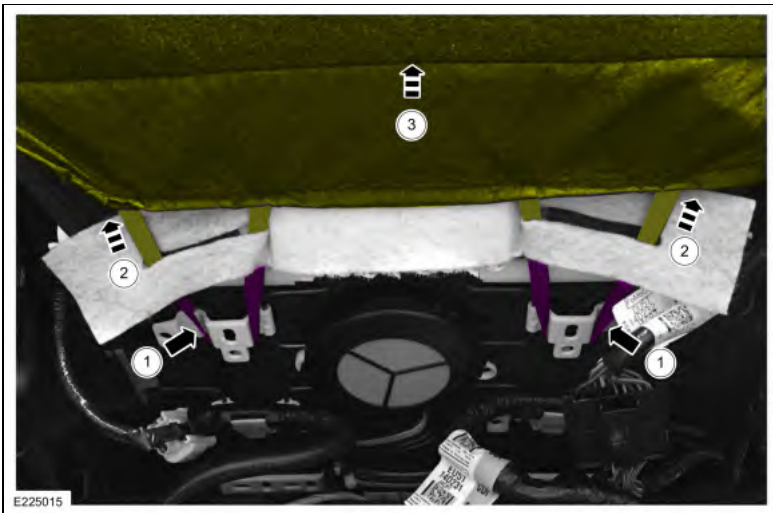

4. Detach the backrest wire harness retainers and position the wire harnesses aside.

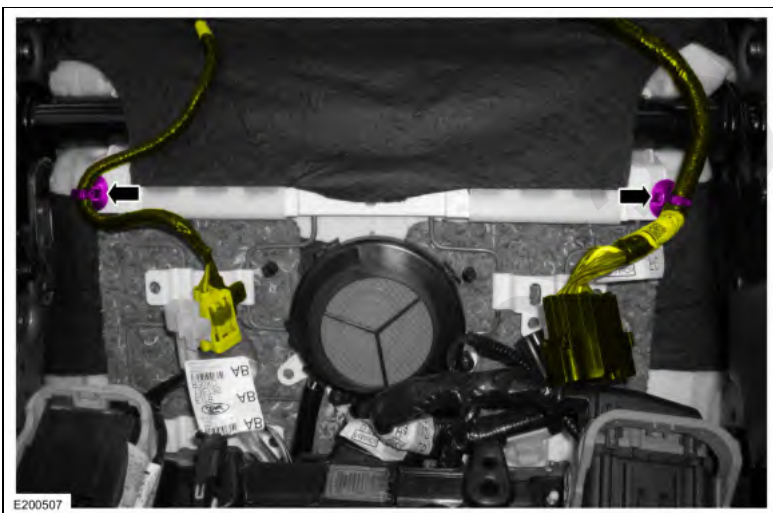

5. Release the backrest cover lower J-clip.