





- 7.
- Remove the height adjusting handle.
 1. Raise the height adjusting handle.
 2. Release the locking tab.
 3. Slide the height adjusting handle forward.

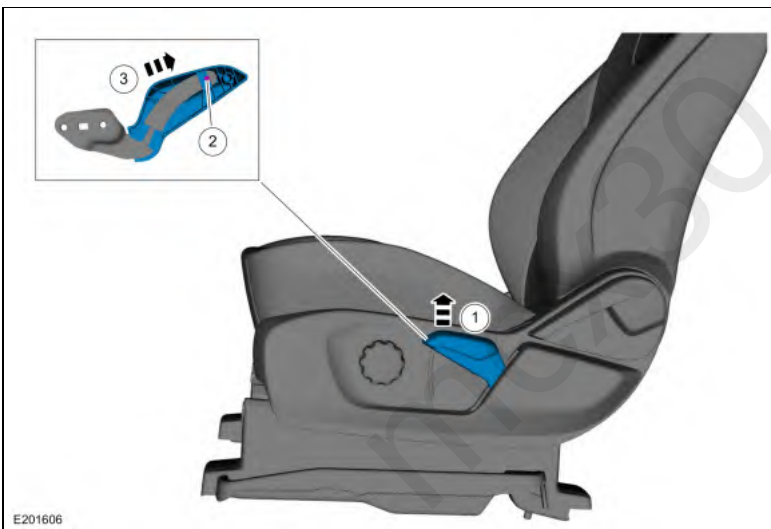


- 8.
1. Remove the clip and the recline handle.
 2. Remove the clip and the manual lumbar knob.




9. Remove the side shield screws.

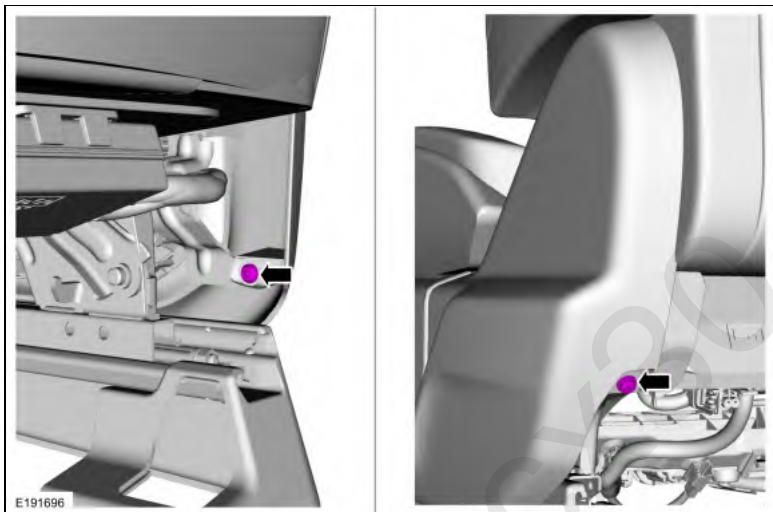


10. Remove the side shield.
1. Firmly grasp the side shield, lift up and out, separating the side shield from the recliner bracket.
 2. Slide the side shield forward.
 3. Lift up on the front of the side shield and slide the side shield from the height adjusting handle lever.

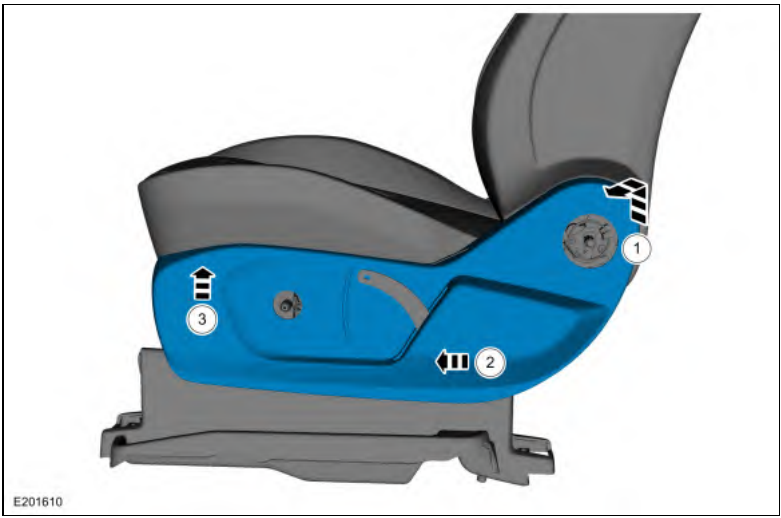

11. Position the manual lumbar assembly cable away from the seat track.
- Disconnect the cable from the manual lumbar actuator.
 - Detach the cable retainers from the seat track.

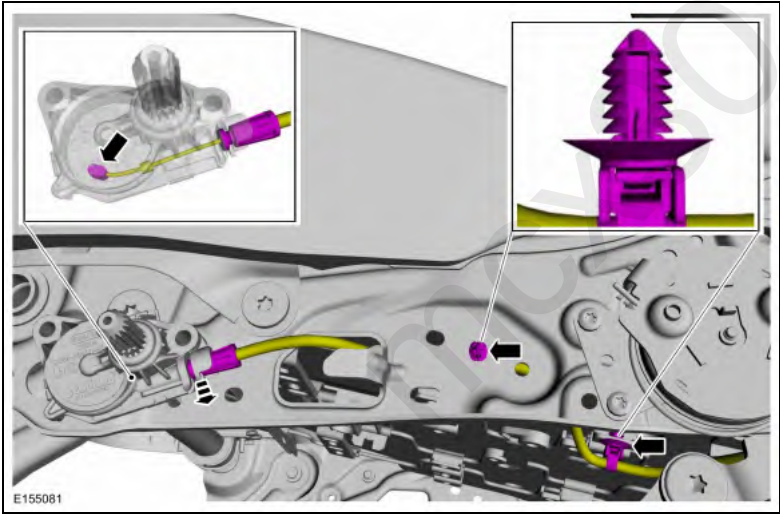

12. Route the manual lumbar cable through the backrest cover opening.

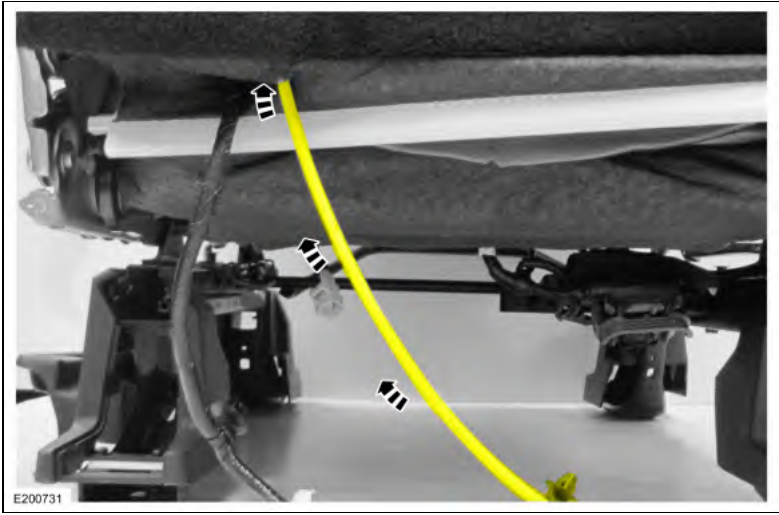


All seats

13. **NOTE:** *Power seat shown, manual seat similar.*
- Route the backrest wire harness(es) through the backrest cover opening(s).




14. Remove the backrest cover pin-type retainers.

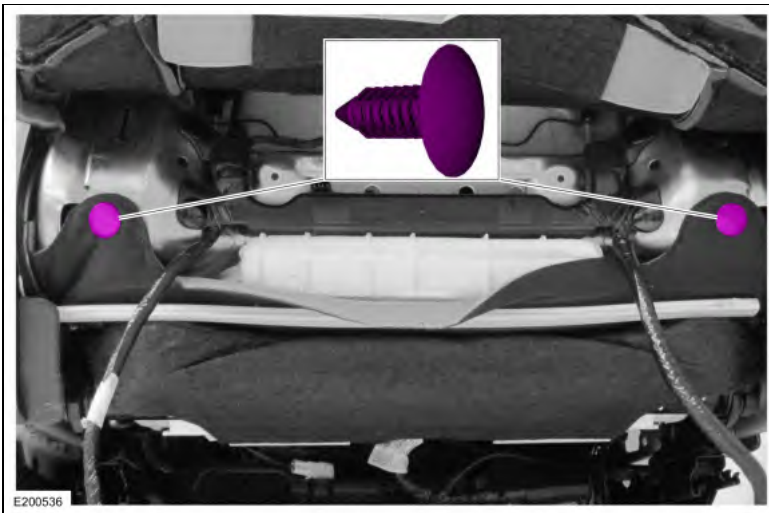


15. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.

Partially invert the backrest cover enough to access the side airbag deployment chute retainer.


1. Release the hook and loop strips.
2. Invert the backrest cover.

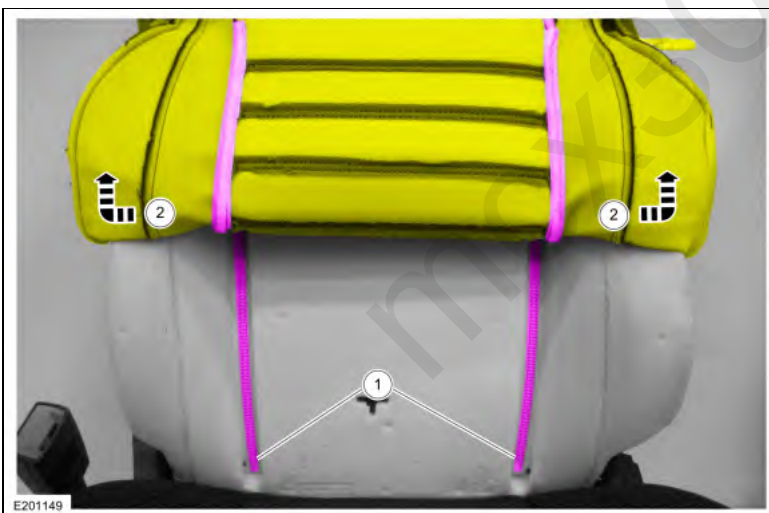

16. Release the side airbag deployment chute retainer and position the chute through the backrest foam opening.

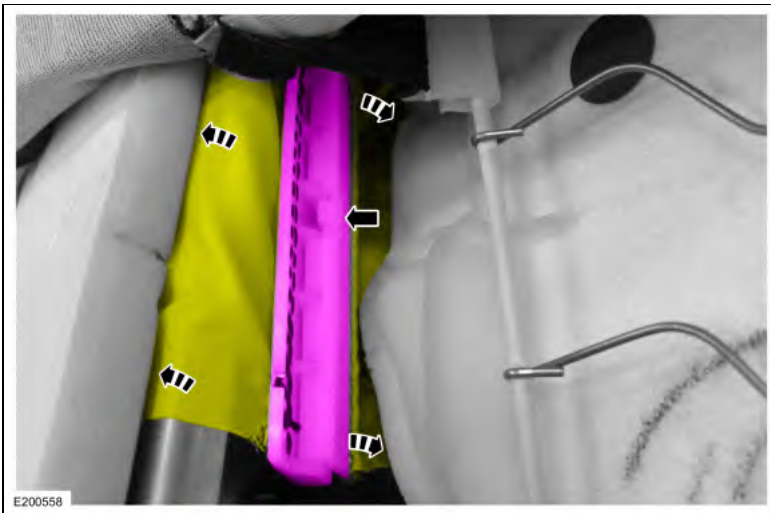

17. Partially invert the backrest cover and release the backrest cover J-clips from the lumbar support springs.

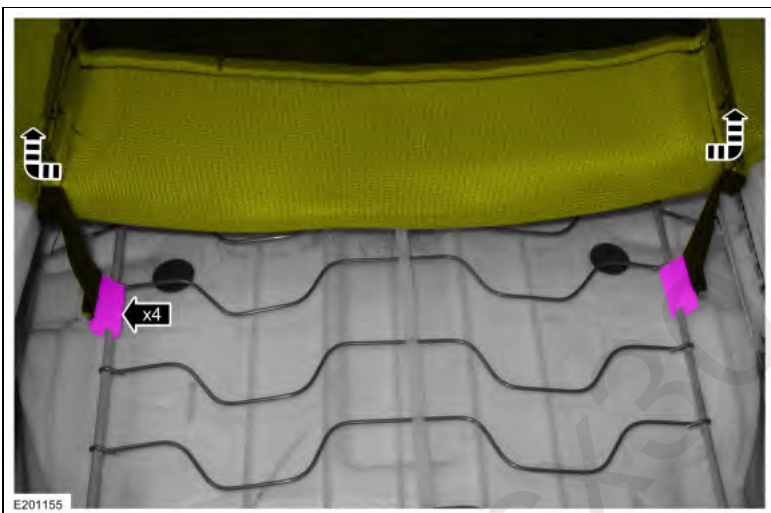


18. Release the backrest cover upper J-clip.



19. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.

Partially invert the backrest cover to the hog rings.

1. Release the hook and loop strips.
2. Invert the backrest cover.

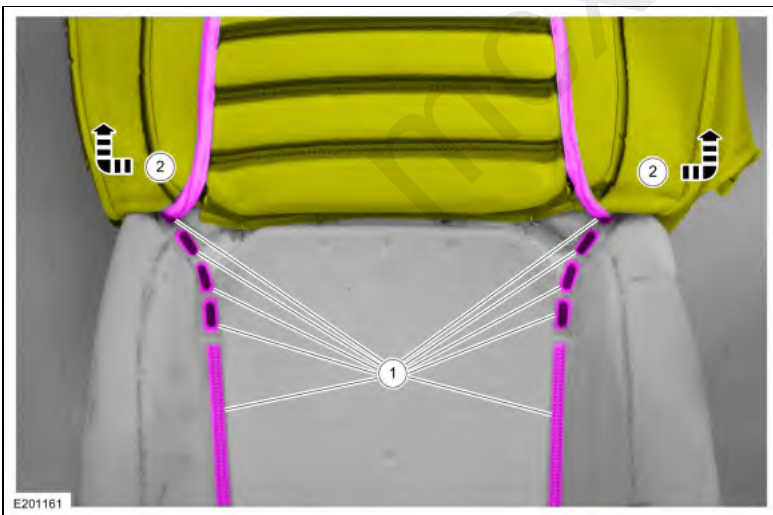

20. **NOTE:** Follow the unique instructions or graphic for this step in the installation.


Remove the hog rings and the backrest cover.

Front Seat Control Switch


Removal

NOTE: Driver seat control switch shown, passenger seat control switches similar.


1. If equipped on passenger seat.
Remove the clip and the recline handle.

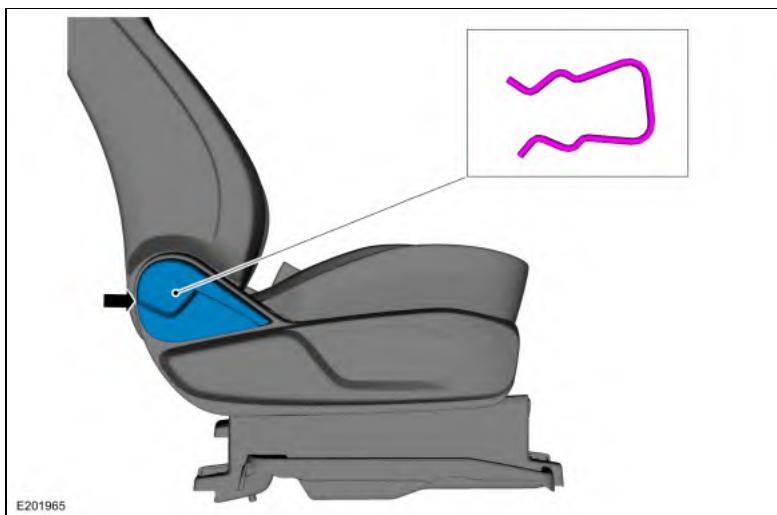


2. Remove the side shield screws.

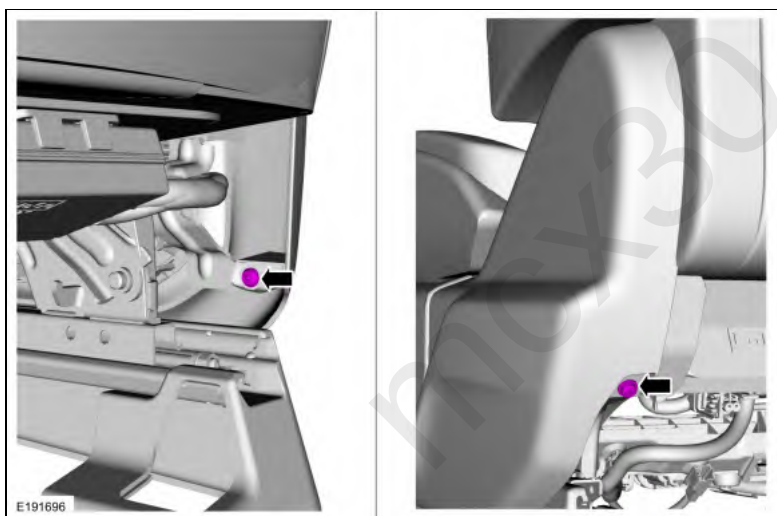

3. Remove the side shield.
 1. Lift up on the rear of the side shield and pull outward.
 2. Push the side shield forward.
 3. Disconnect the electrical connector.

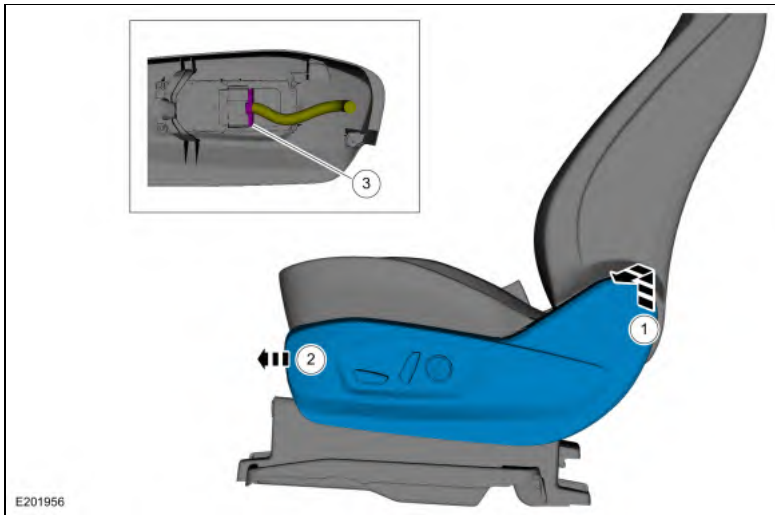

4. Remove the seat control switch knob(s).

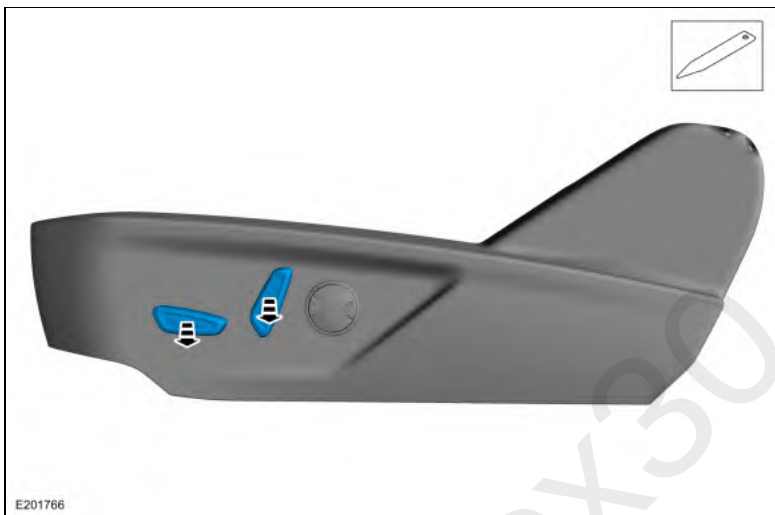

5. **NOTE:** 10-way seat control switch shown, 6-way seat control switch similar.

Remove the screws and the seat control switch.