



7. Remove the backrest cover pin-type retainers.

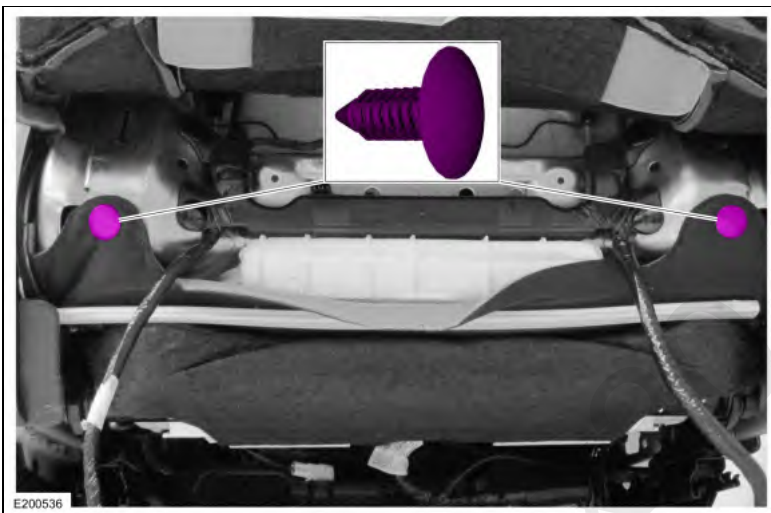


8. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.

Partially invert the backrest cover enough to access the side airbag deployment chute retainer.


1. Release the hook and loop strips.
2. Invert the backrest cover.

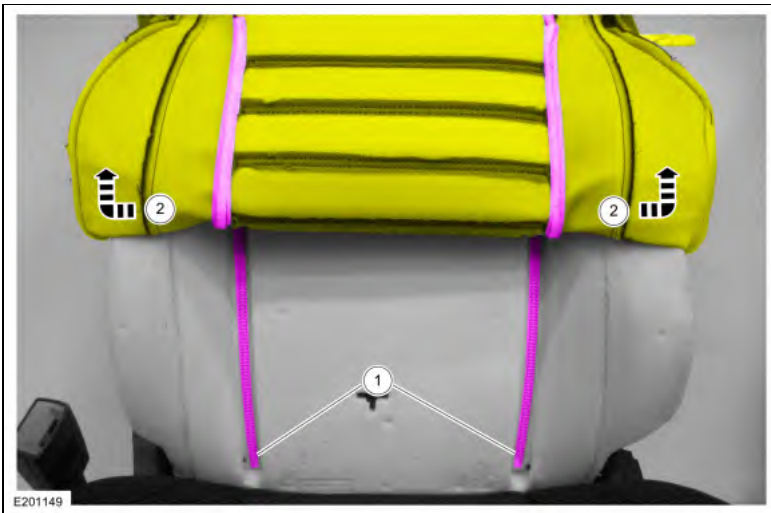

9. Release the side airbag deployment chute retainer and position the chute through the backrest foam opening.

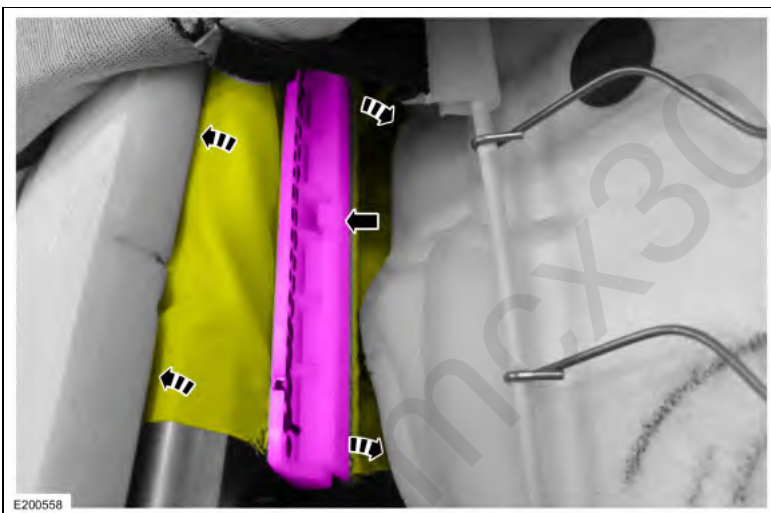


10. Partially invert the backrest cover and release the backrest cover J-clips from the lumbar support springs.

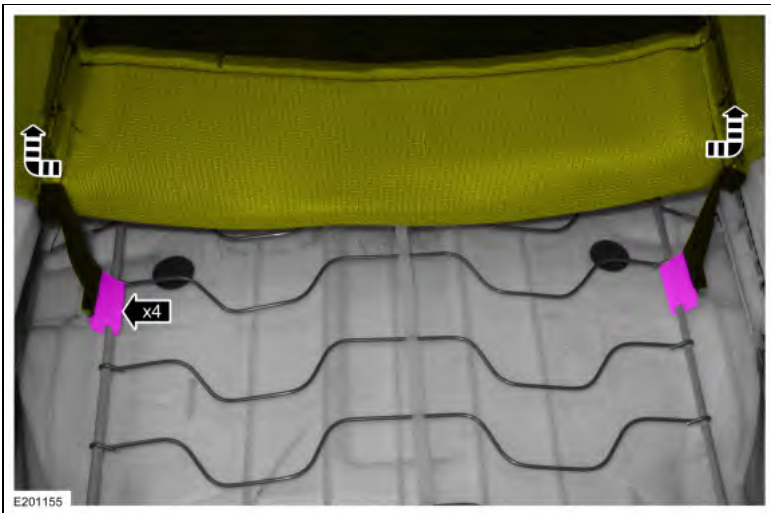

11. **NOTICE:** Use care when separating the seat backrest trim cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the seat backrest foam.


Partially invert the backrest cover to the hog rings.

1. Release the hook and loop strips.
2. Invert the backrest cover.

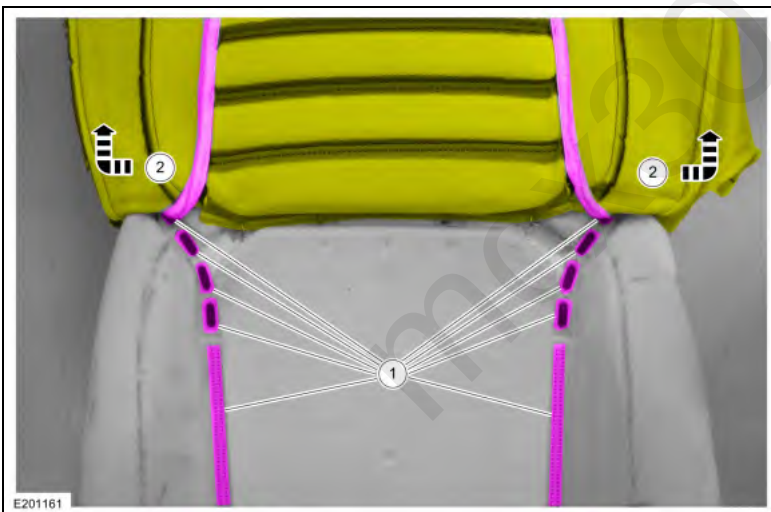

## All Seats

12. Disconnect the electrical connector, release the J-hooks and remove the power lumbar assembly.

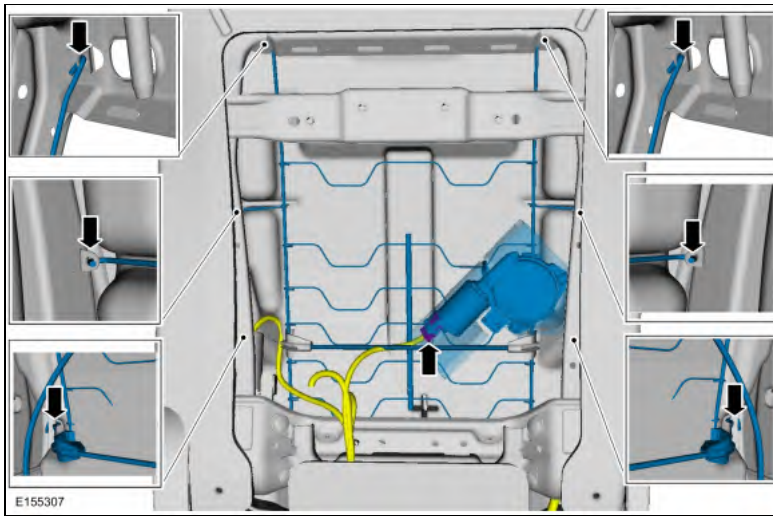

## Installation

1. **WARNING:** Inspect the seat side air bag, air bag cavity, mounting surface and deployment chute for damage or the presence of foreign material. Remove all foreign material. Install a new side air bag if it is damaged. Install a new seat backrest trim cover and deployment chute if the deployment chute is damaged. Position the deployment chute properly and make sure it is closed. Failure to follow these instructions may result in the seat side air bag deploying incorrectly and increase the risk of serious personal injury or death in a crash.

To install, reverse the removal procedure.

mcx30.com

## Front Seat Track


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.


1. If equipped.  
Adjust the manual lumbar to the fully relaxed position.




2. Remove the front seat cushion and cover as an assembly.  
Refer to: Front Seat Cushion Cover (501-10) .
3. **NOTE:** This step is only necessary when the passenger seat is equipped with an original equipment (OE) OCS.  
Remove the OCS.  
Refer to: Occupant Classification System (OCS) Sensor (501-20B Supplemental Restraint System, Removal and Installation).
4. If equipped.  
Position the manual lumbar cable away from the seat track.
  - Disconnect the cable from the manual lumbar actuator.
  - Detach the cable retainers from the seat track.

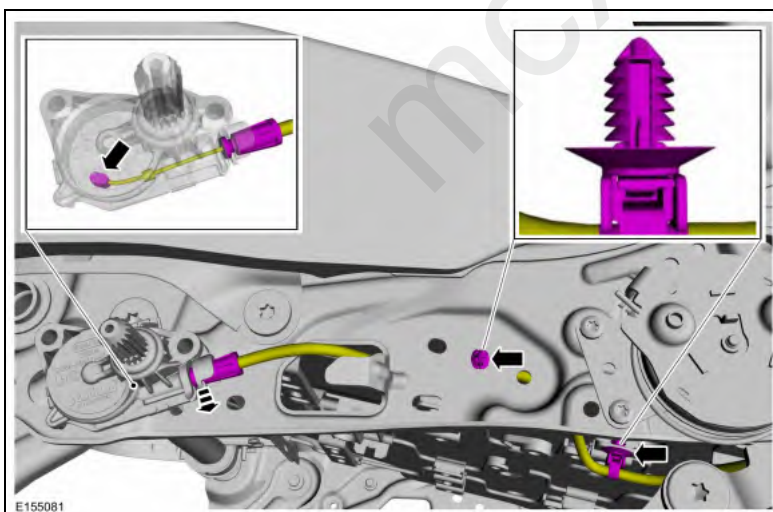

5. Remove the screws and the recline cover.

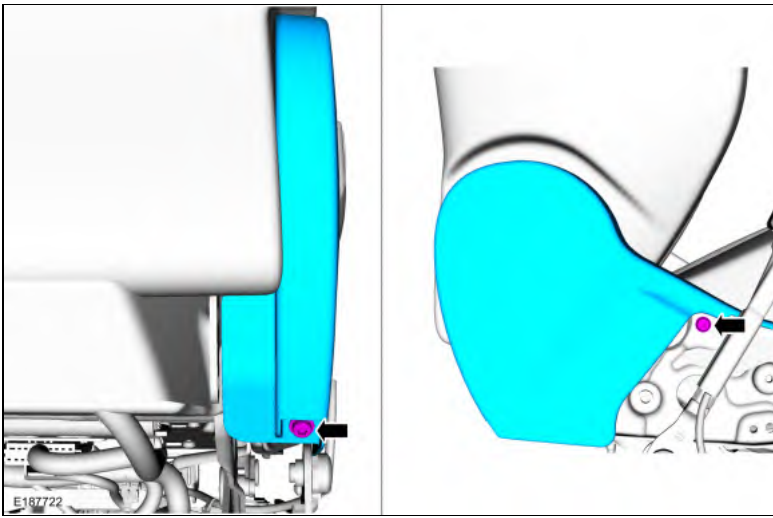

6. Remove the bolts and the front seat backrest.  
Torque: 33 lb.ft (45 Nm)

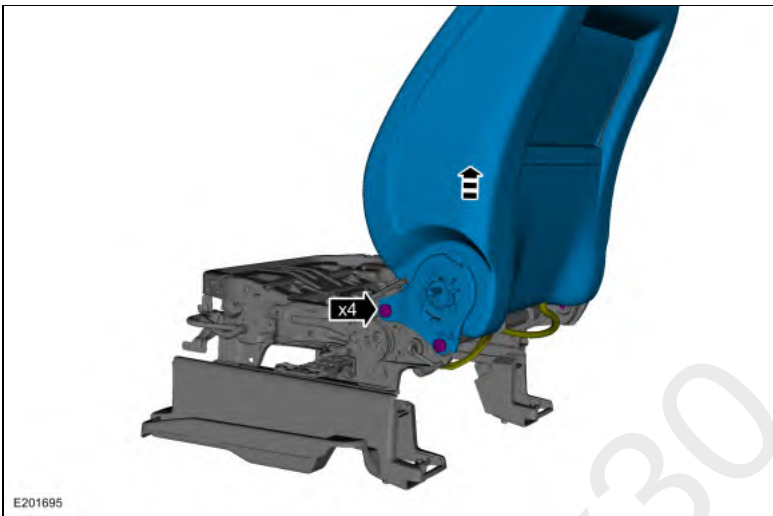

## Installation

### All seats

1. **NOTE:** Transfer components to the new seat track as necessary.

To install, reverse the removal procedure.

### Driver seat with memory

2. **NOTE:** This step is only necessary when installing a new component.

Operate the seat in all directions through the full range of travel to set soft stops and avoid a premature stopping point occurrence after the vehicle is returned to the customer.