

Front Seat Track Motor

Special Tool(s) / General Equipment

Electric Drill

Removal


NOTE: Driver seat shown, passenger seat similar.

1. **NOTE:** Positioning the seat fully upward provides access to service the seat track motor with the seat in the vehicle.


Move the front seat to the full upward position.




2. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).
3. Disconnect the seat harness electrical connector(s).
 1. Detach the wire harness pin-type retainer(s).
 2. Release the locking tab(s) and rotate the position assurance lever(s).

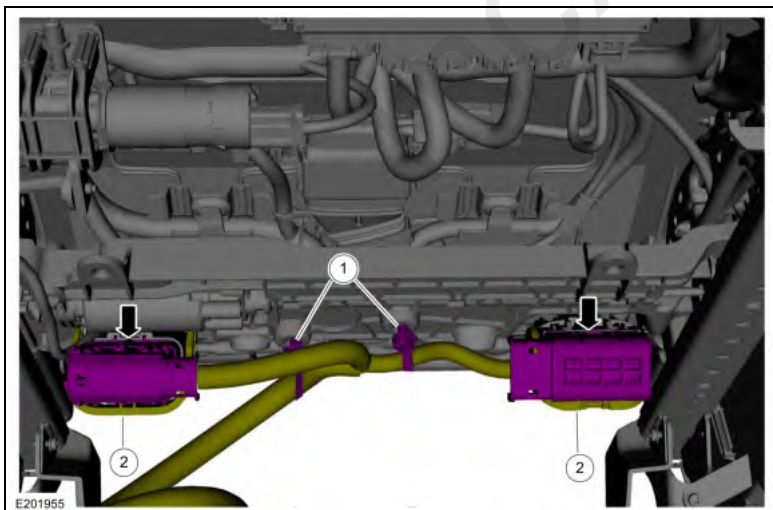


4. Disconnect seat position sensor electrical connector.

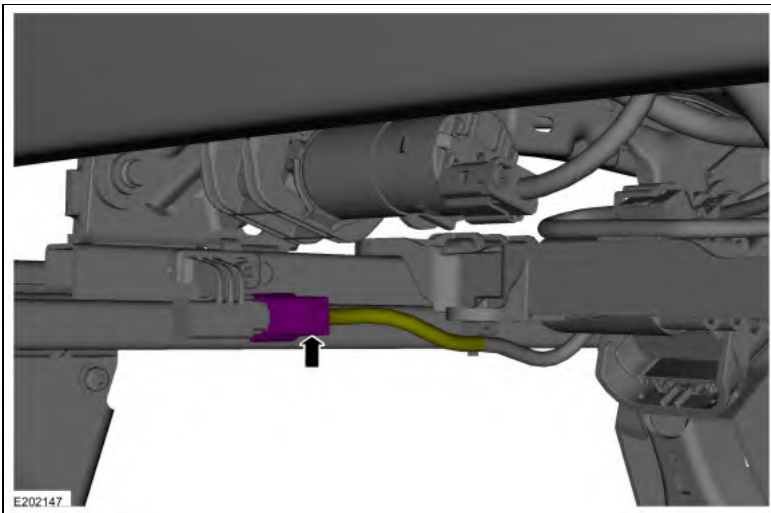

5. Detach the seat track wire harness connector retainer(s) from the seat track motor.

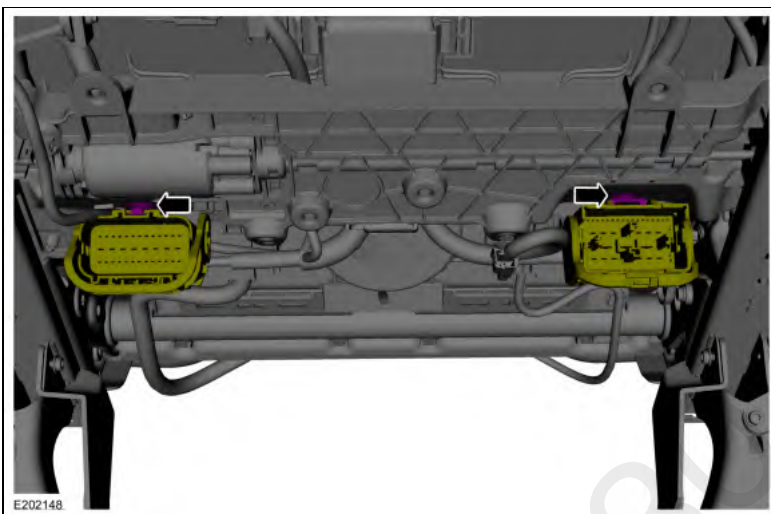

6. If equipped.
Disconnect ambient lamp electrical connector.

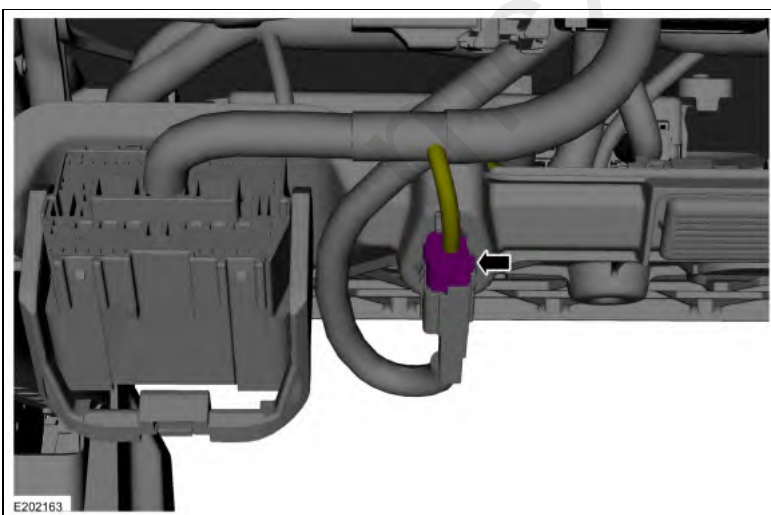

7. **NOTE:** *Seat components are removed for clarity.*

Disconnect the seat track motor electrical connector, detach the wire harness retainers and position the wire harness aside.

