


Driver Door Window Control Switch

Removal

1. **NOTE:** LH side shown, RH side shown.

Remove the front door window control switch.


1. Remove the front door window control switch and the bezel assembly.
2. Disconnect the front door window control switch electrical connector.

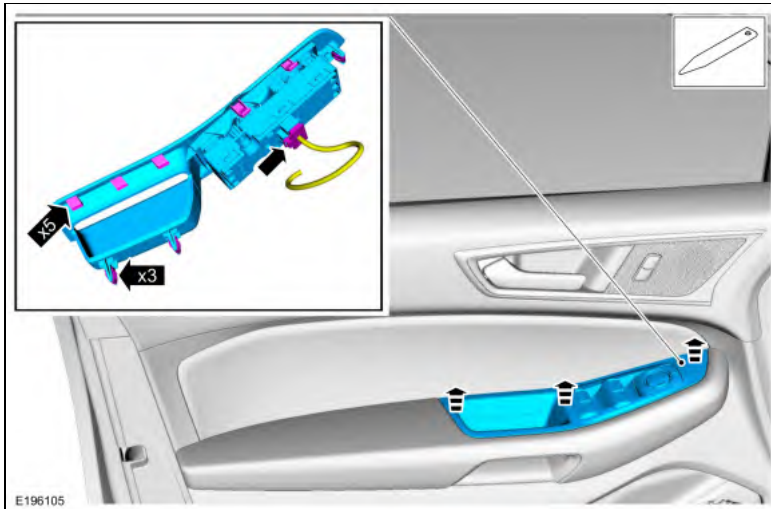

2. **NOTE:** This step is only necessary when installing a new component.

Remove the front door window control switch.

1. Remove the retainers.
2. Remove the front door window control switch from the bezel.

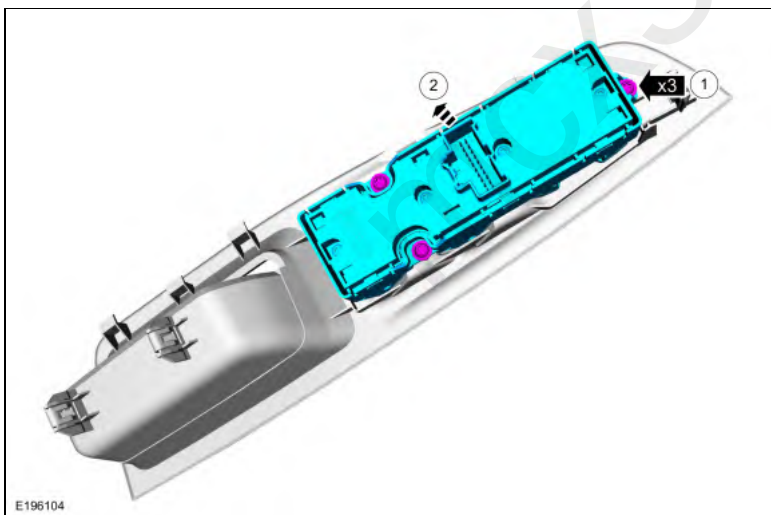

Installation

1. To install, reverse the removal procedure.