



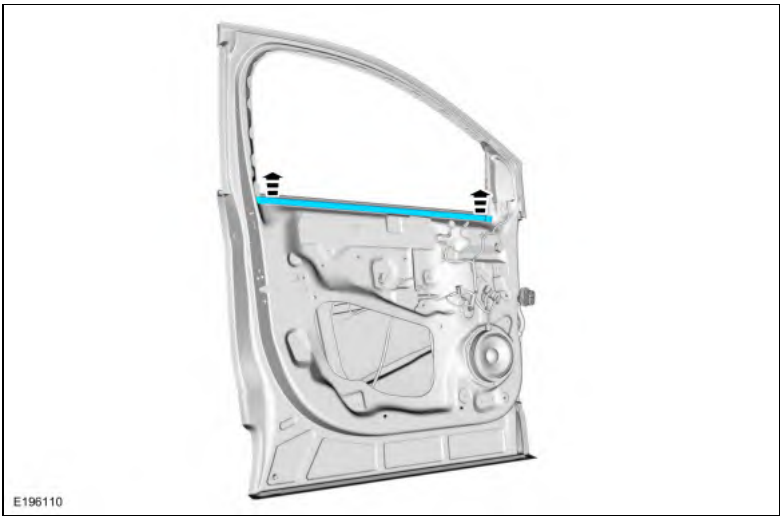

5. Remove the front door speaker.
1. Disconnect the electrical connector and position aside the wiring harness.
 2. Remove the retainers and remove the front door speaker.
- Torque: 22 lb.in (2.5 Nm)*

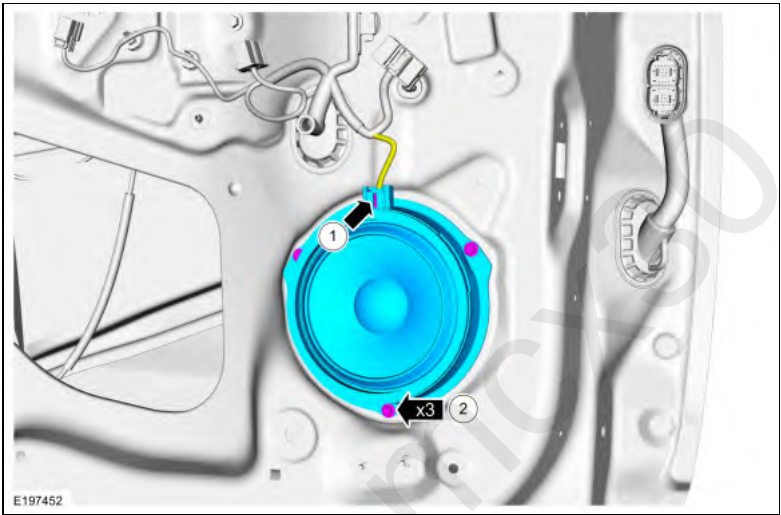

6. Release the clips and remove the sail panel trim cover.