



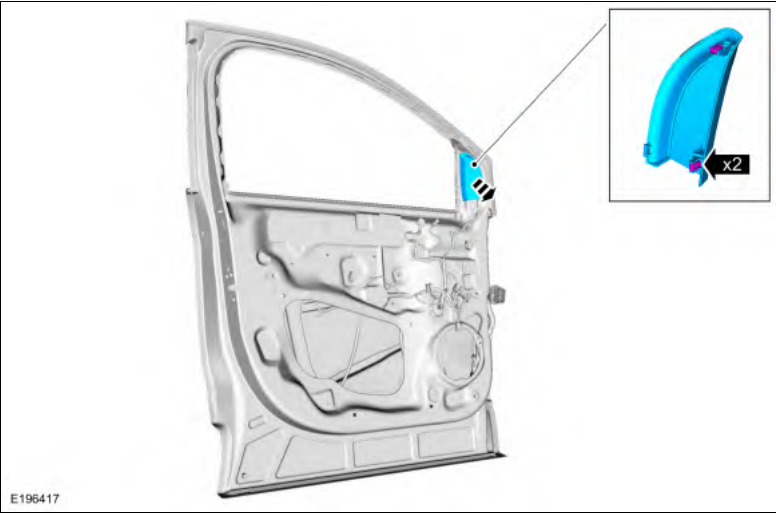


7. Remove the retainer and the inner upper door trim.

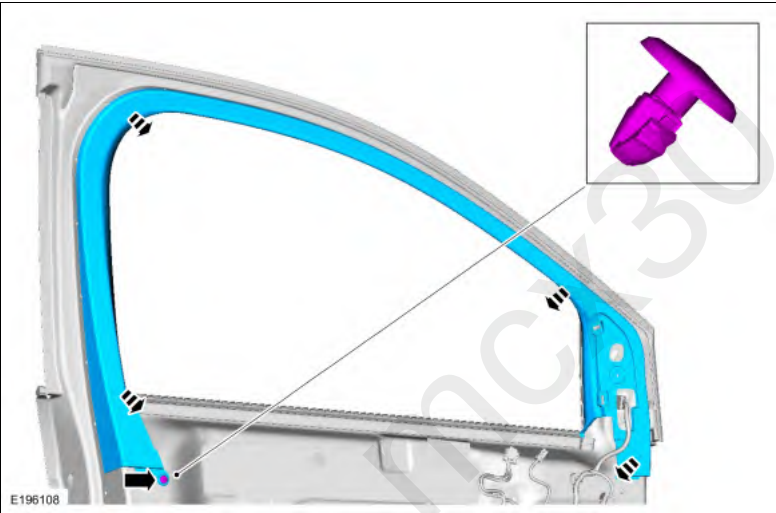

8. Raise the rear door window glass to the one-quarter position.




9. Release the retaining clips from front door window glass.

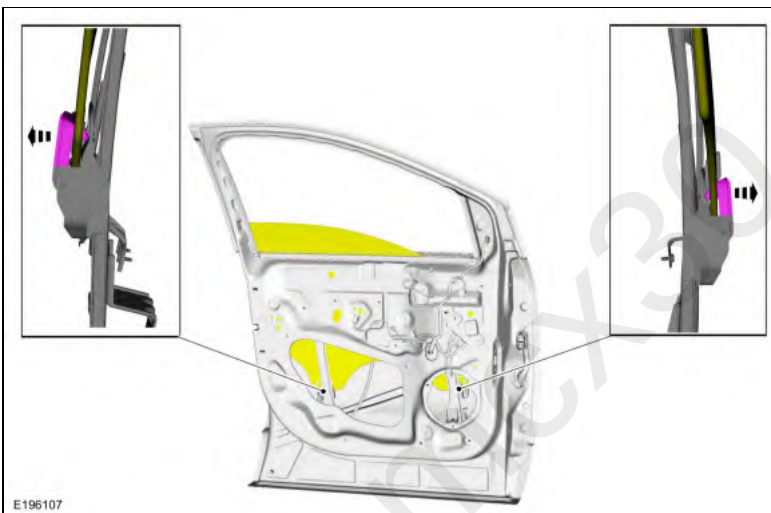

10.

Remove the front door window glass.

1. Rotate the front door window glass 45 degrees clockwise.
2. Remove the front door window glass.

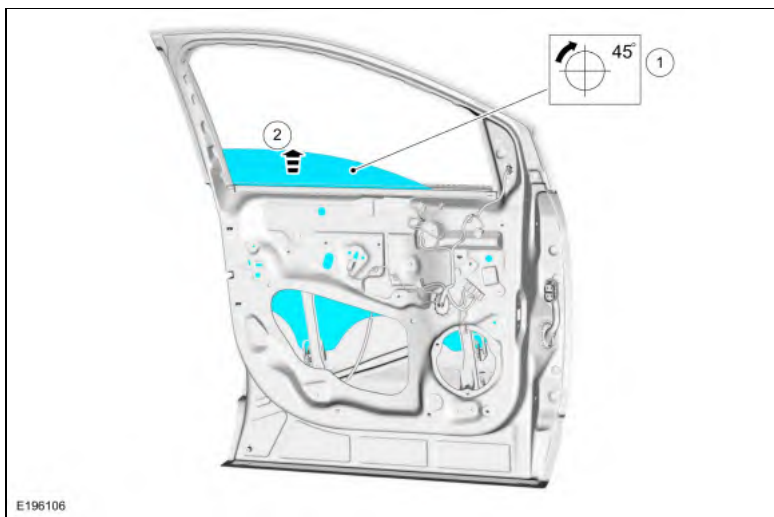

Installation

1. To install, reverse the removal procedure.
2. Carry out the power door window initialization.

Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).

Front Door Window Regulator and Motor


Removal

NOTE: LH side shown, RH side similar.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: For non-functional front door window regulators and motors with the window in the 40 mm open to full closed position, cut the front door window regulator cables to allow window movement.


1. Remove the front door window glass.
Refer to: Front Door Window Glass (501-11 Glass, Frames and Mechanisms, Removal and Installation).
2.
Remove the front door window regulator bolt and nuts.
 1. Disconnect the electrical connector and the position aside the wiring harness.
 2. Remove the nuts and the bolt.
Torque: 93 lb.in (10.5 Nm)

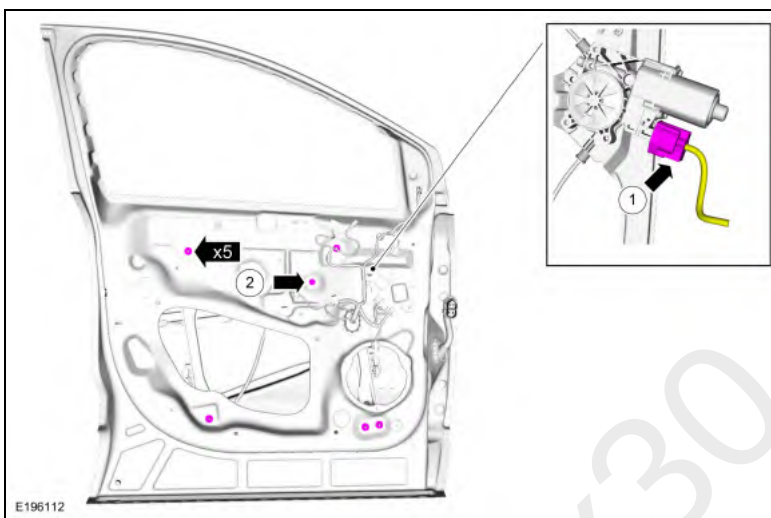

3.
Remove the front door window regulator.
 1. Rotate the front half of the window regulator rearward.
 2. Rotate the rear half of the window regulator forward.
 3. Remove the front door window regulator.

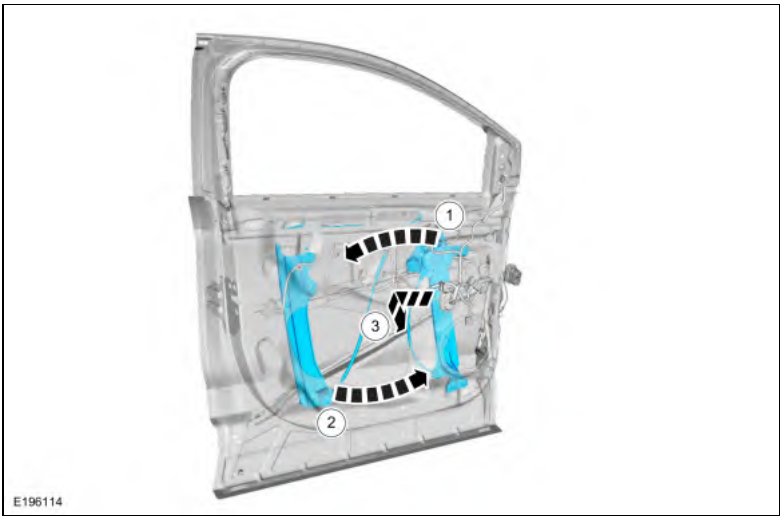

4. **NOTE:** *This step is only necessary when installing a new component.*
- Remove the retainers and the front door window regulator motor.

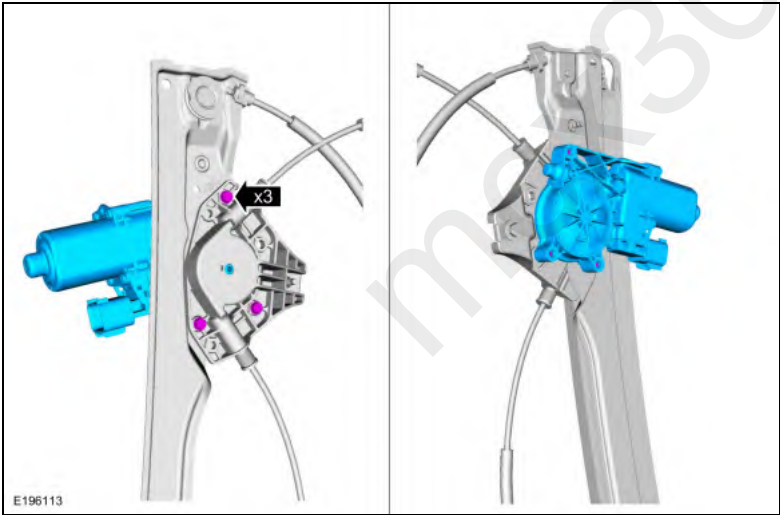

Installation

1. To install, reverse the removal procedure.