

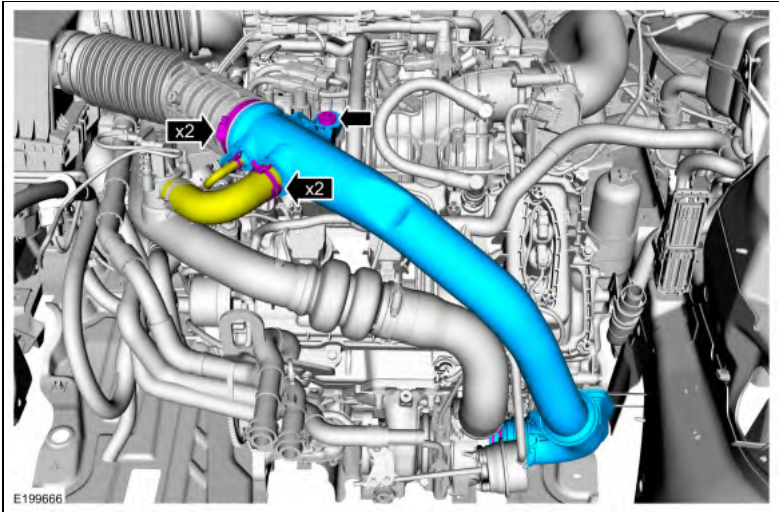


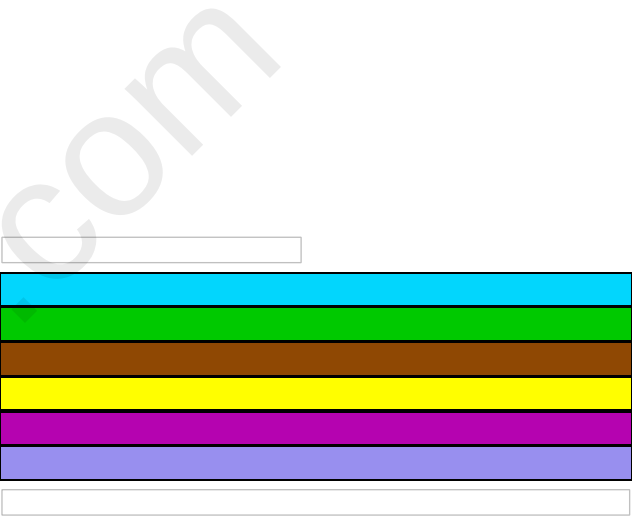



All vehicles

6. **NOTE:** Make sure all openings are sealed.

- Remove the evaporator pipe nut, position flange and pipe aside.
- Remove and discard the O-ring seals.

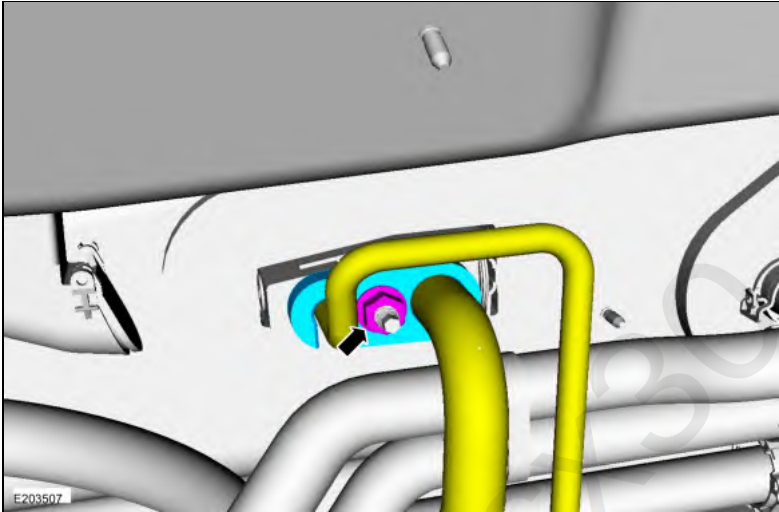

 7. Clamp and disconnect the heater hoses.

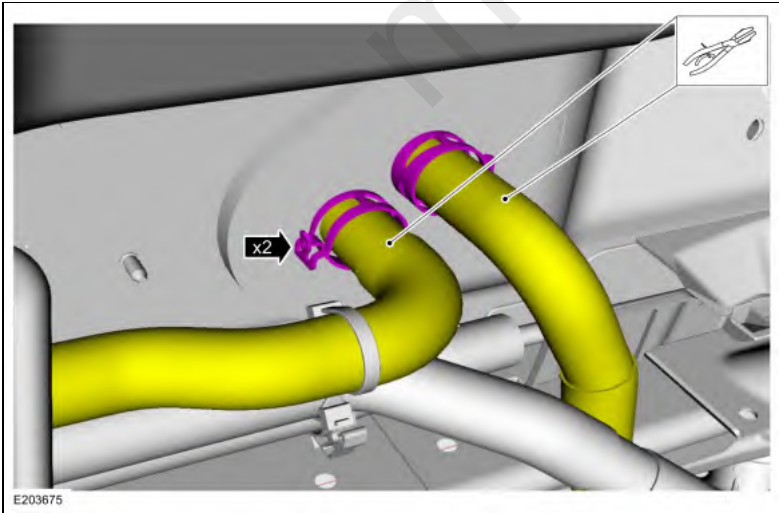

8. Remove the cowl panel grille.