
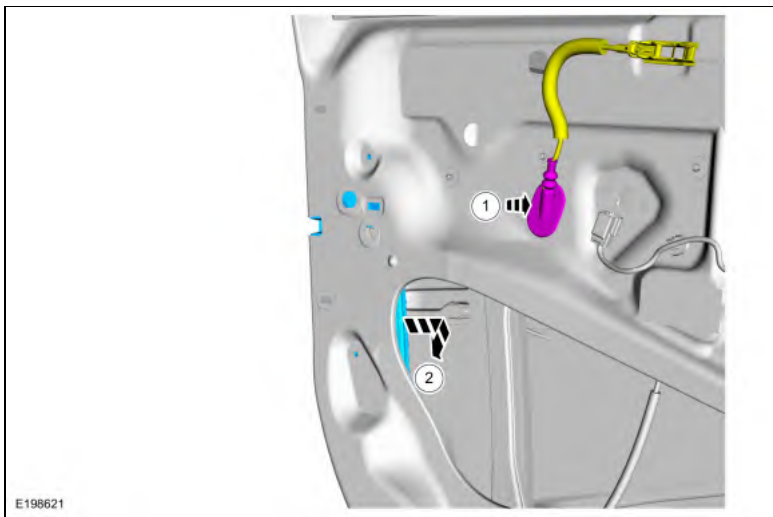


A horizontal bar chart consisting of six equally sized rectangular segments stacked vertically. From top to bottom, the colors are cyan, green, brown, yellow, purple, and light blue. Each segment has a thin black border. A faint, large, light gray watermark is visible across the center of the image, partially obscuring the bar chart.

8. **NOTE:** *This step is only necessary when installing a new component.*

Remove the interior front door handle cable from the front door latch.

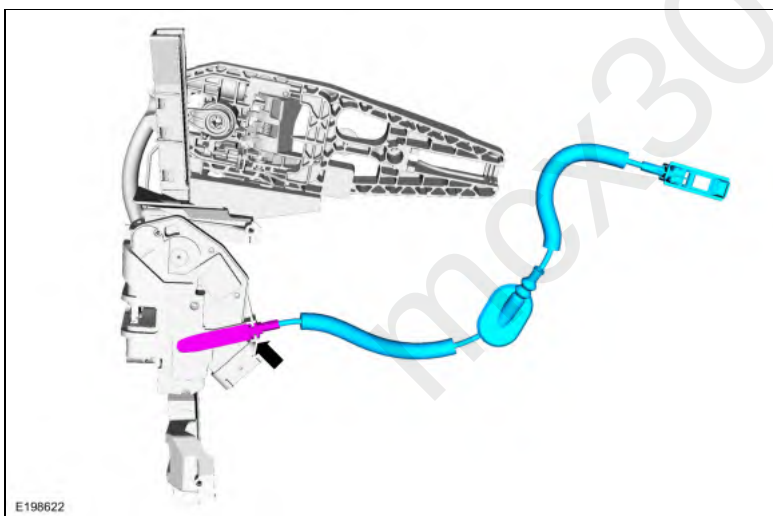


A horizontal bar chart with six bars of equal length, stacked vertically. The bars are colored cyan, green, brown, yellow, purple, and light blue from top to bottom. The chart is set against a white background with a thin black border.

9. **NOTE:** This step is only necessary when installing a new component.

Remove the exterior front door handle reinforcement.


1. Tighten the screw to release the front exterior handle actuation lever tension on the cable.
2. Detach and position aside the cable from the exterior front door handle reinforcement.

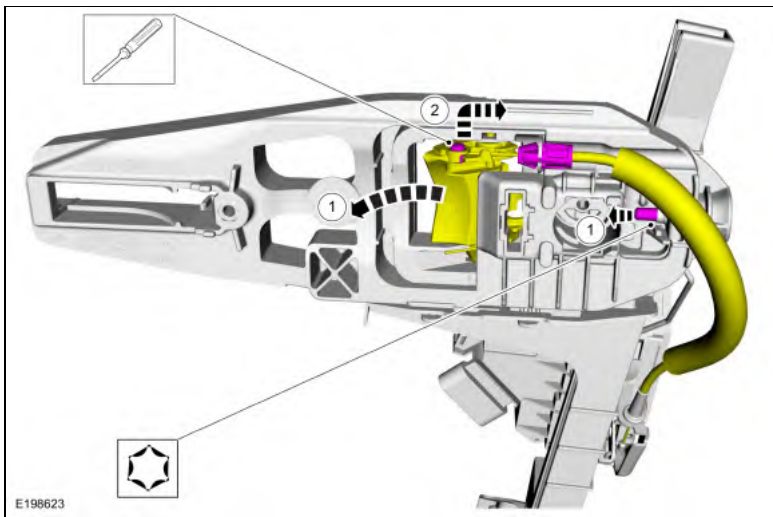

10. **NOTE:** This step is only necessary when installing a new component.

Remove the front door latch.

1. Remove the screws.
2. Detach and position aside the cable from the front door latch.
3. Detach the rod and remove the front door latch.

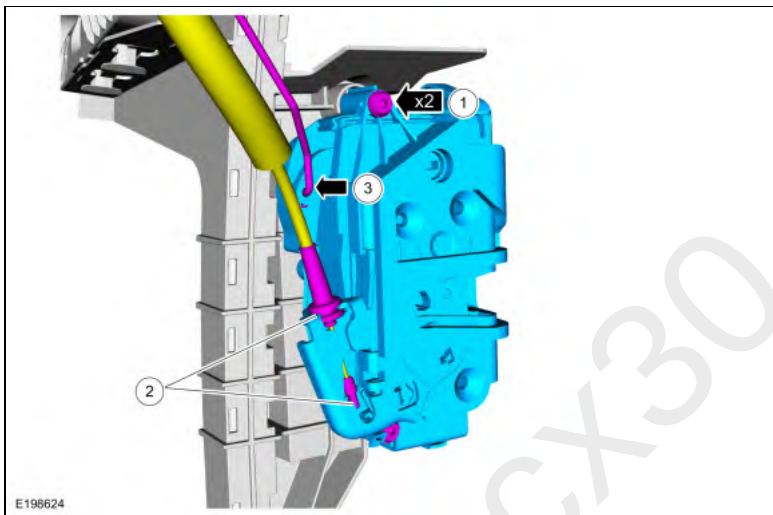


Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.

Install the front door latch.

1. Install the front door latch and the screws.
2. Attach the cable to the front door latch.
3. Attach the rod to the front door latch.

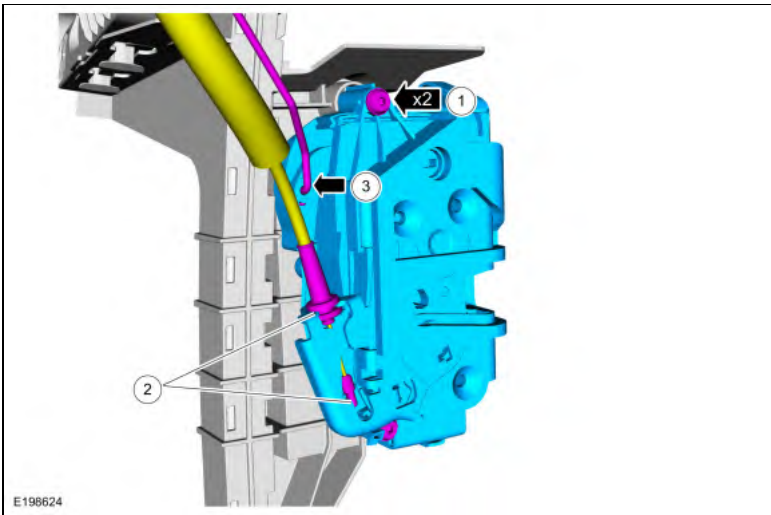


3. **NOTE:** This step is only necessary when installing a new component.

NOTE: This step must be done correctly or the exterior door handle will not engage the lever on installation.


Install the exterior front door handle reinforcement.

1. Install the cable eyelet to the lever.
2. While keeping tension on the cable and holding the handle lever in the engaged position, turn the release screw until the handle lever is positioned against the stop.

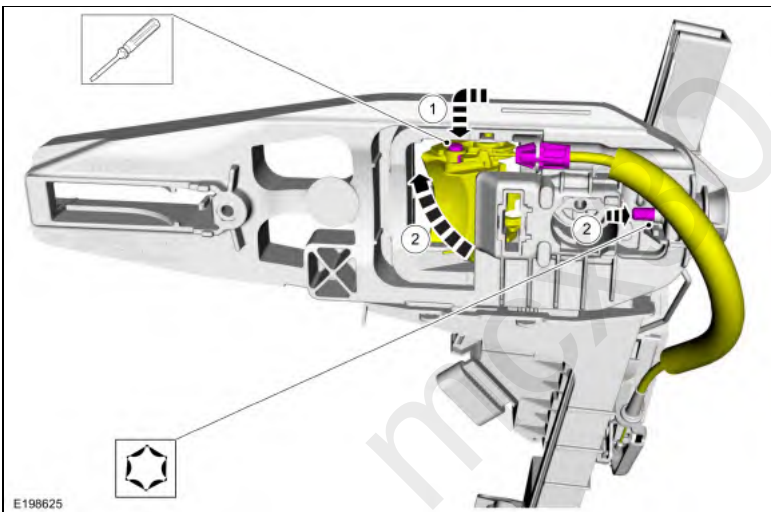

4. **NOTE:** This step is only necessary when installing a new component.

Install the interior front door handle cable to the front door latch.

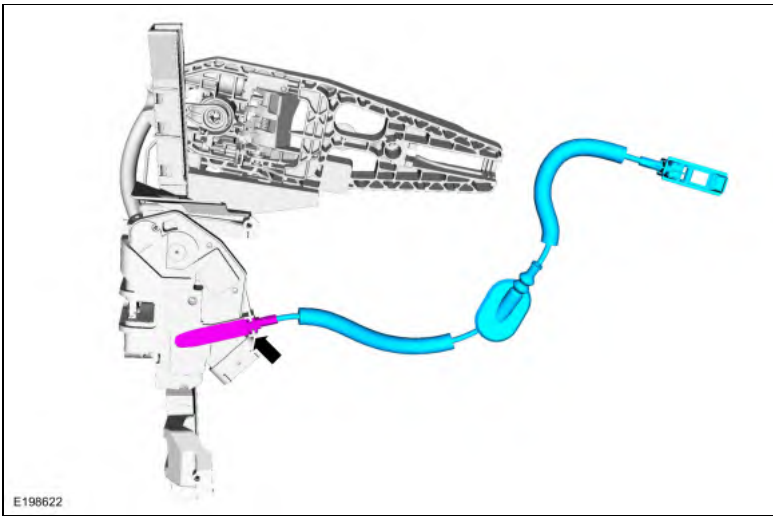

5. If the door is equipped with one touch up/down, perform the power door window initialization.

Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).


mcx30.com

Front Door Lock Control Switch

Removal

NOTE: LH side shown, RH side similar.

1. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2.
Remove the front door lock control switch.
 1. Release the retaining clips.
 2. Remove the front door lock control switch.

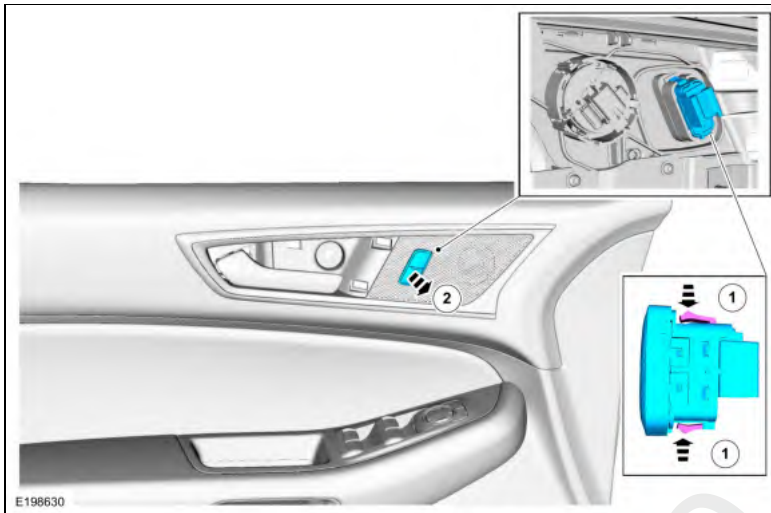


Installation

1. To install, reverse the removal procedure.

Fuel Filler Door Latch

Removal

1. Remove the fuel filler door assembly.
Refer to: Fuel Filler Door Assembly (501-03 Body Closures, Removal and Installation).
2. Release the clips and remove the fuel filler door latch.

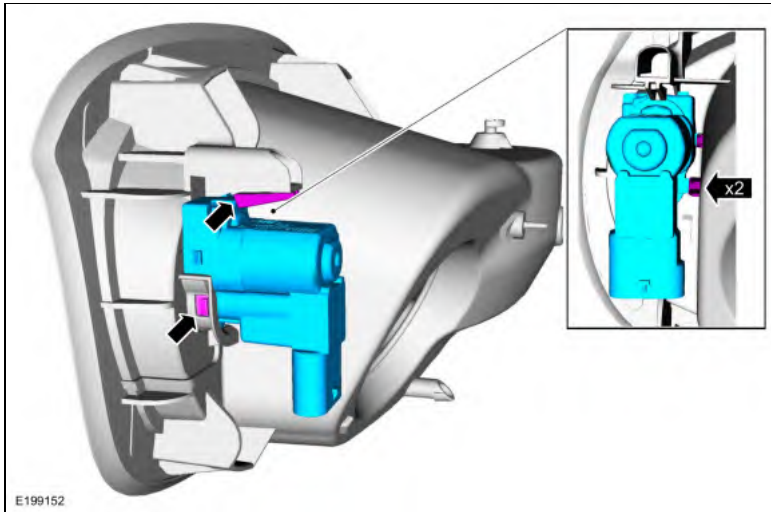

Installation

1. To install, reverse the removal procedure.