


Liftgate Latch


Removal

NOTE: Removal steps in this procedure may contain installation details.

- 1. Remove the liftgate trim panel.
Refer to: Liftgate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
- 2. Disconnect the electrical connector and position aside the wiring harness.

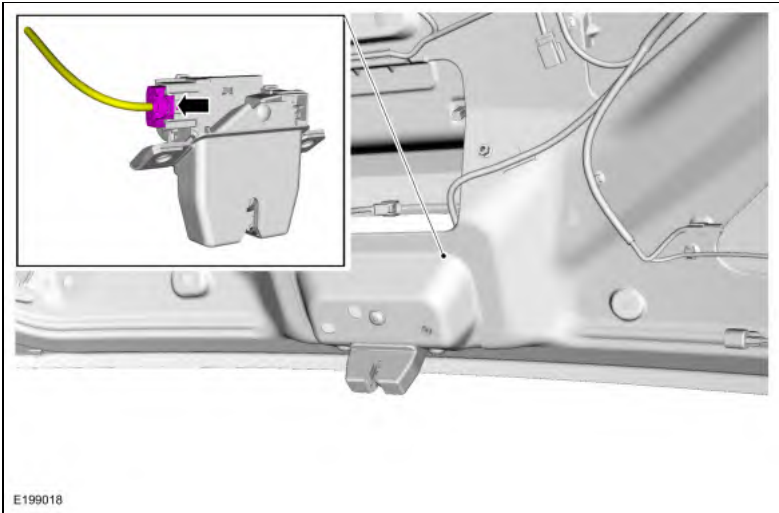

- 3. Remove the bolts and the luggage compartment lid latch.
Torque: 177 lb.in (20 Nm)

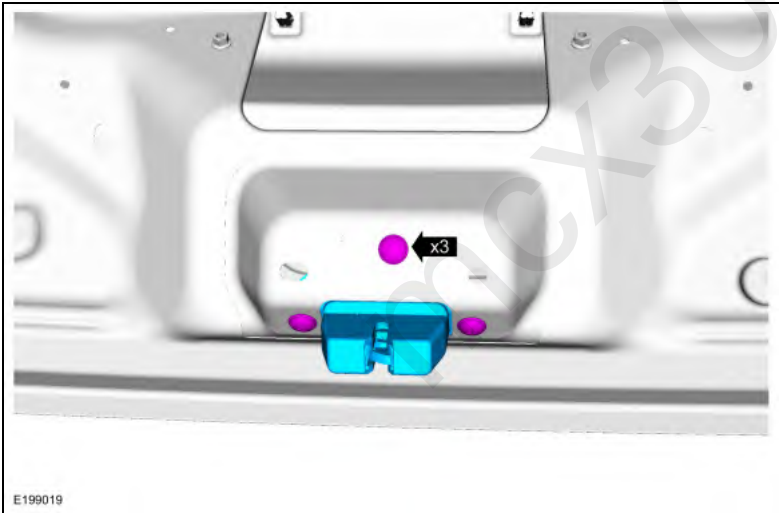

Installation

- 1. To install, reverse the removal procedure.
- 2. If equipped with a power liftgate, perform the power liftgate initialization.
Refer to: Power Liftgate Initialization (501-03 Body Closures, General Procedures).