 



8. **NOTE:** *This step is only necessary when installing a new component.*

Remove the washer pump and the fluid level sensor.

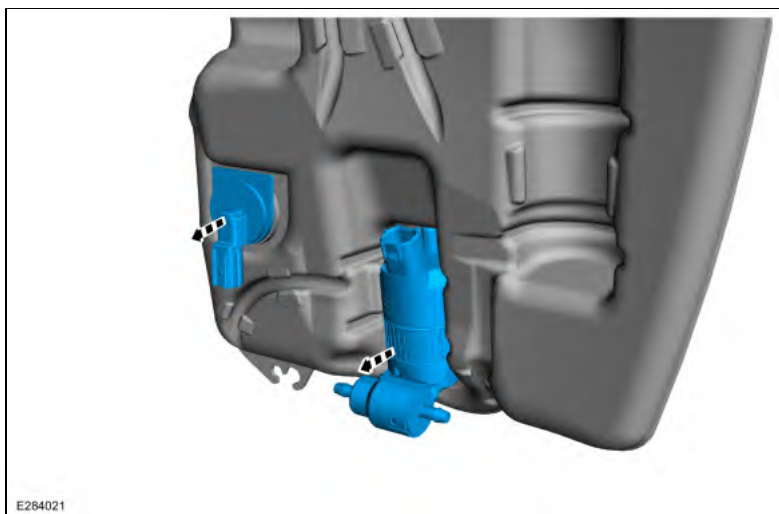

Installation

1. To install, reverse the removal procedure.

mcx30.com

Windshield Wiper Motor


Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH shown, RH similar.

NOTE: Hood removed in this procedure for clarity.

1. Remove the cowl panel.
Refer to: Cowl Panel (501-02 Front End Body Panels, Removal and Installation).
2. Detach the wire harness retainer and disconnect the wiper motor electrical connector.

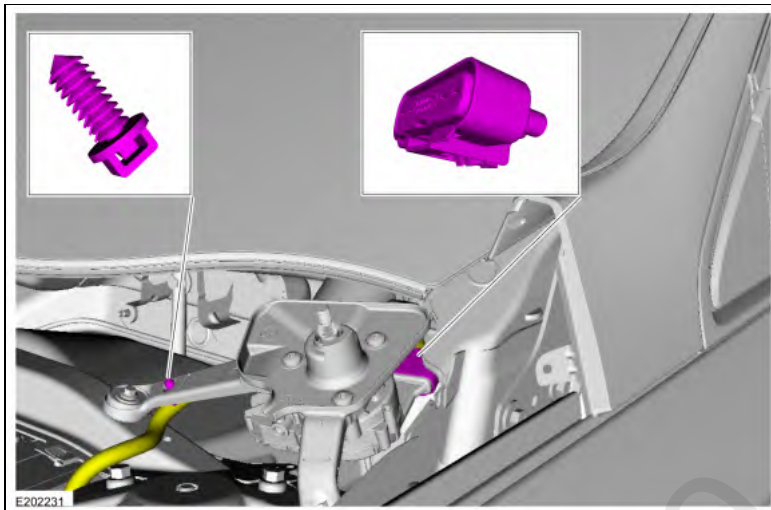


3. Remove the bolts and the windshield wiper motor.
Torque: 62 lb.in (7 Nm)

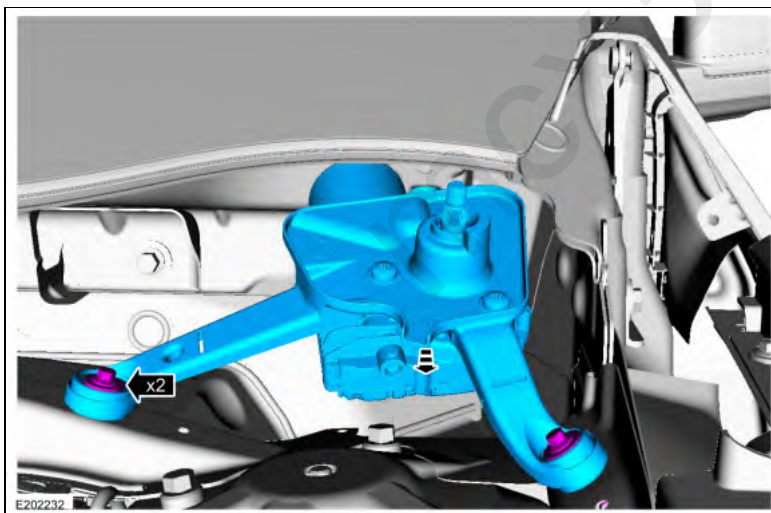

4. **NOTE:** This step is only necessary when installing a new component.

NOTE: This step is only necessary if the wiper motor mount grommet remains in the square locator hole after the wiper motor has been removed.

Remove the wiper motor mount grommet.

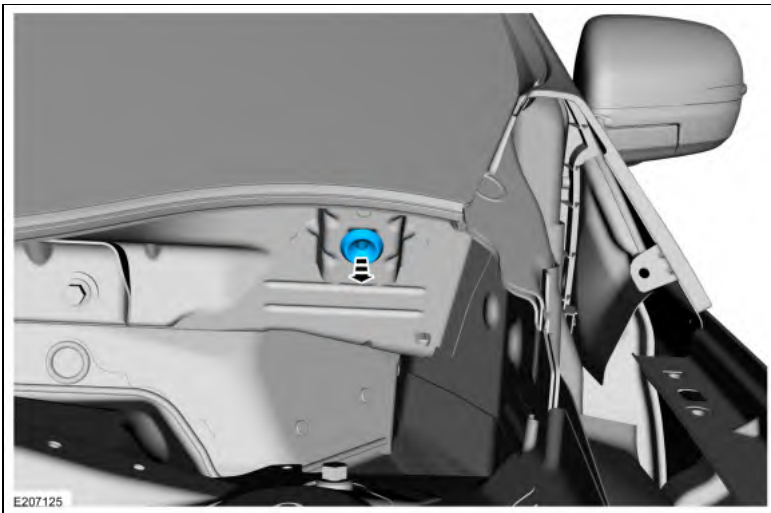

Installation

1. To install, reverse the removal procedure.

mcx30.com