

Rear Bumper Cover


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the outer rear lamp assemblies.
Refer to: Rear Lamp Assembly (417-01 Exterior Lighting, Removal and Installation).
2. Remove the rear wheel and tire assemblies.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
3. On both sides.
Remove the inner wheel liner to rear bumper cover screws.
Torque: 13 lb.in (1.5 Nm)

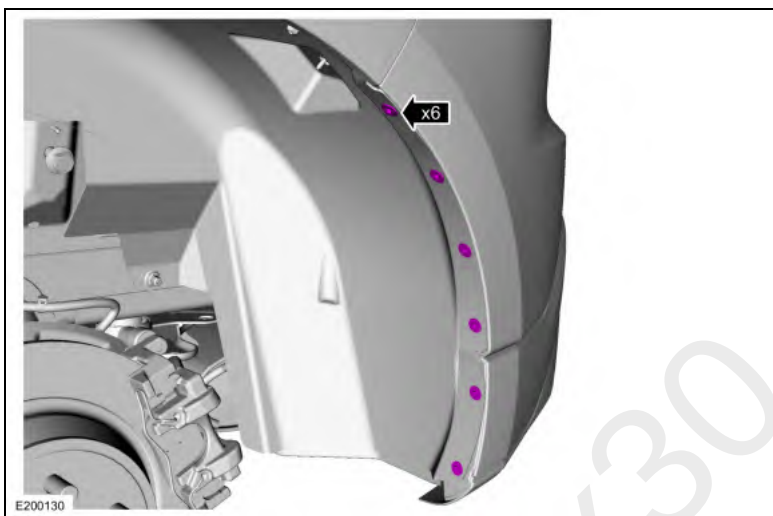

4. If equipped, on both sides.
Remove the screws, the nuts and the rear bumper cover shield.
Torque:
Screw: 13 lb.in (1.5 Nm)
Nut: 22 lb.in (2.5 Nm)

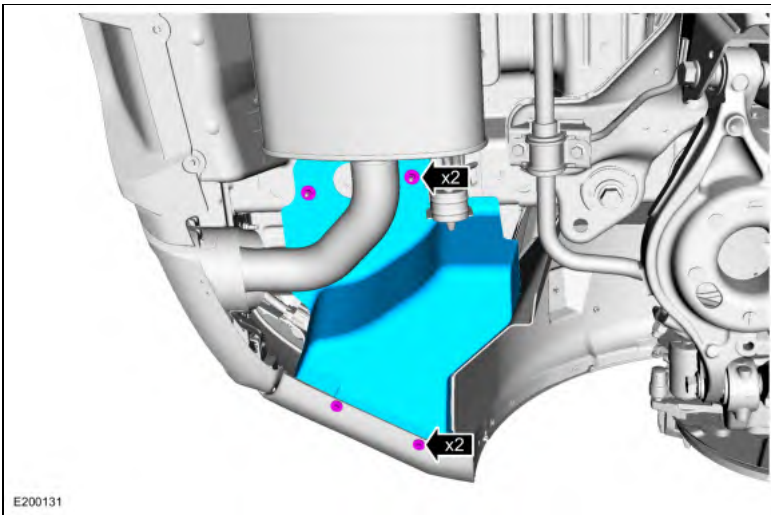

5.
 1. Disconnect the rear bumper cover harness electrical connector.
 2. If equipped.
Disconnect the RH cellular antenna electrical connector.

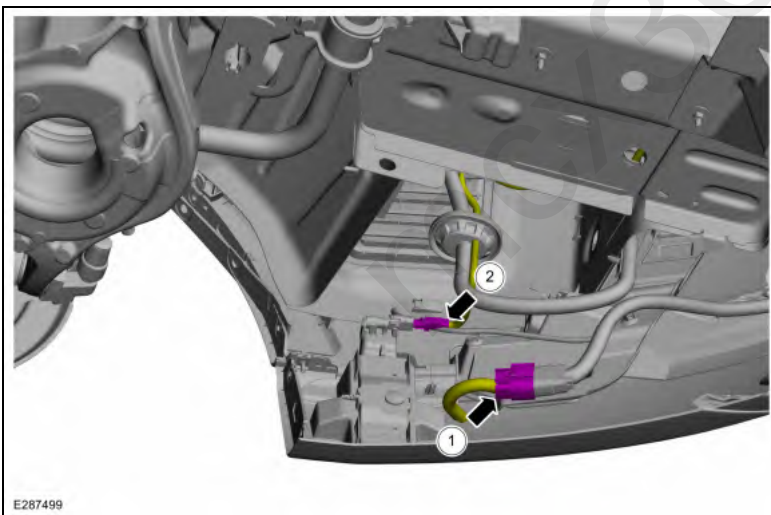

6. If equipped.
Disconnect the LH cellular antenna electrical connector.