



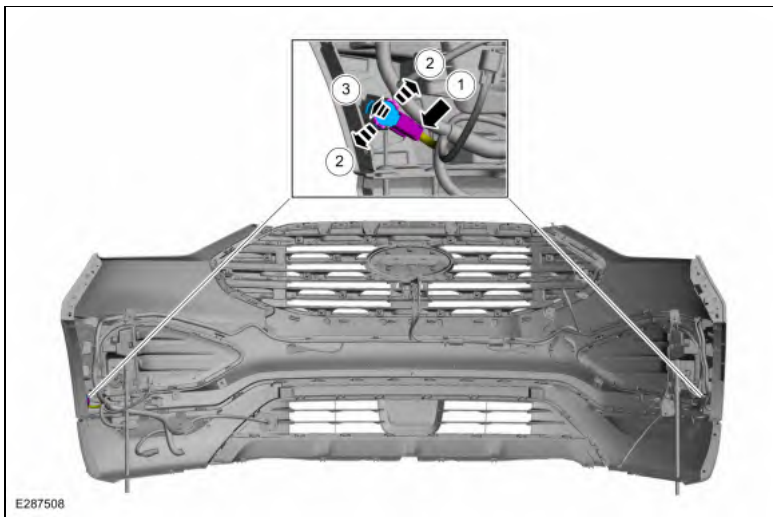

4. If equipped.
Remove the front parking aid sensors.
 1. Disconnect the front parking aid sensor electrical connectors.
 2. Release the tabs.
 3. Remove the front parking aid sensors.

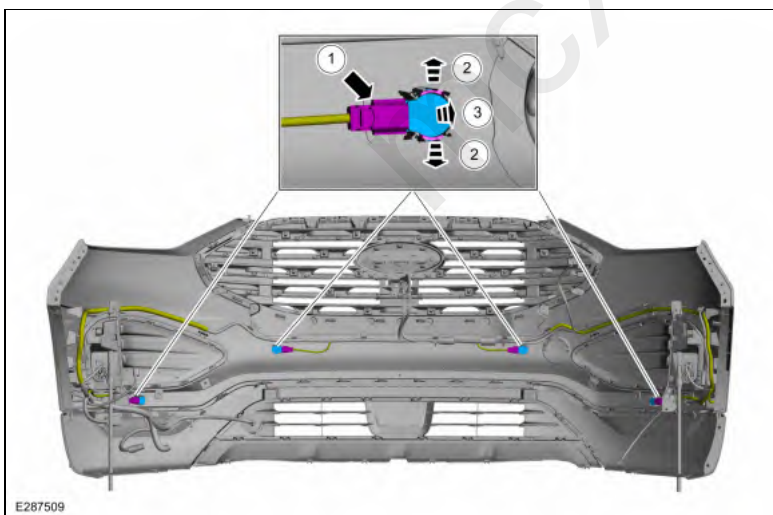

5. On both sides.
Disconnect the fog lamp assembly electrical connector.