



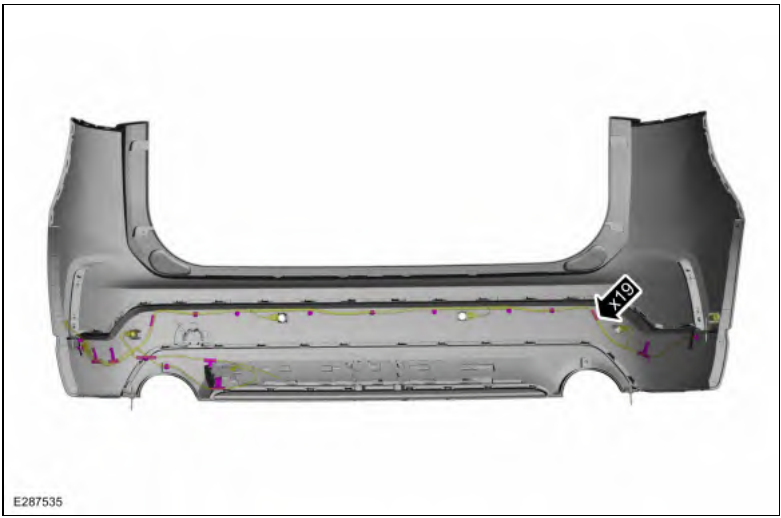


Vehicles equipped with sport package

7. On both sides.
Remove the screws and the exhaust bezels.

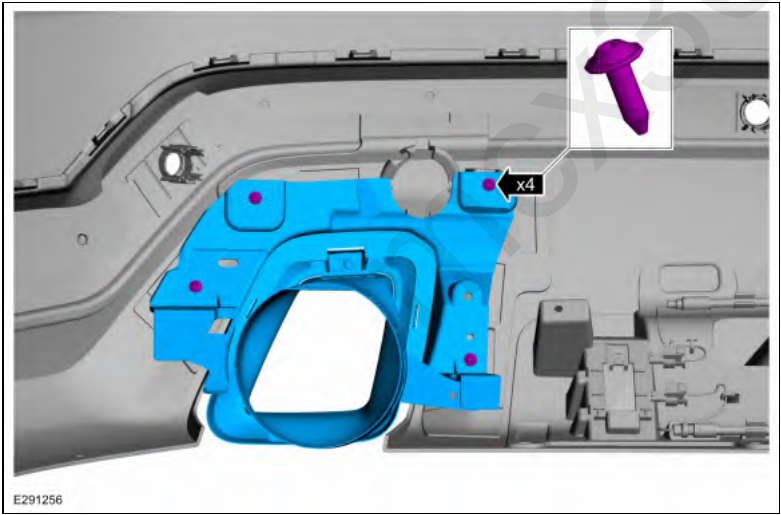


Vehicles equipped with foot operated liftgate

8.
Remove the lower rear bumper cover.
1. Drill the rivets.
 2. Release the tabs.
 3. Separate the lower rear bumper cover from the center rear bumper cover.

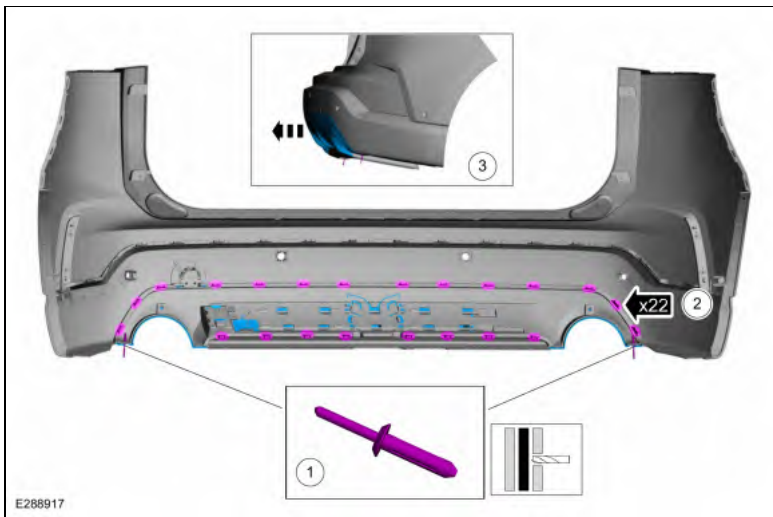


9. Remove the foot operated liftgate antennas.

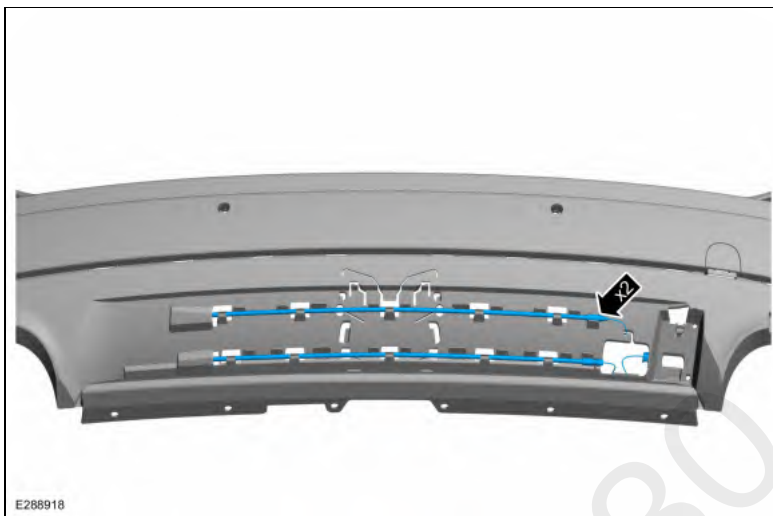


All vehicles

10. On both sides.
Remove the push nuts, release the tabs and remove the rear reflector.

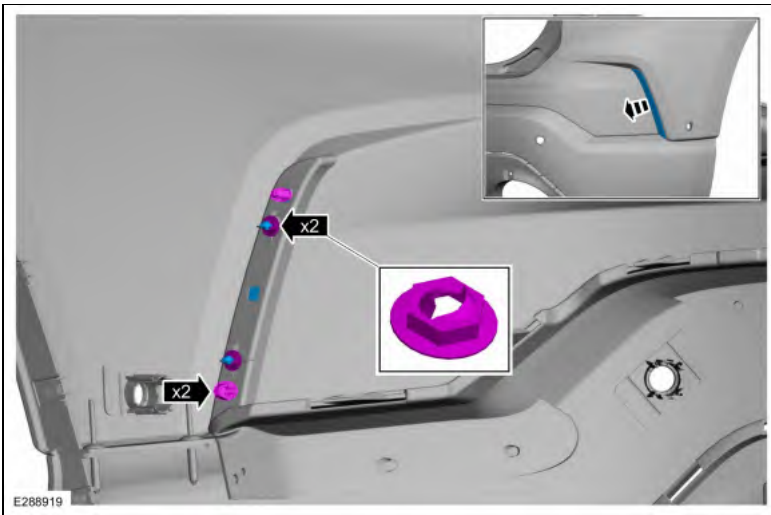


11. If equipped, on both sides.
Release the tab and remove the 4G cellular phone antenna bracket assembly.

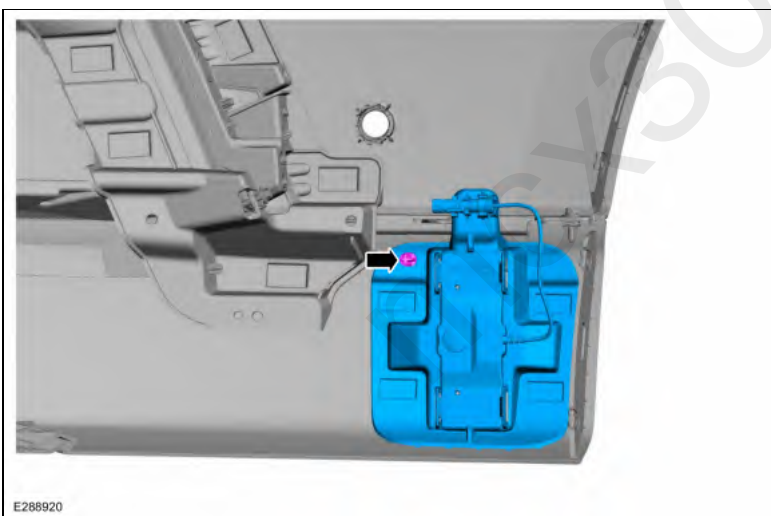


12. If required.
Remove the push pin, release the tabs and remove the 4G cellular phone antenna.



13. If equipped.
Release the tabs and remove the rear tow hook cover.

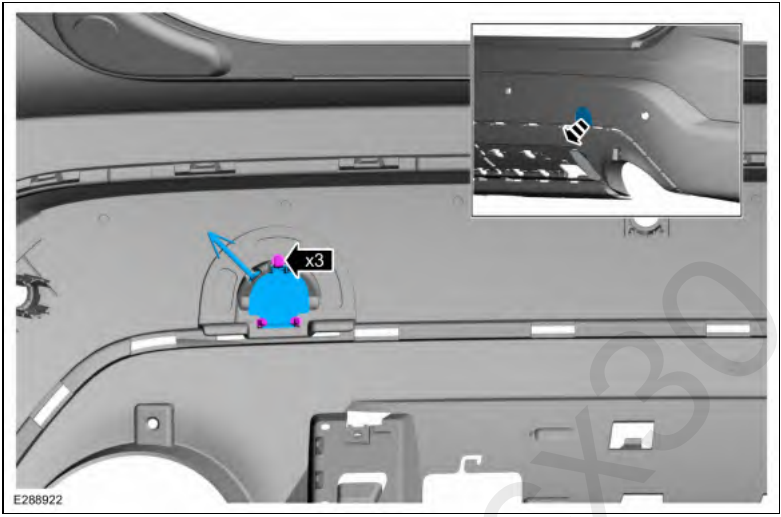

14. Drill the rivets, release the tabs and remove the center rear bumper cover.

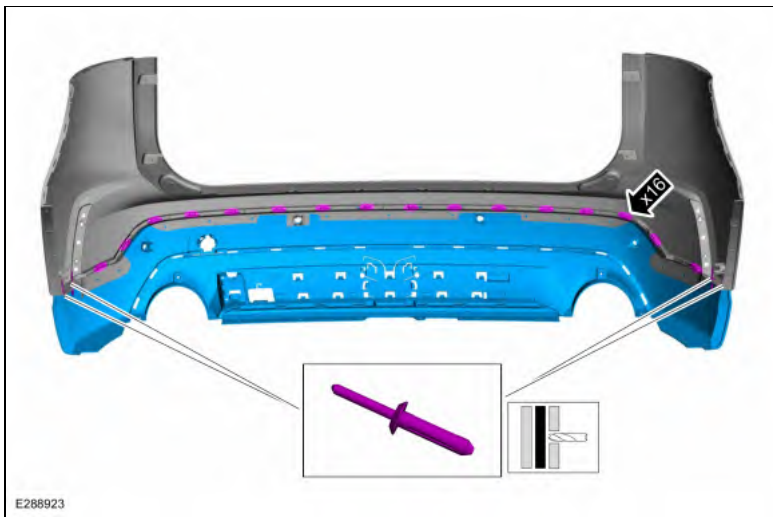

ASSEMBLY

1. To assemble, reverse the disassembly procedure.
2. Carry out the azimuth and elevation system checks.
Refer to: Azimuth System Check (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).
Refer to: Elevation System Check (413-13A Parking Aid - Vehicles With: Rear Parking Aid, General Procedures).
3. If equipped.
Carry out the azimuth system checks.
Refer to: Azimuth System Check (413-13C Parking Aid - Vehicles With: Active Park Assist, General Procedures).
4. If any sensor fails the check, diagnose the sensor fault.
Refer to: Parking Aid (413-13A Parking Aid - Vehicles With: Rear Parking Aid, Diagnosis and Testing).
5. If equipped.
If any sensor fails the check, diagnose the sensor fault.
Refer to: Parking Aid (413-13C Parking Aid - Vehicles With: Active Park Assist, Diagnosis and Testing).

501-20A Seatbelt Systems

Description and Operation