



4.
 1. Slowly feed the seatbelt slack back into the retractor to unlock it.
 2. Slowly extract the seatbelt from the seatbelt retractor. If the seatbelt **does not** extract, proceed to the next step. If the seatbelt **does** extract, proceed to step 8.
5. Remove the fastener and detach the seatbelt anchor or seatbelt anchor and pretensioner. REFER to the appropriate removal and installation procedure in this section.
6.
 1. Slowly feed the seatbelt slack back into the retractor to unlock it.
 2. Slowly extract the seatbelt from the seatbelt retractor. Proceed to the next step.



7.
 - If the seatbelt **does not** extract, install a new seatbelt retractor. Refer to the appropriate seatbelt retractor removal and installation procedure in this section.
 - If the seatbelt **does** extract, install all fasteners that were removed and tighten them to specification. REFER to the appropriate removal and installation procedure.
8. Check the active restraint system for correct operation by carrying out the appropriate functional test.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

Rear seatbelt retractor

NOTE: Typical rear outboard seatbelt retractor shown, other configurations similar.

NOTE: To unlock the seatbelt retractor, only a few millimeters of seatbelt are necessary to retract back onto the seatbelt retractor spool.

9. Slowly pull the seatbelt out as far out as possible.